

Guide to professional digital recorder BENJIE BJ-M23 8 GB

Thank you for what you use the recorder!


- Before using this product, please carefully read the instruction manual to ensure you can use it correctly.
- In the process of preparing this manual we have tried to be accurate, but we cannot be held responsible for this information is that it is true and reliable. If You found bugs, please, please forgive and correct. If you find any problems in the process of using the product, please contact us. Thank you for your cooperation.

Statement

Please use in the process, backup your own data. The company covers the guarantee of the unit itself, but does not guarantee the accuracy and data integrity. The company does not accept any responsibility for the repairs, battery replacement, work with personal data or other incidents caused by the loss or damage to data, and assumes no responsibility for other indirect losses. Also, we can not guarantee full understanding by users of this manual. Thus, the company is not responsible for unexpected events that may occur in the process of operation and management are not responsible for damage caused to third parties and cannot accept any other claims. The device software will occupy some space of internal memory capacity, and a nominal amount will have the difference with the stated - this is normal).

Note:

This device has a function of saving electricity, it is activated after a certain time, if no any operations within a certain period of time. At this point, the display screen will be black. For example, if there are no operations for one minute, the unit will turn off automatically; all functional keys and corresponding functions should work with the running of the display (except the record button) when the device is in "screen Saver", you must first press the function key screen dimming, and then act.

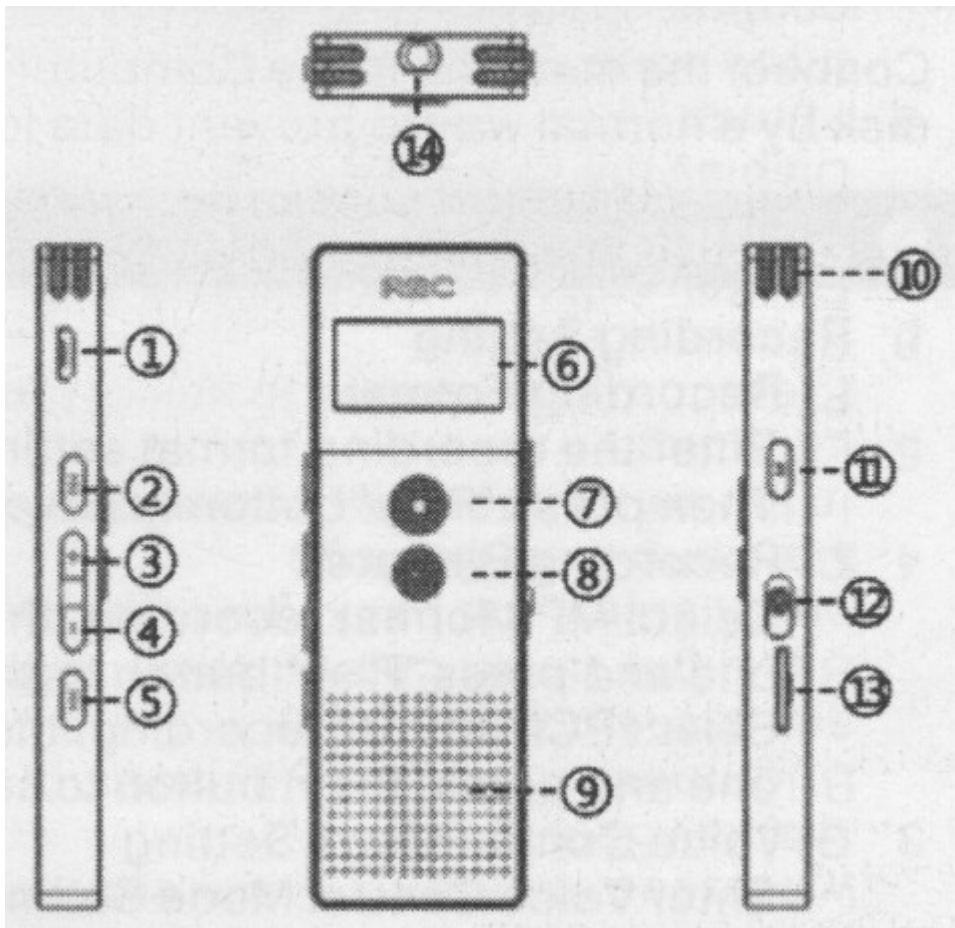

1. USB interface: data transfer / charging.
2. Next key: short time pressing - next track, Long time pressing - fast forward.
3. (+): volume up.
4. (-): volume down.
5. Prev key: short time pressing - last track, long time pressing - fast back.
6. Display.
7. Recording key: press to record, save the recording contents.
8. Mode key: Play / Pause / Set up / Power on / Power off.
9. Speaker.
10. Microphone: recording microphone.
11. Multi-function button: volume button / menu button, when playing; long time pressing - can adjust the volume, when pause; short time pressing - can set up.
12. Power button: power on (long time no using, switch the button to closing position).
13. SD card slot.
14. Earphone jack.

Power On / Power Off

Slide the power switch to the "On" position and the device will automatically boot. If the power switch for a long time is in the "On" position, then boot the device long press the "Play" button. In the loaded state, press and hold the "Play" button for 3 seconds to turn off the recorder - such a disconnect operation has memory function breakpoint. To turn off the recorder, You can also slide the switch right to the Off position. If you are not using the device for a long time, please slide the power switch in the "Off" position to save battery from discharge.

Recording / Save Recording contents

Depending on model, pressing the "Record" button, the recorder starts recording, the recording interface will give appropriate advice on the record. To pause or continue recording, short press the "Play" button.

Save the recording: in recording status, click on the "Record" button, the recorder will automatically save the current record file in record type * * * .MP3 (WAV) for playback of the current file press "Play" button.

File Delete

To remove a single file: to select music file or recording file, press "V" button to delete the file directly. You can also select "Delete all" or "Delete" and then click the "Play" button, click "Last" (Next) to select "Yes" or "No". Select "Yes" and press the "Play" button to confirm the deletion. Select "No" and press the "Play" button to exit the delete mode. When deleting files, do not power off the recorder forcibly, otherwise it may cause damage to the file system.

Play / Pause

To play a recording or music playback, press the Play button to begin playback, press again to pause playback. During playback, press and hold "M" button (Menu) to display the playback options (short press "M" may display to the previous menu).

1. Click on the "Play" button to enter the sound setting mode, EQ select to enter the sound settings (music, classic, jazz, hip-hop, funk, rock).
2. In playback mode, long press "M" button to enter cyclic mode of playback including single composition, all files, or three ways of playing).
3. Click "Play" to enter the mode variable speed playback. In this mode, adjustable playback speed between + 0 (normal play) to fast, without changing tone, you can also decrease the playback speed without changing the pitch.
4. Click "Play" to enter the repeat settings there are three options: "repeat Mode", "Frequency of retry" and "retry Interval".

1) For repeat mode, you must enter the settings of playback in the playback state and press "M" button, then click "Last" ("Next") to select "Repeat menu" ("Menu repeat"), and then select "Repeat mode" ("repeat Mode"), press the "Play" button to confirm the action. Return to the player interface, there You can see "AB" in the lower left corner. The symbol "A" will be blinking, make a short press on "Next" to confirm the action, the Character "a" will stop flashing and the symbol "B" will flash as long as you set the start time of the playback. Then click "Next" ("Next"), character "B" will stop flashing, the icons "A-B" appears, the endpoint will be installed. The device will play between intervals "A" and "b" repeatedly. Everything will return to normal when the set time is reached, playback and symbols "A-B" will disappear automatically.

2) Repeat Frequency

In playback state, press "M" button to enter the setup mode playing, press the "Previous / Next" (Next / Previous) to select the repeat options, and then select the "Repeat frequency" ("repetition"), then click "Play" to confirm, then press "+" or "-" to adjust the number of repeats. Snooze can be set between 1-10. Click "Play" to confirm.

3) Repeat Interval

In playback state, press "M" button to enter the setup mode playback, press Previous / Next button to select the repeat options, and then select "repetition Interval", then press "Play" button to confirm, press "+" or "-" button to set the repeat interval. It can be set between 1-10. Click "Play" to confirm.

Change Song

In playing, press Previous / Next to switch tracks.

Volume Adjust

Able to play music or play a recording file, press "+" or "-", the LCD display will display number, press "+" or "-" to adjust volume up or down. Click the "Play" button to save the volume settings.

Connect PC

Connect the machine to the computer using USB cable, select "data Transfer and charging". Please unmount the removable disk using "safely remove hardware and eject media" on the computer to prevent data loss.

Setting

Recording Setting

Recording Format

Go to the settings of recording format, select the format of MP3 or PCM by pressing the buttons Previous / Next. Then click "Play" to save and exit.

Recording Bit Rate

Select the recording format is MP3, there are three options: 32kbps - 128kbps (higher is better, but takes more space), select one and click "Play" to save and exit.

Select the recording format PCM, there are four options: 512kbps - 1536KBPS (higher is better, but takes more space), select one and click "Play" to save and exit.

Settings voice control

Log in to the settings in the voice Mode control and select "On" or "Off", then press "Play" button to confirm and exit.

Monitor settings

Sign in monitor settings, select "On" or "Off", then press "Play" button to confirm and exit.

Off on time

Select settings menu off Timer and press "Play" button to log in. Select "Off" to deactivate this function. Select "On" and no matter what time you took from 1 to 99, the device will be forced off when it reaches the off time. Press the "+" or "-" to set time, then press the "Play" button to confirm and save.

Setup screen

Brightness

Go to display Settings, select Brightness, press the button to enter and adjust the brightness using the buttons "+" / "-" , then click "Play" to confirm.

The backlight timer

Go to display Settings, select backlight Timer, press the "Play" button to enter, select the off time of the backlight with the buttons Previous / Next then click "Play" to confirm.

Set the date and time

In the settings menu using the buttons Previous / Next, select date and time then click "Play" to enter the menu and set the date and time using the buttons Previous / Next and "+" and "-" , then click "Play" to confirm.

Language

In the settings menu, using the buttons Previous / Next to select Language, then press the "Play" button, next buttons Previous / Next select the desired language, then click "Play" to confirm.

View the version and date of software

In the settings menu, using the buttons Previous / Next, select Information then press the "Play" button.

Memory capacity

In the settings menu, using the buttons Previous / Next, select Information, press the "Play" button, then use buttons Next / Previous, select the menu item Free space on the drive and click the "Play" button.

Formatting a memory card

If you need to format the recorder in the settings menu, using the buttons PREV / Next, select Format device, then click the "Play" button and select "Yes" or "No", then press "Play" button to confirm the action. Please use this function carefully, as you then will not be able to recover the data.

Reset to factory settings

If you mix up some of the settings in use, it is possible to restore factory default settings, it is necessary to enter in the settings menu and buttons Previous / Next to select Factory setting, then press the "Play" button. The recorder will start restoring factory default settings.

Charging

When the display shows low battery, please charge the recorder using the USB cable connecting the recorder to a computer or charger. Avoid strong discharge of the battery. Not super cool and not overheat the recorder.

Specification

Size: 86 mm * 21mm * 10mm

LCD: OLED 128*64

USB interface: USB2.0 HIGH SPEED

Memory: 8 GB (extended memory)

Battery: built-in 260mA \ h Li-battery

OS: Window98 or above

SIN: 88DB

Distortion: 0.05%

Recording format: MP3/WAV

Recording quality: WAV: 512 - 1536 KBPS (PCM format), MP3: (32 64 128 kbps)

Earphone output: stereo earphone, 32 Ohm, frequency: 20HZ-20KH

Music format: MP3/WMA/WAV/APE or FLAC

Using temperature: 5 degree - 40 degree.