 
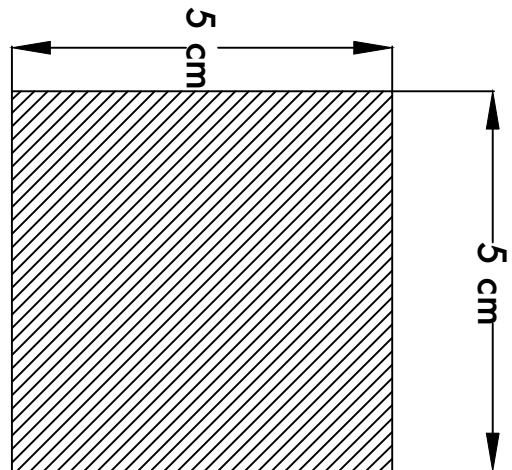 



18,2 cm

Test Page

Select A4 in the paper size printing menu
Choose "actual size" in the printing preferences
Make sure these dimensions are correct
before starting your pattern

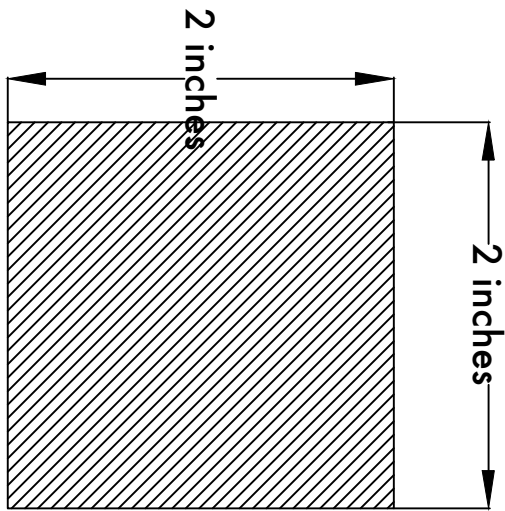

 7,17 inches

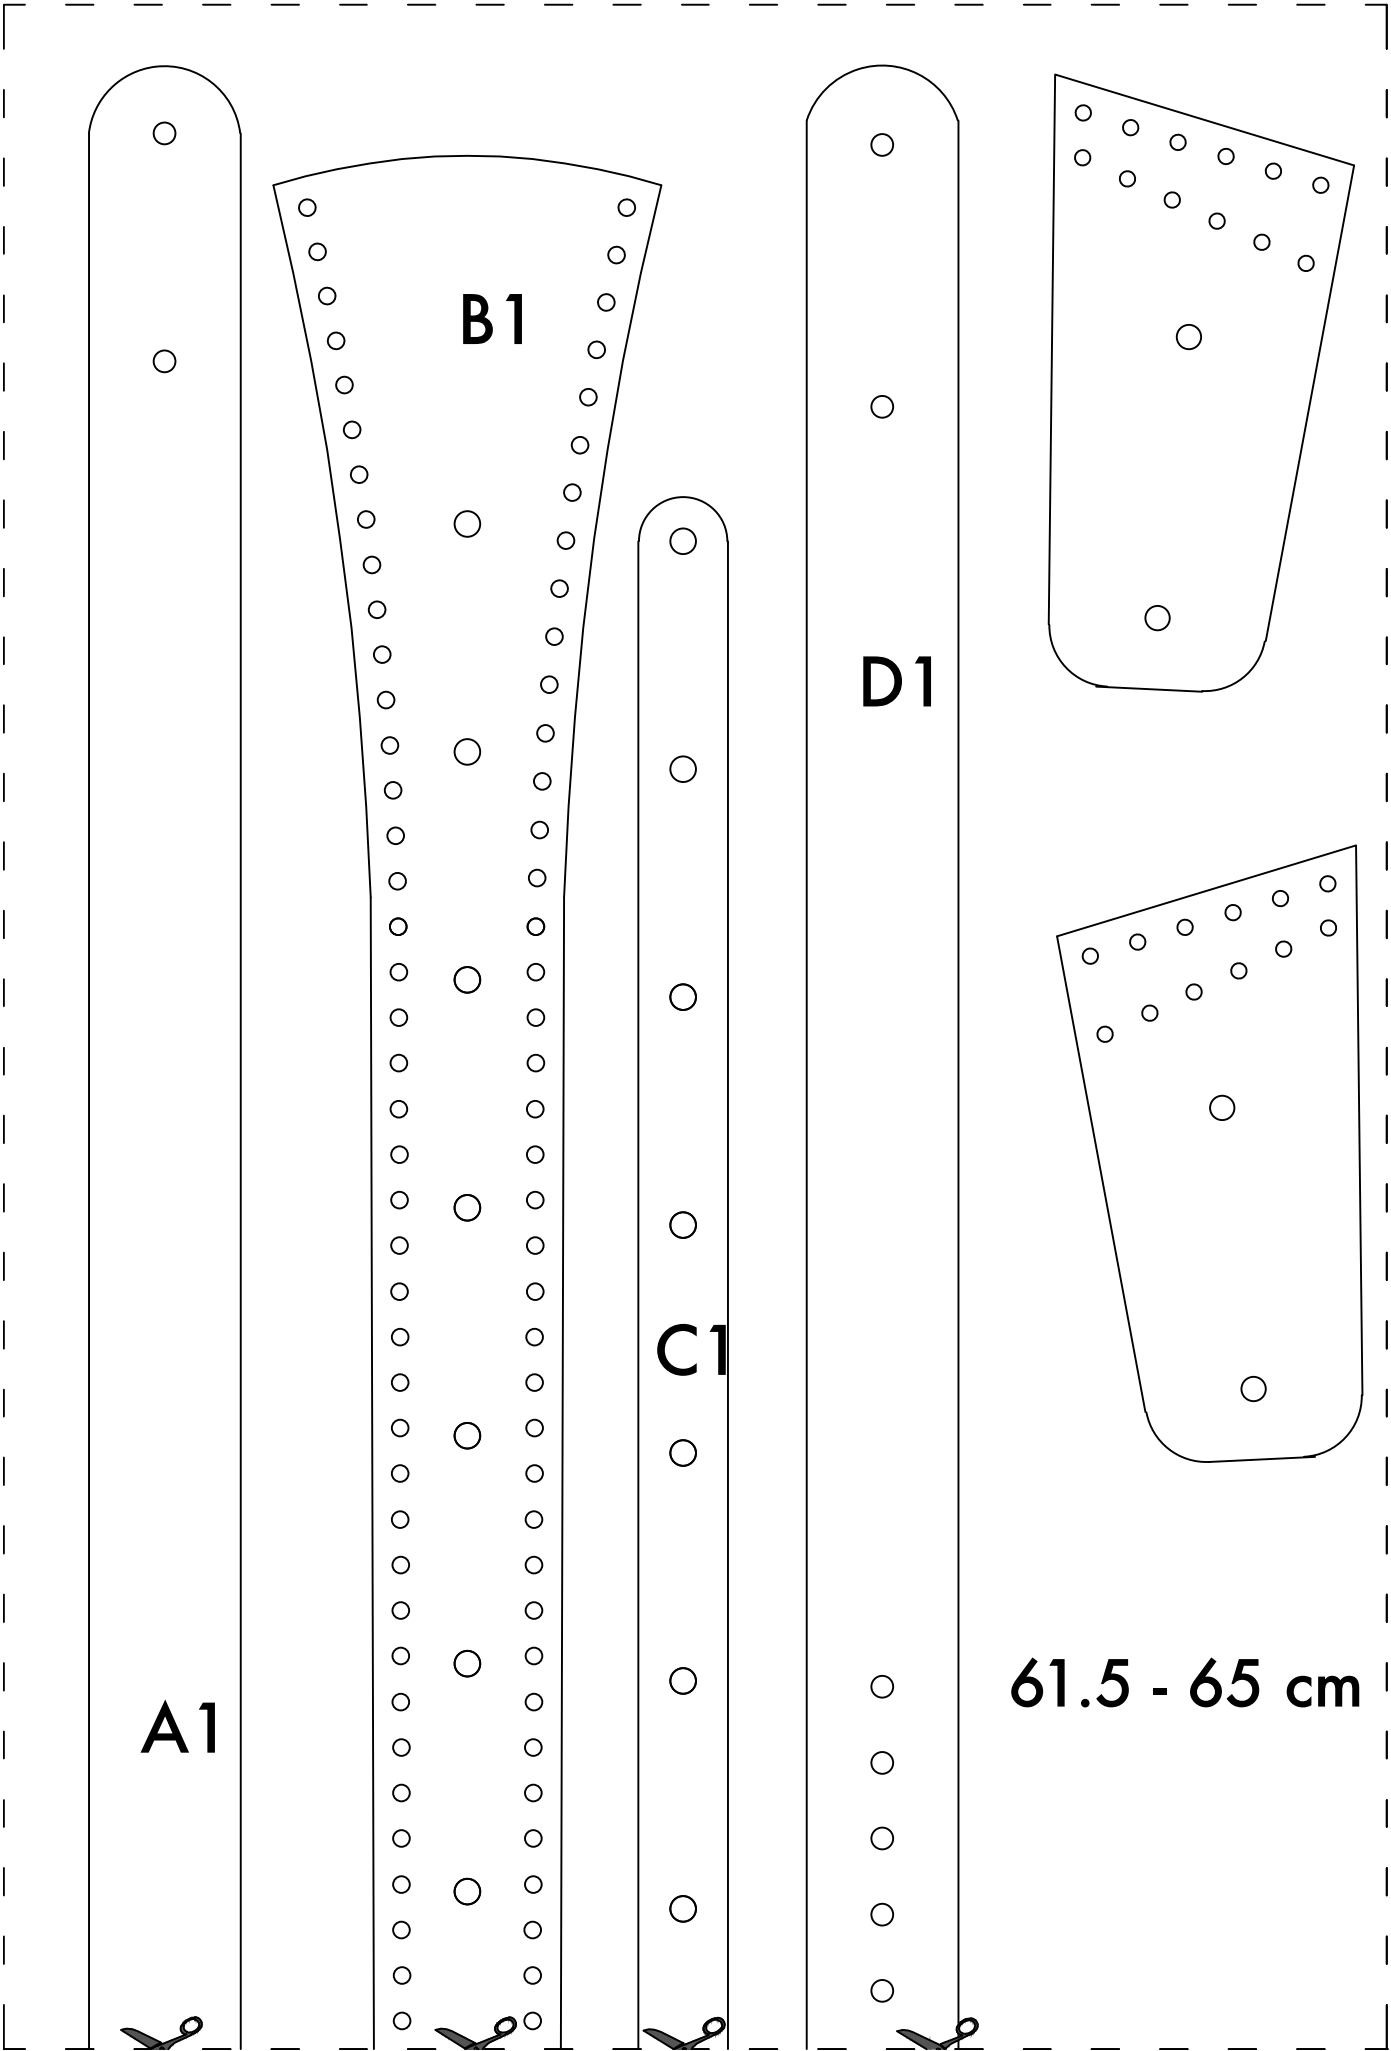

A2



B2



 
C2



D2






61.5 - 65 cm

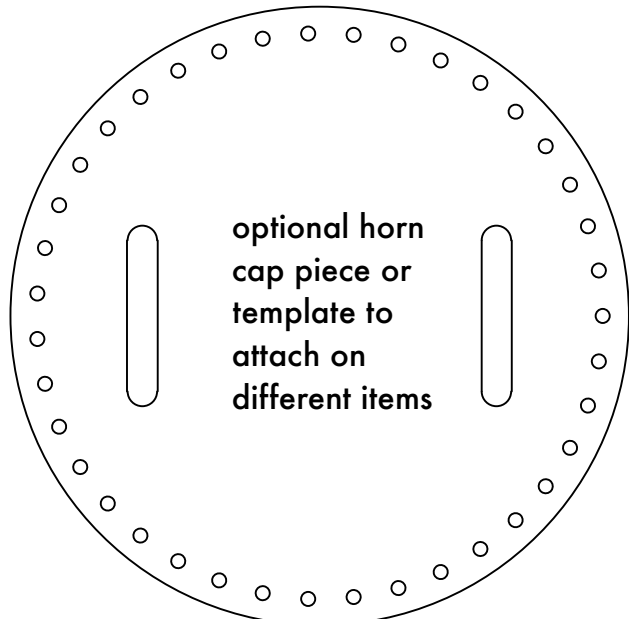



optional horn
cap piece or
template to
attach on
different items



   
A3

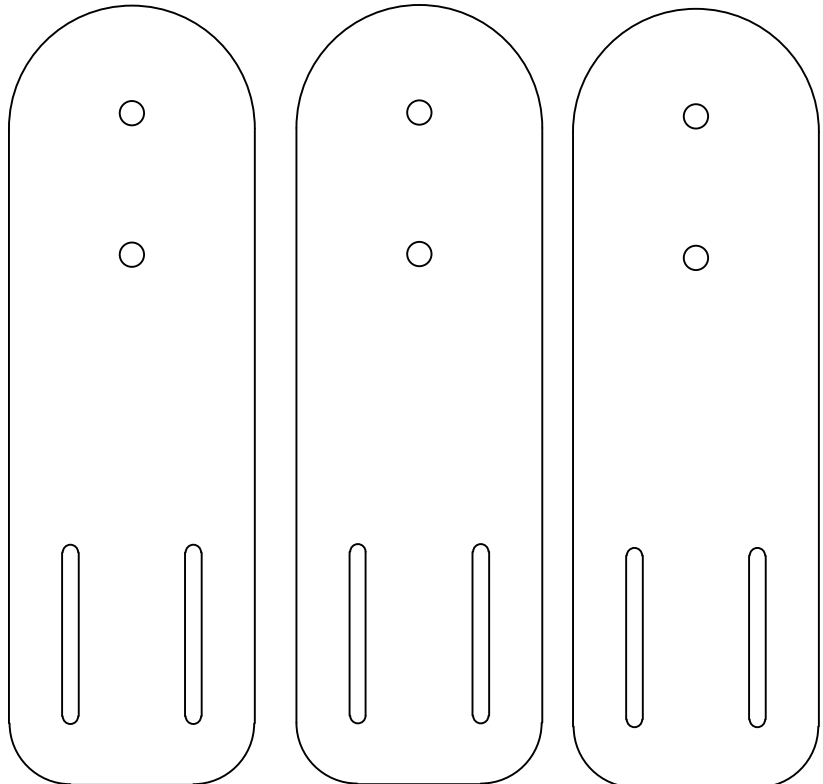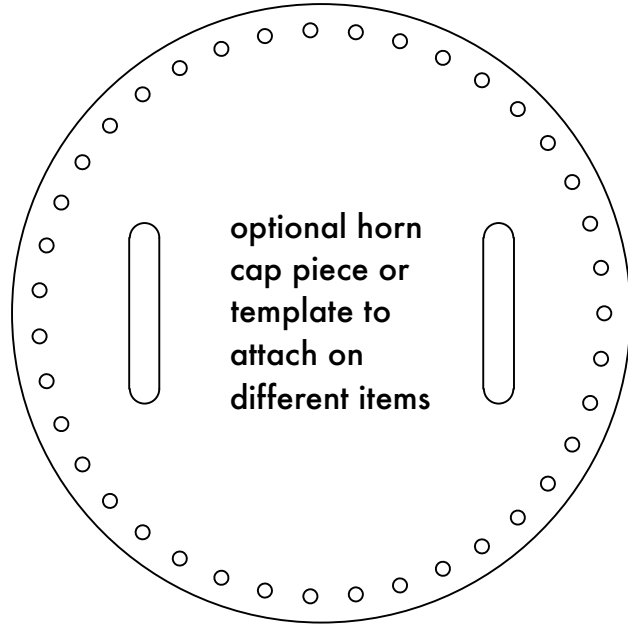


  61.5 - 65 cm

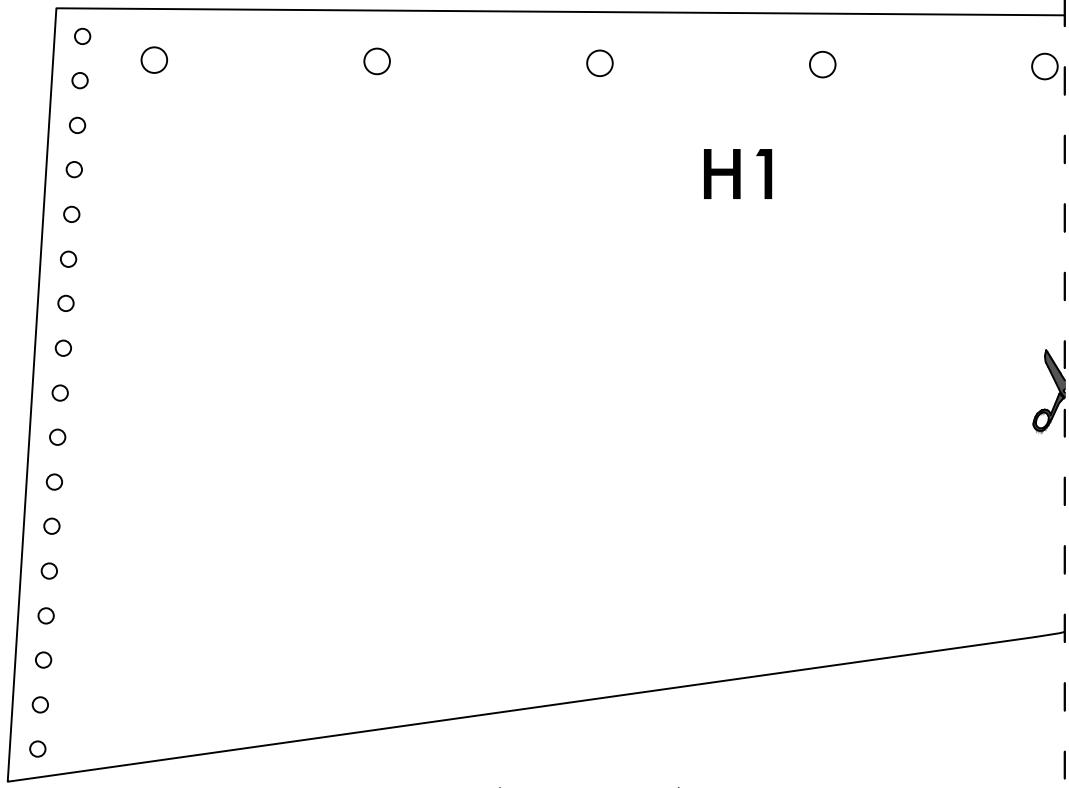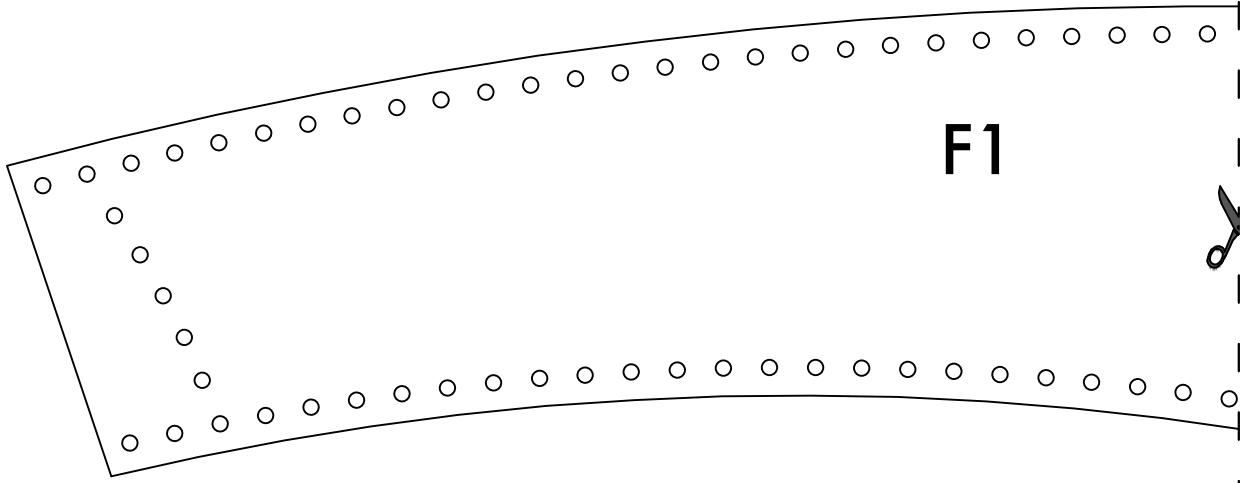

  61.5 - 65 cm

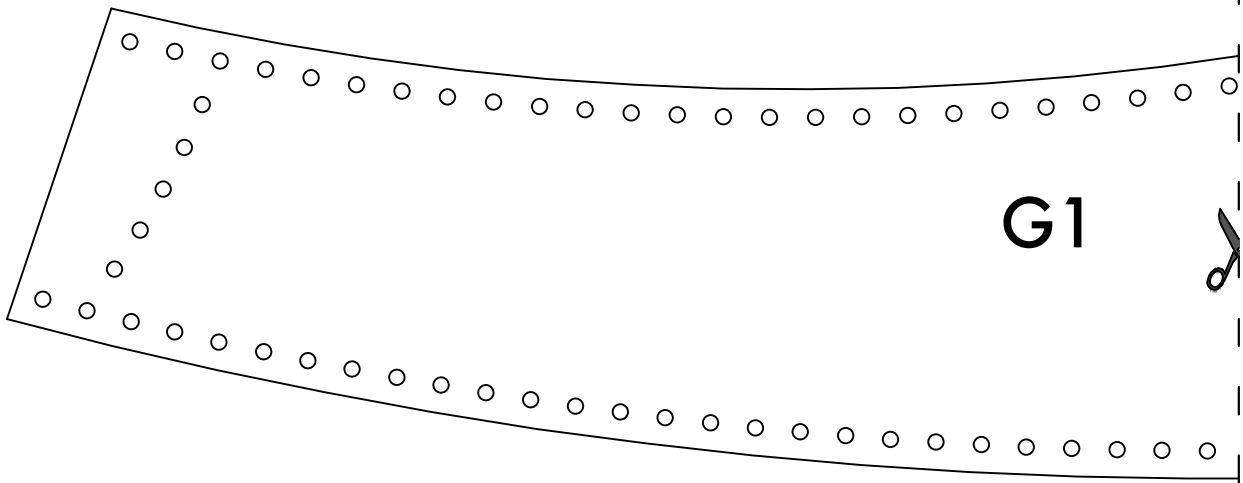

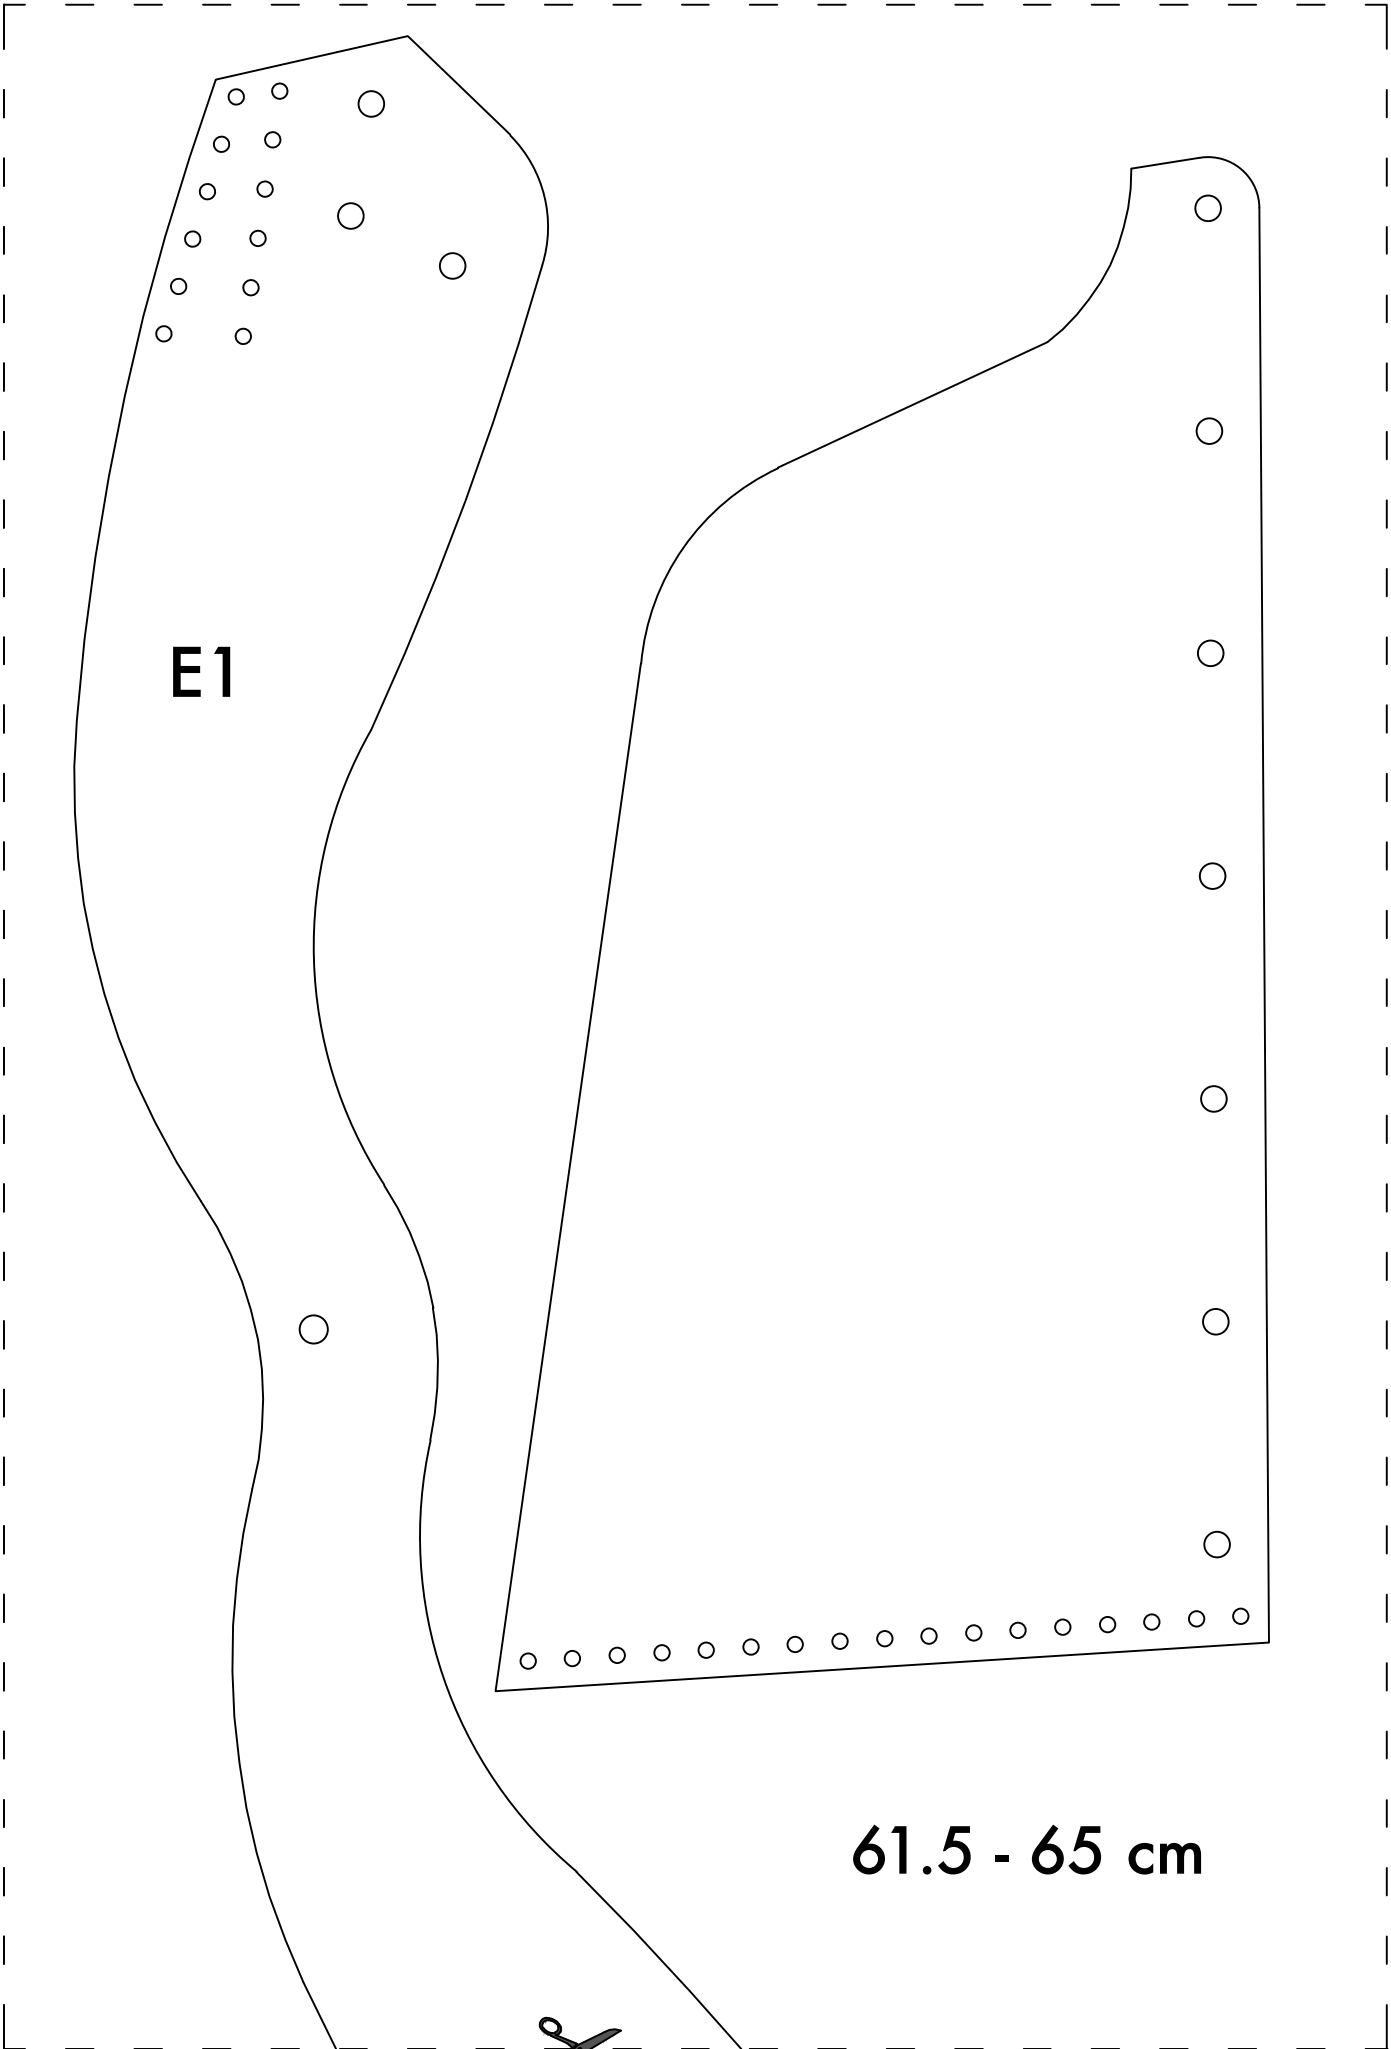


E1

61.5 - 65 cm




E1

 61.5 - 65 cm

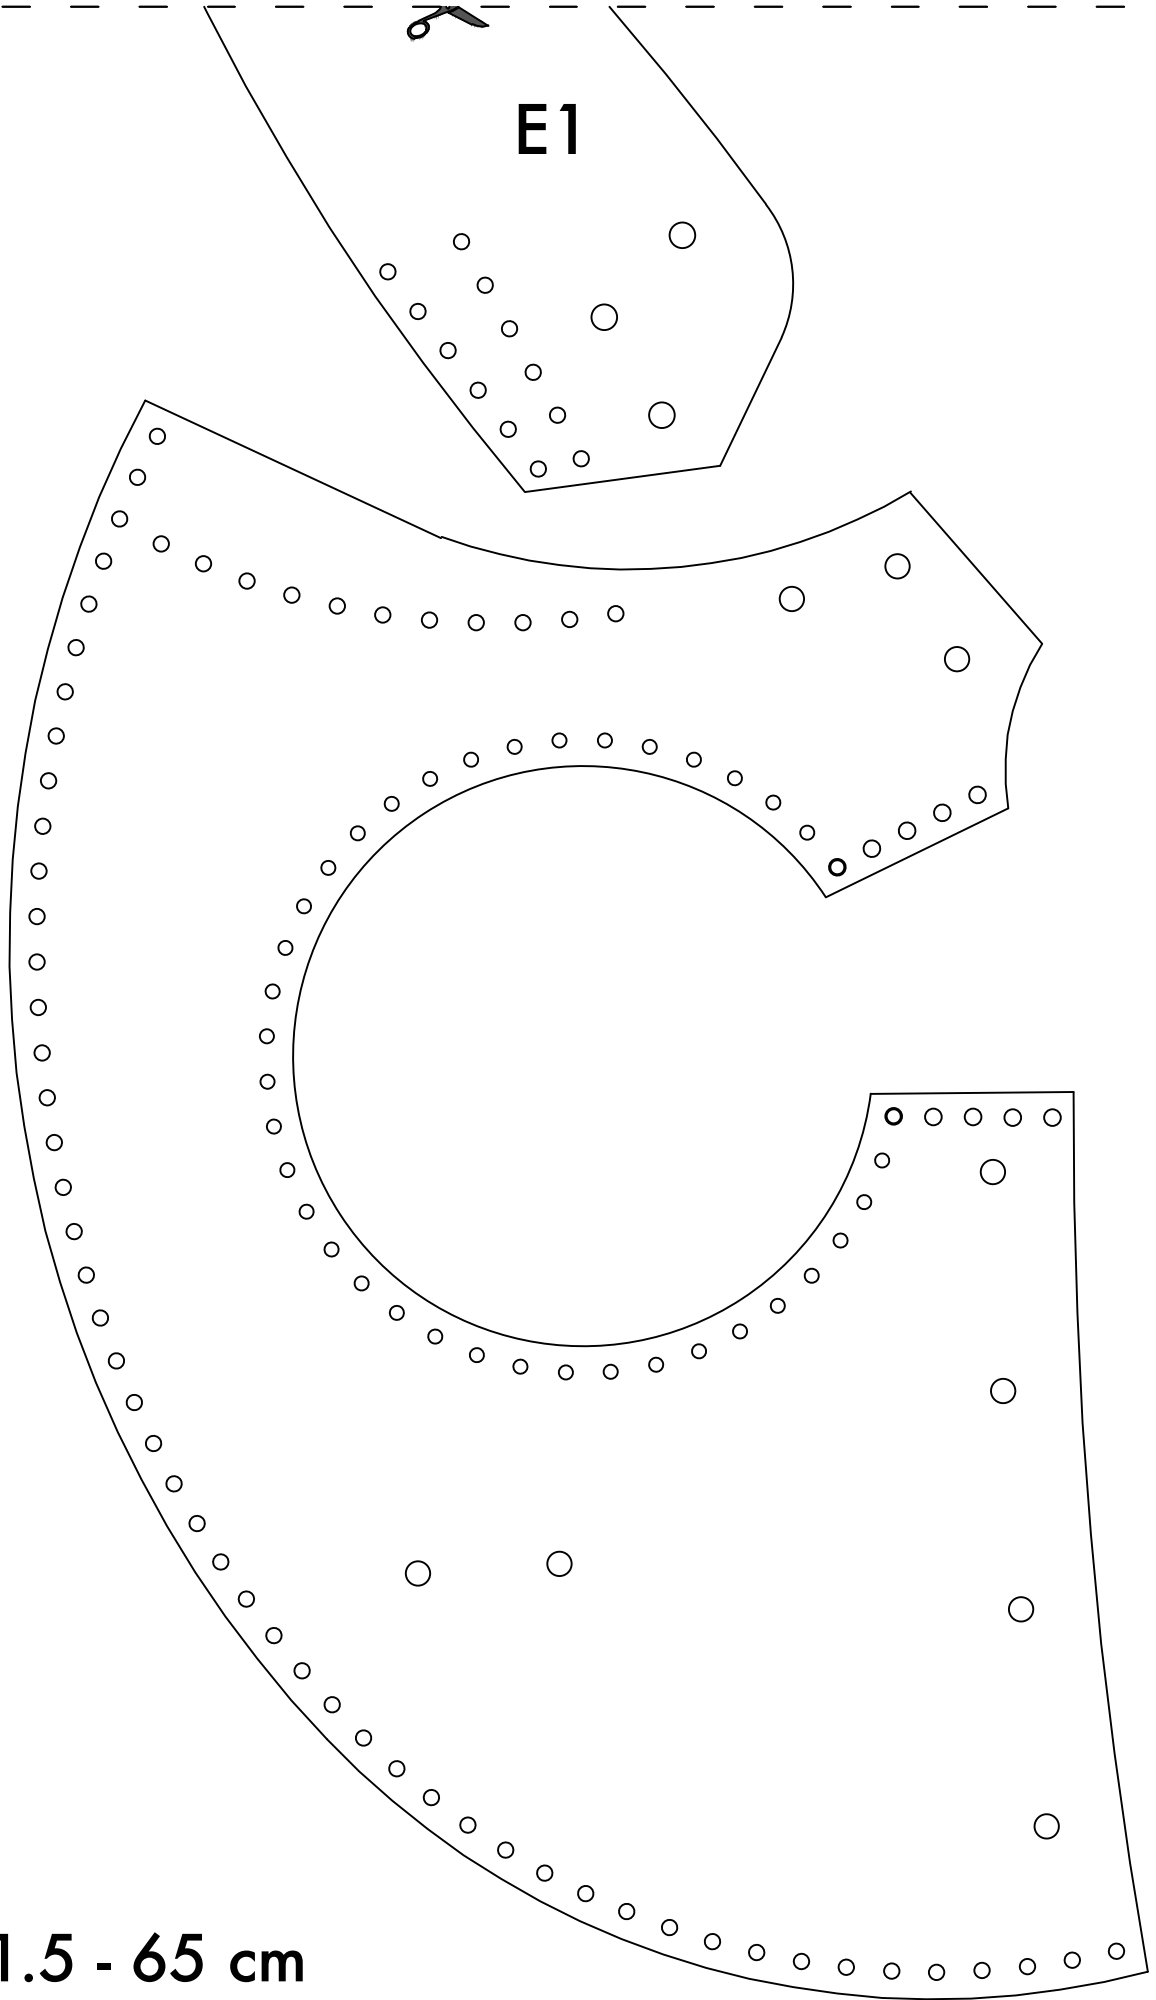

 61.5 - 65 cm

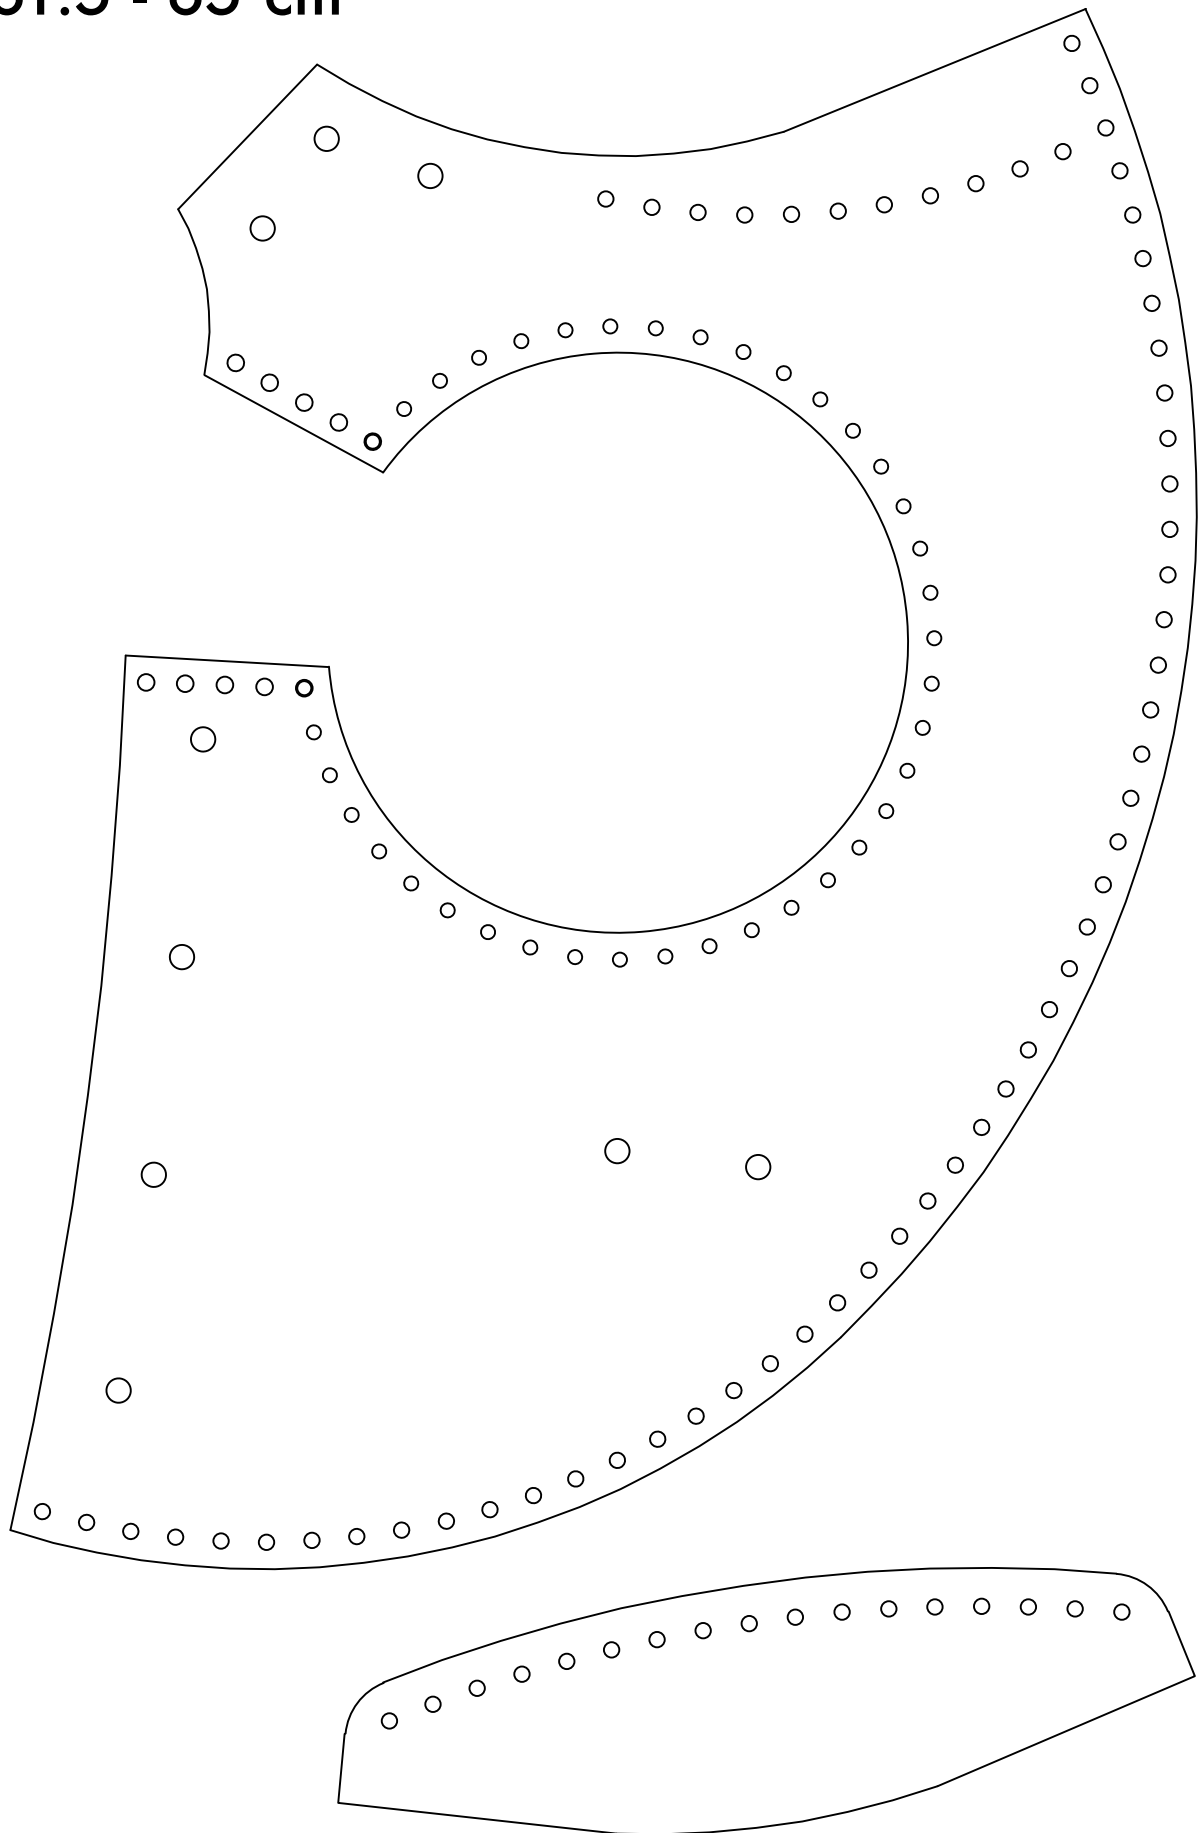

61.5 - 65 cm

F2

H2

G2

