 
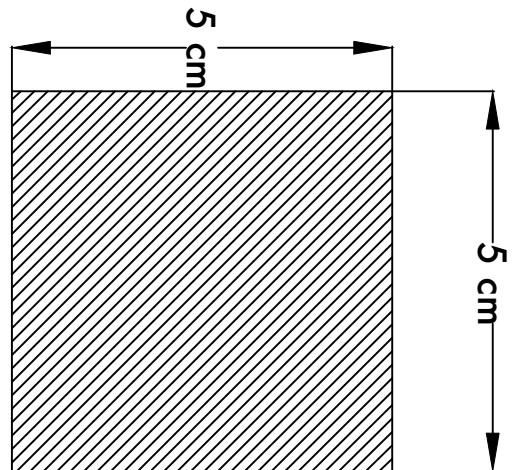 



18,2 cm

Test Page

Select A4 in the paper size printing menu
Choose "actual size" in the printing preferences
Make sure these dimensions are correct
before starting your pattern

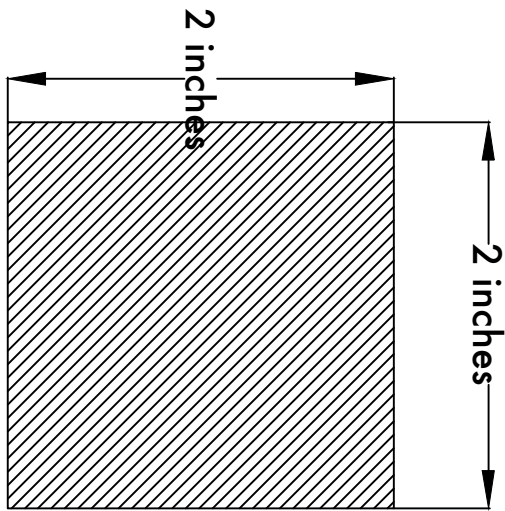

 7,17 inches

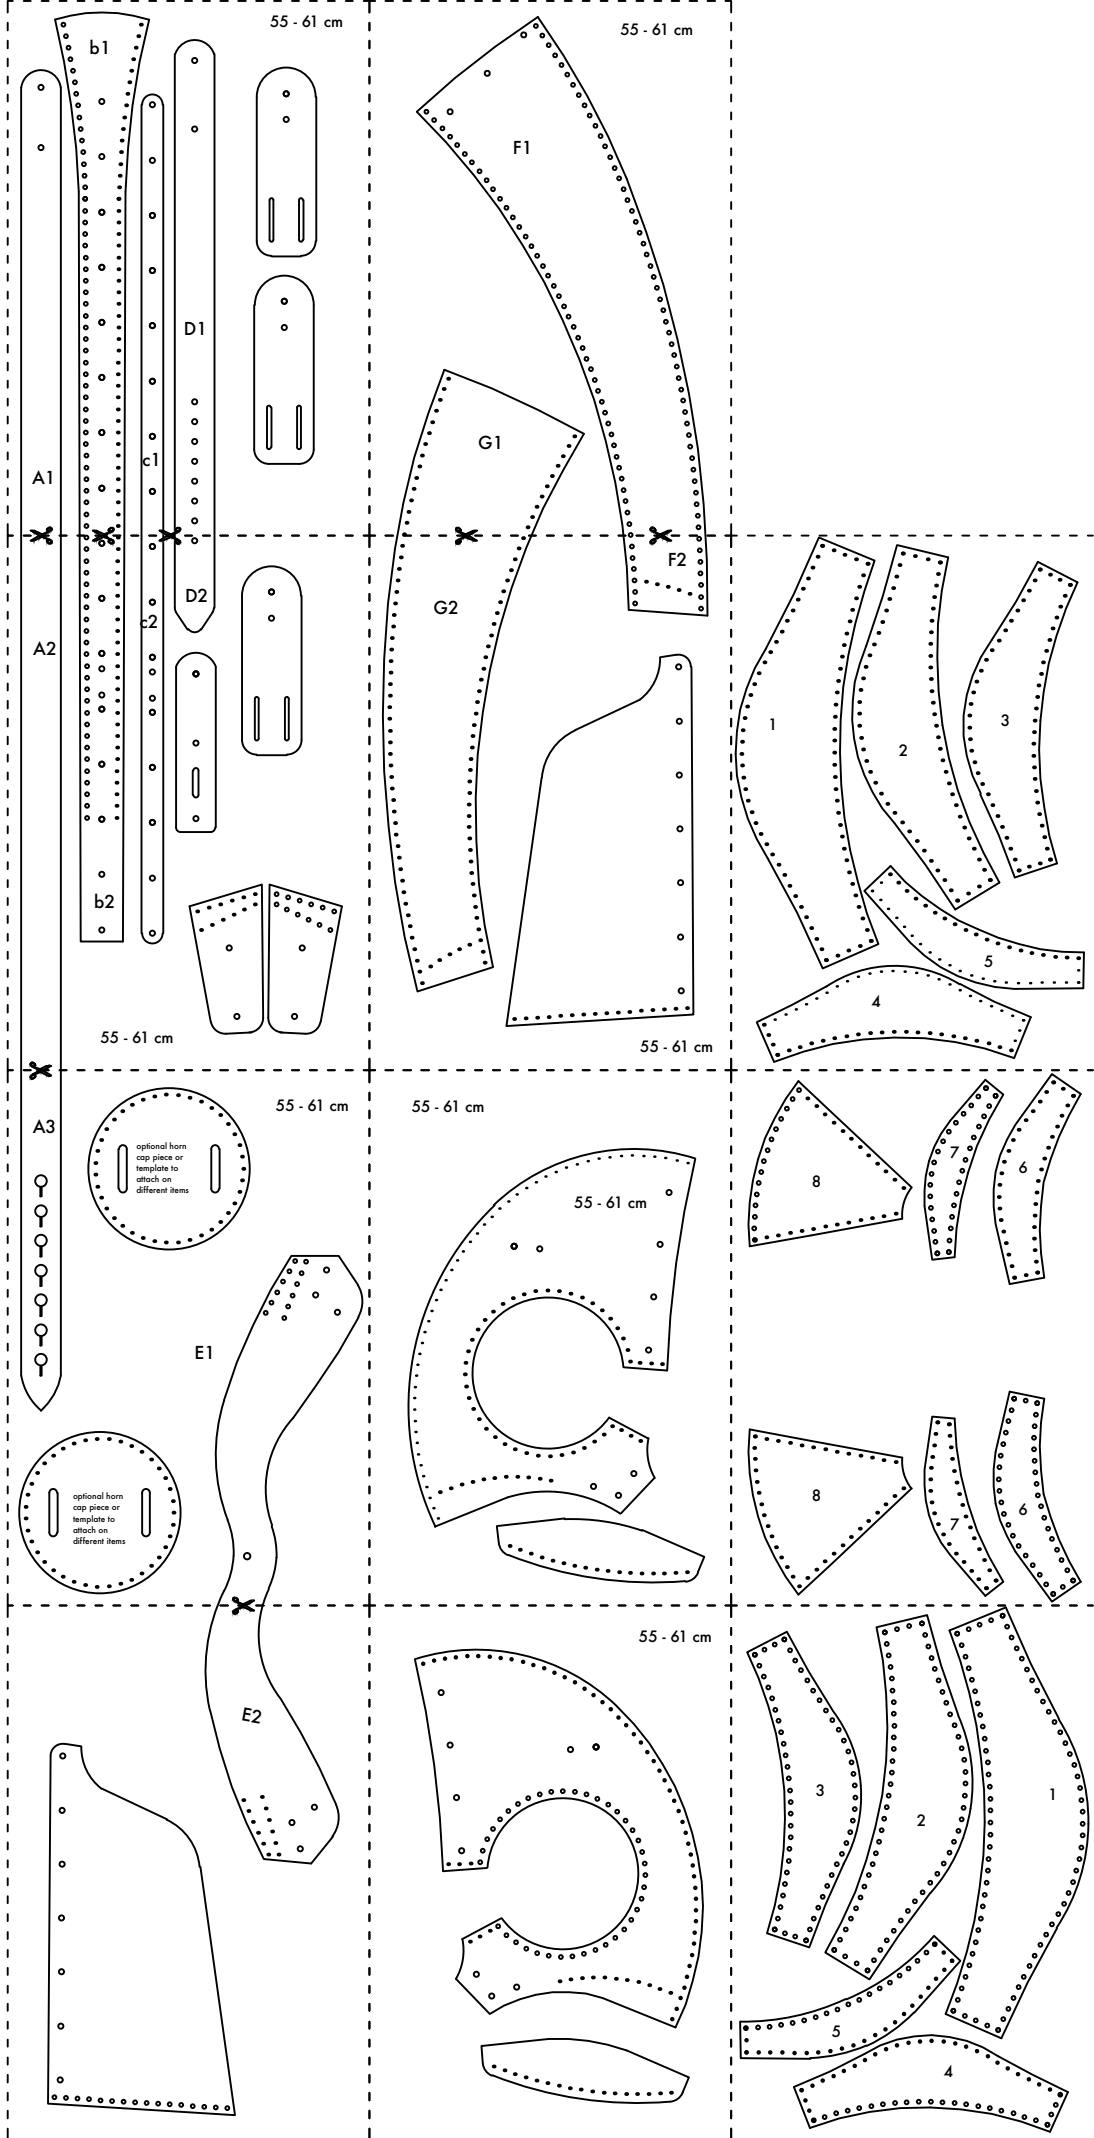


55 - 61 cm

b1

A1

c1

 D1

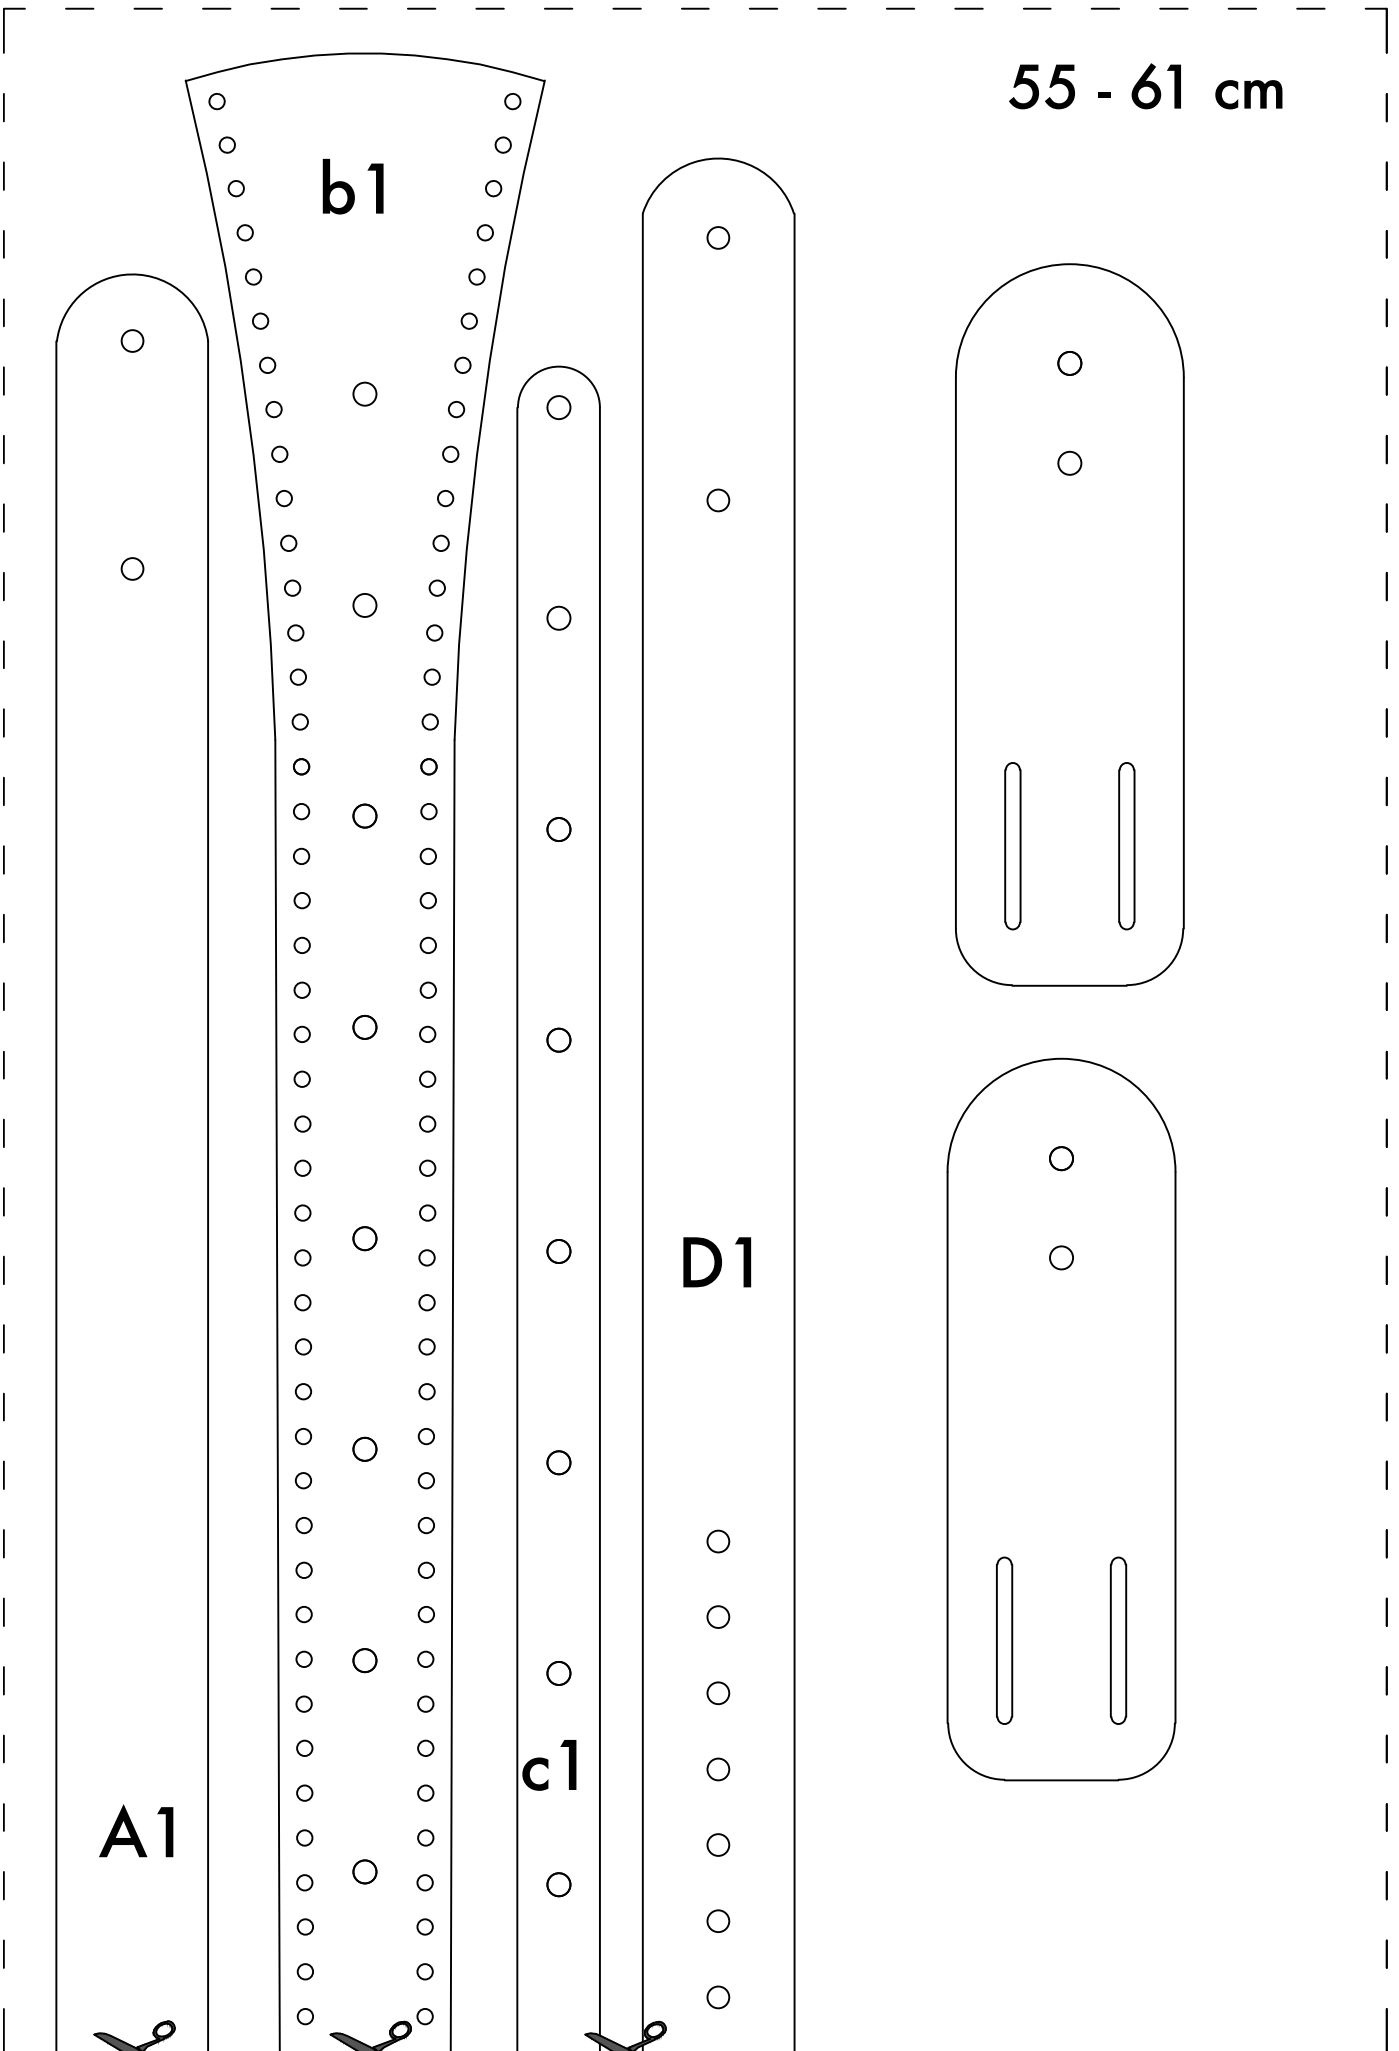


A2

b2

c2


D2

 55 - 61 cm

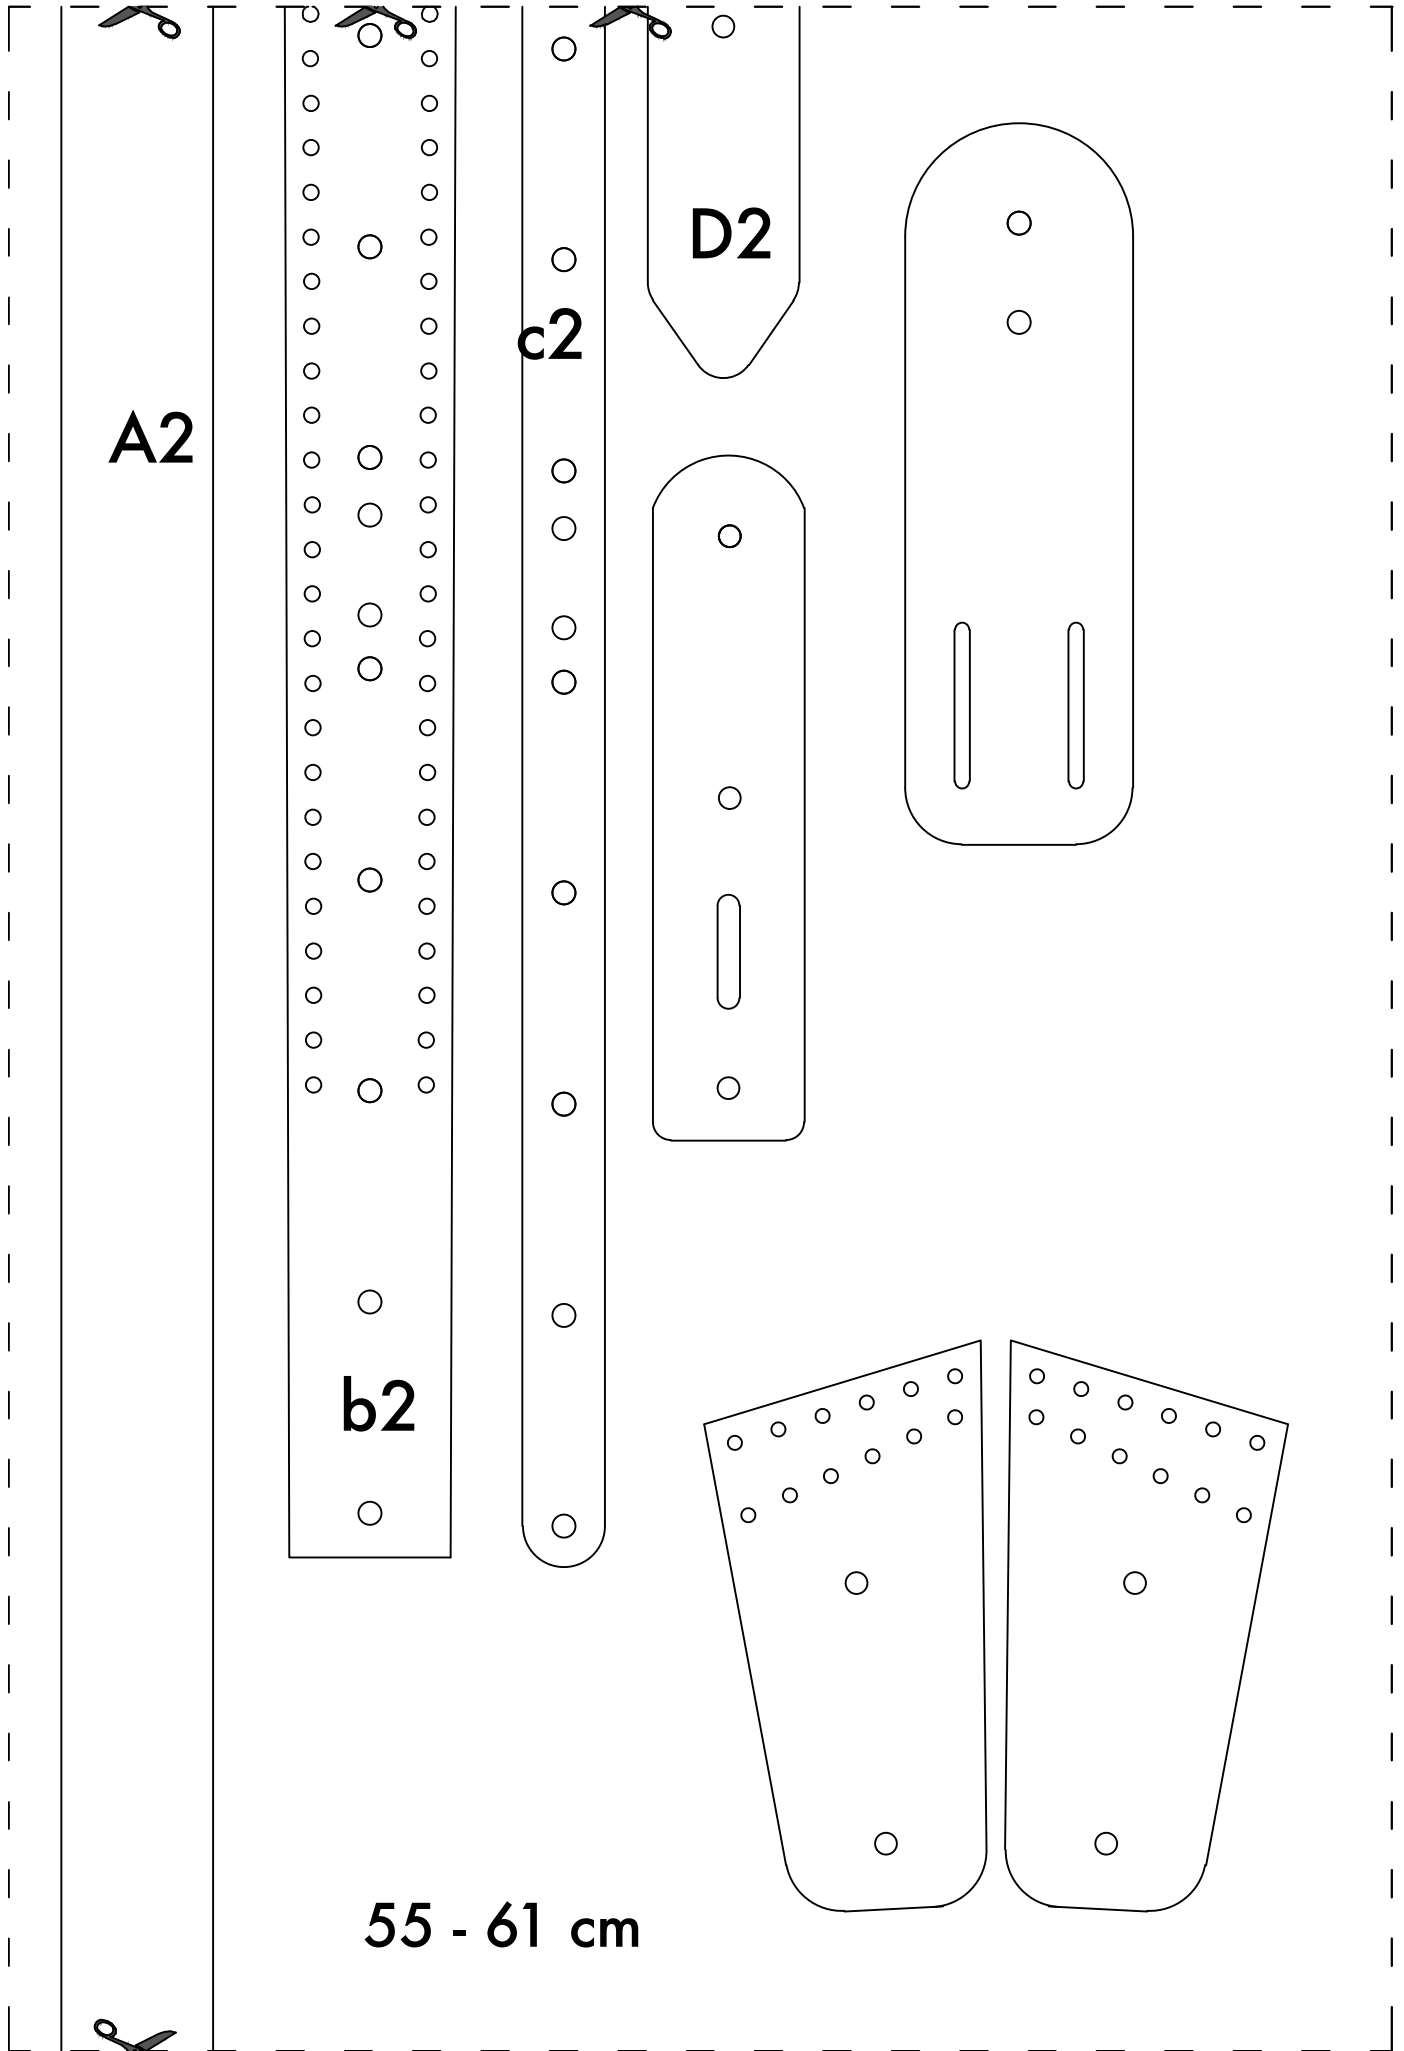




A3

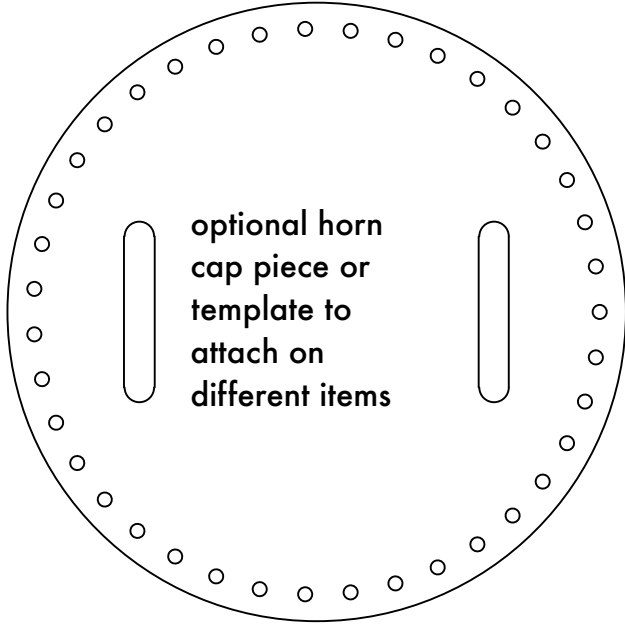 


optional horn
cap piece or
template to
attach on
different items


55 - 61 cm

 E1

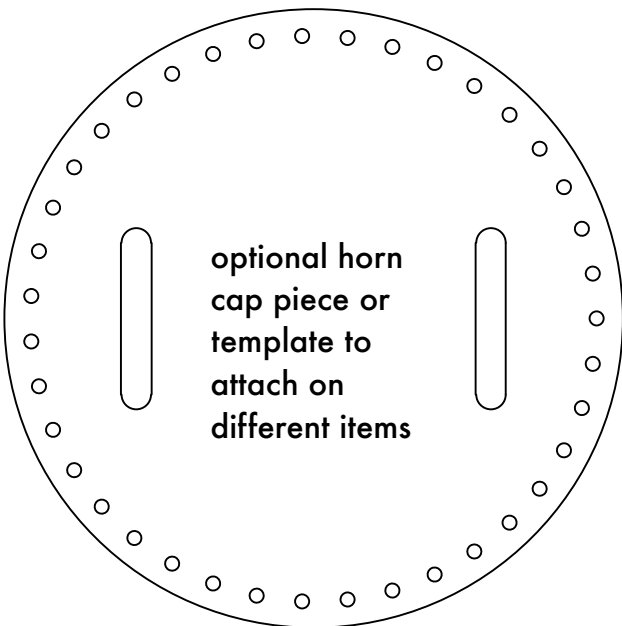

  optional horn
cap piece or
template to
attach on
different items

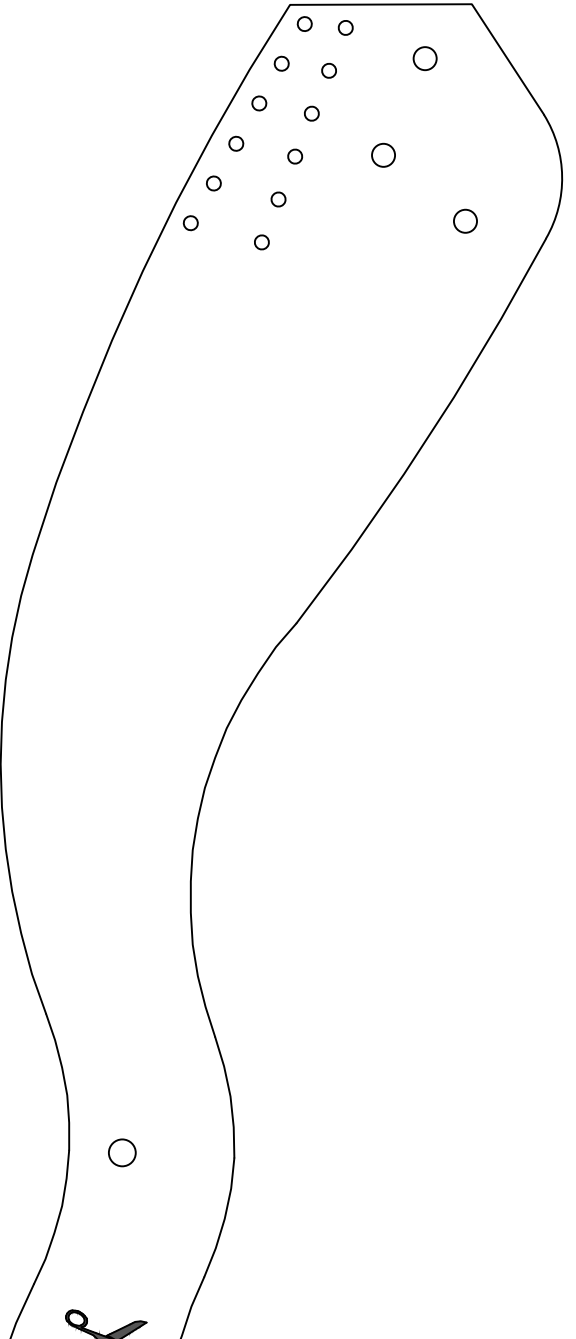


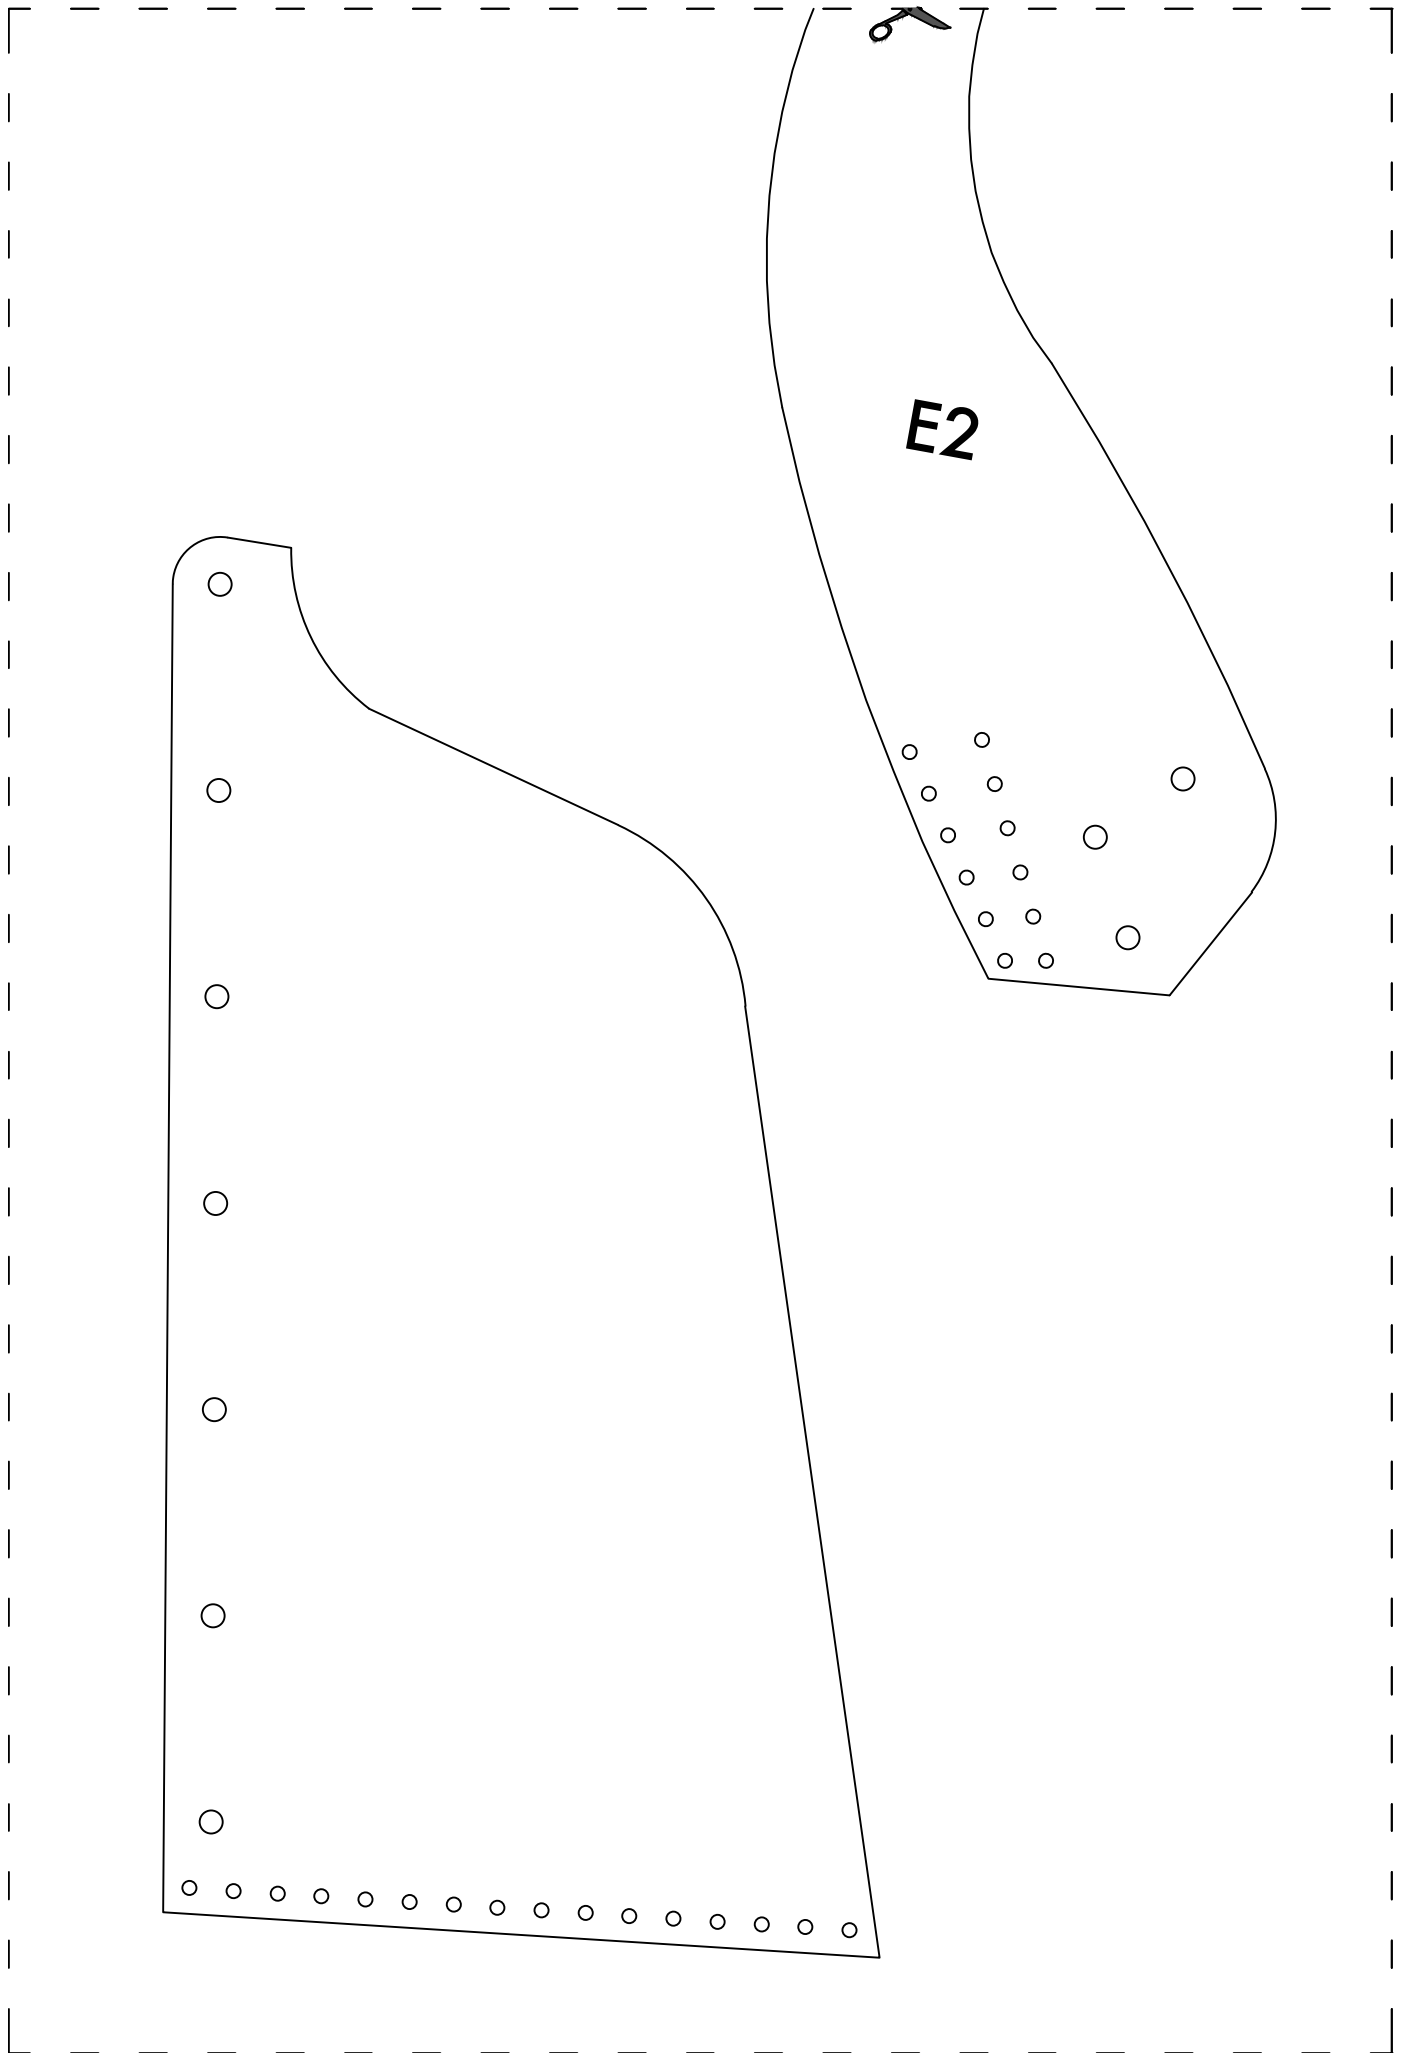


55 - 61 cm


F1

  G1

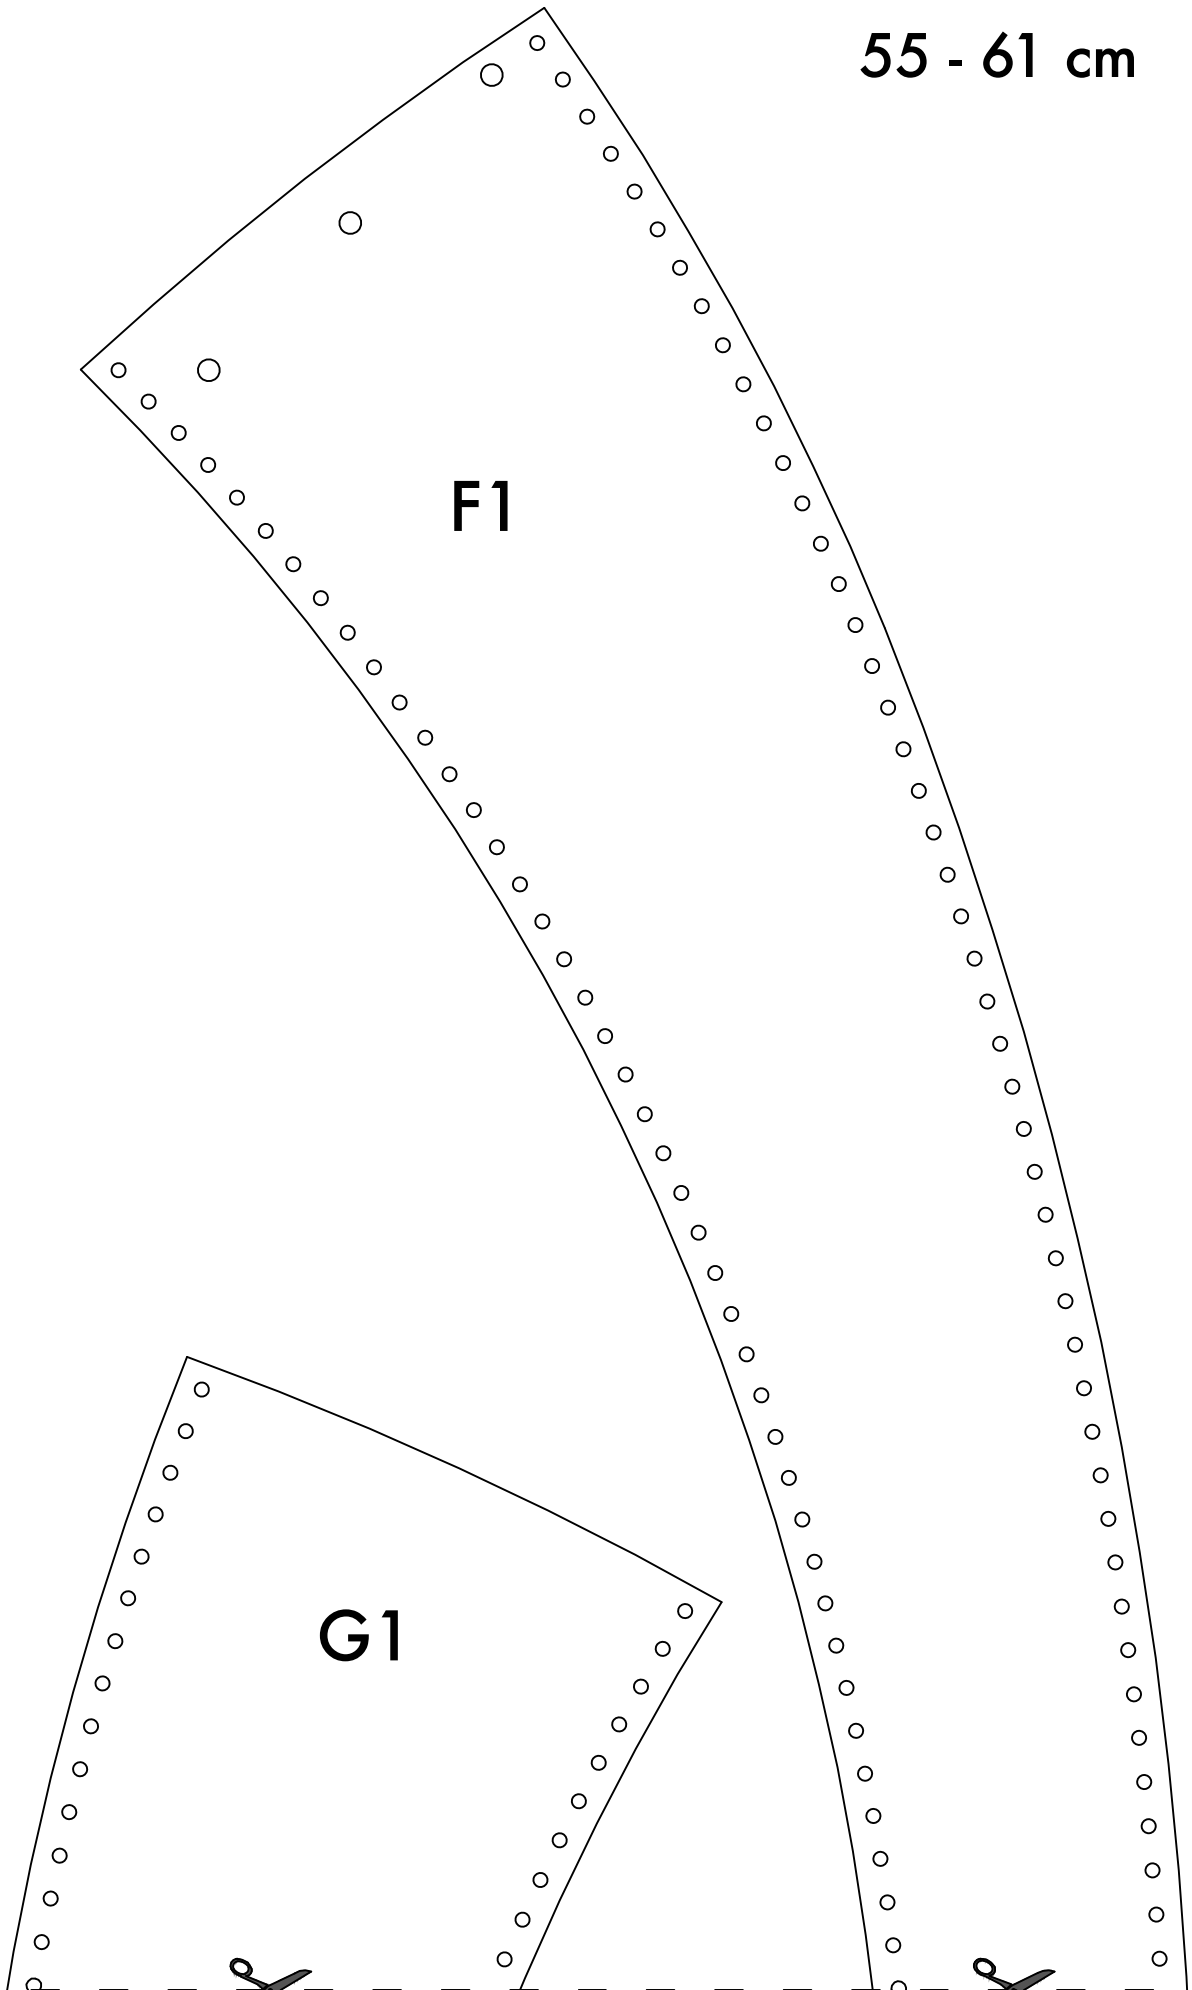

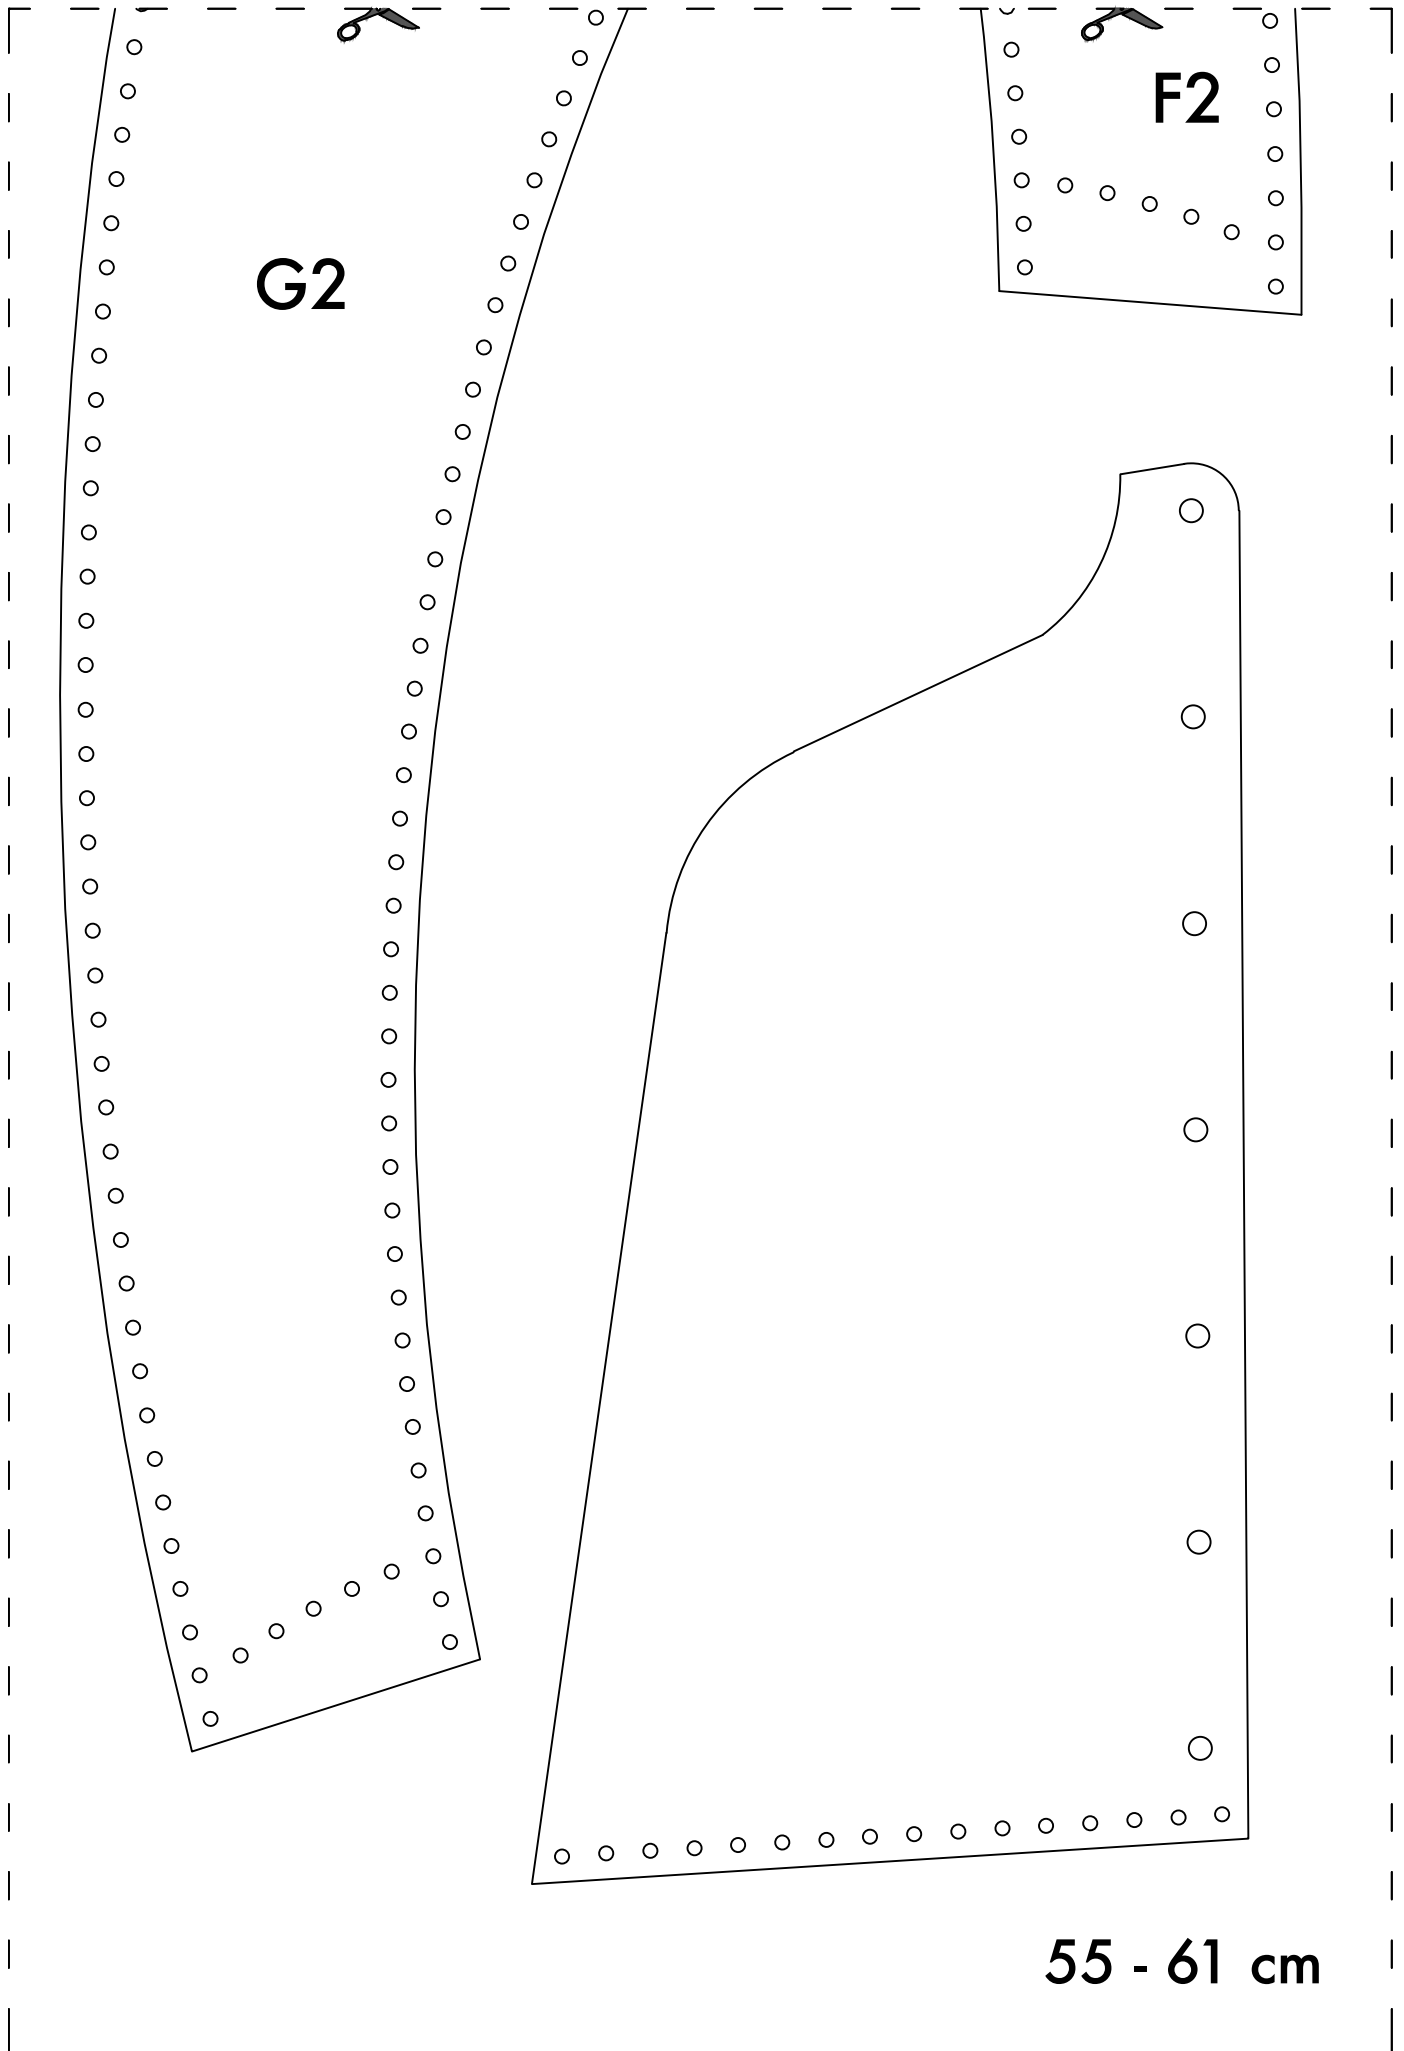

55 - 61 cm

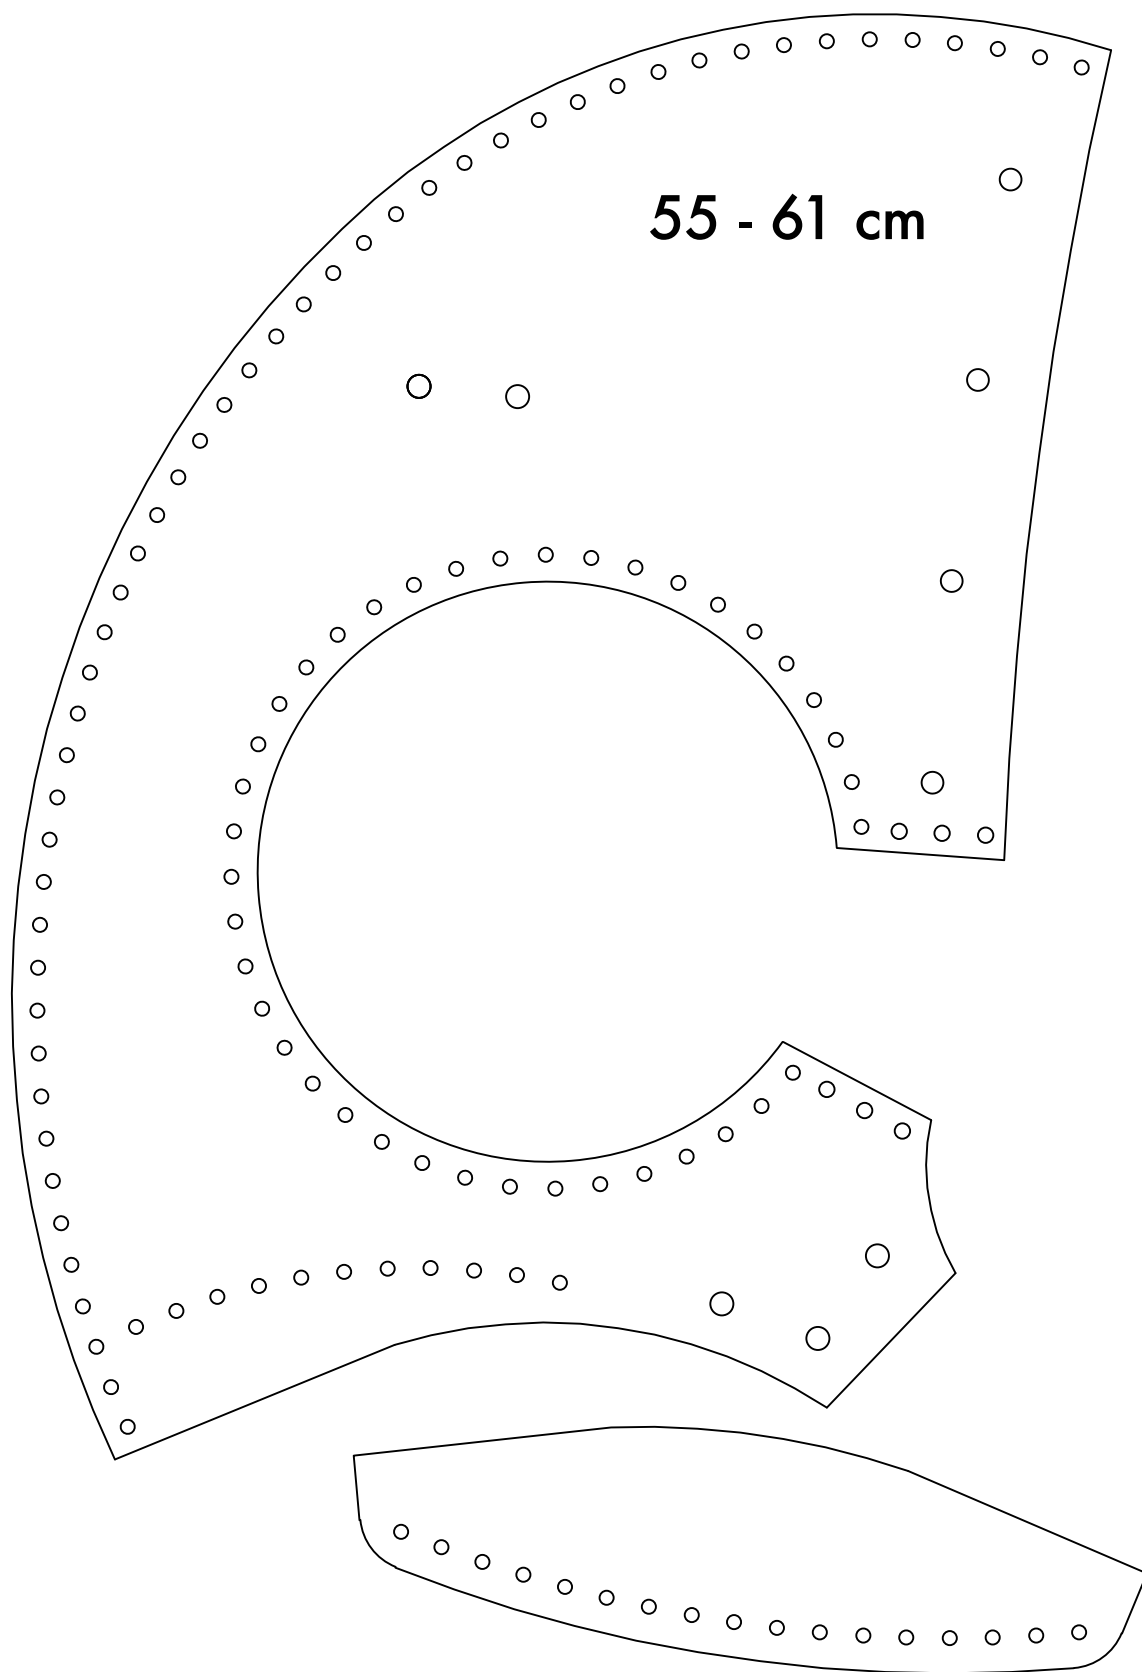 

55 - 61 cm

