 
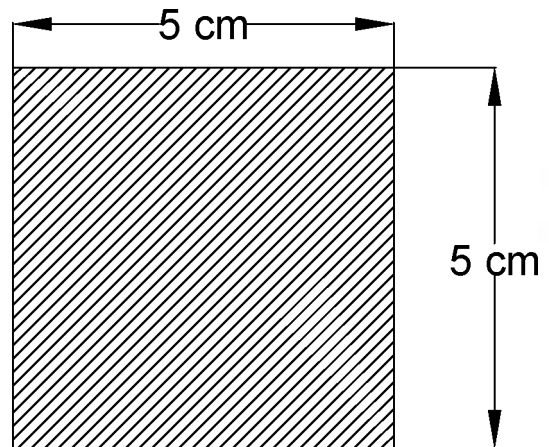 



18,2 cm


# Test Page

  Select A4 in the paper size printing menu  
Choose "actual size" in the printing preferences  
Make sure these dimensions are correct  
before starting your pattern

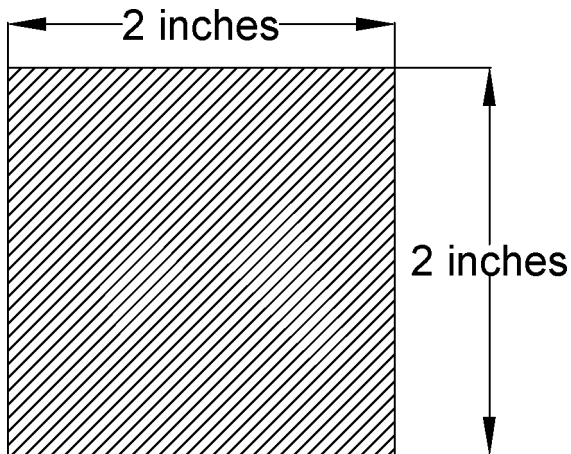



7,17 inches

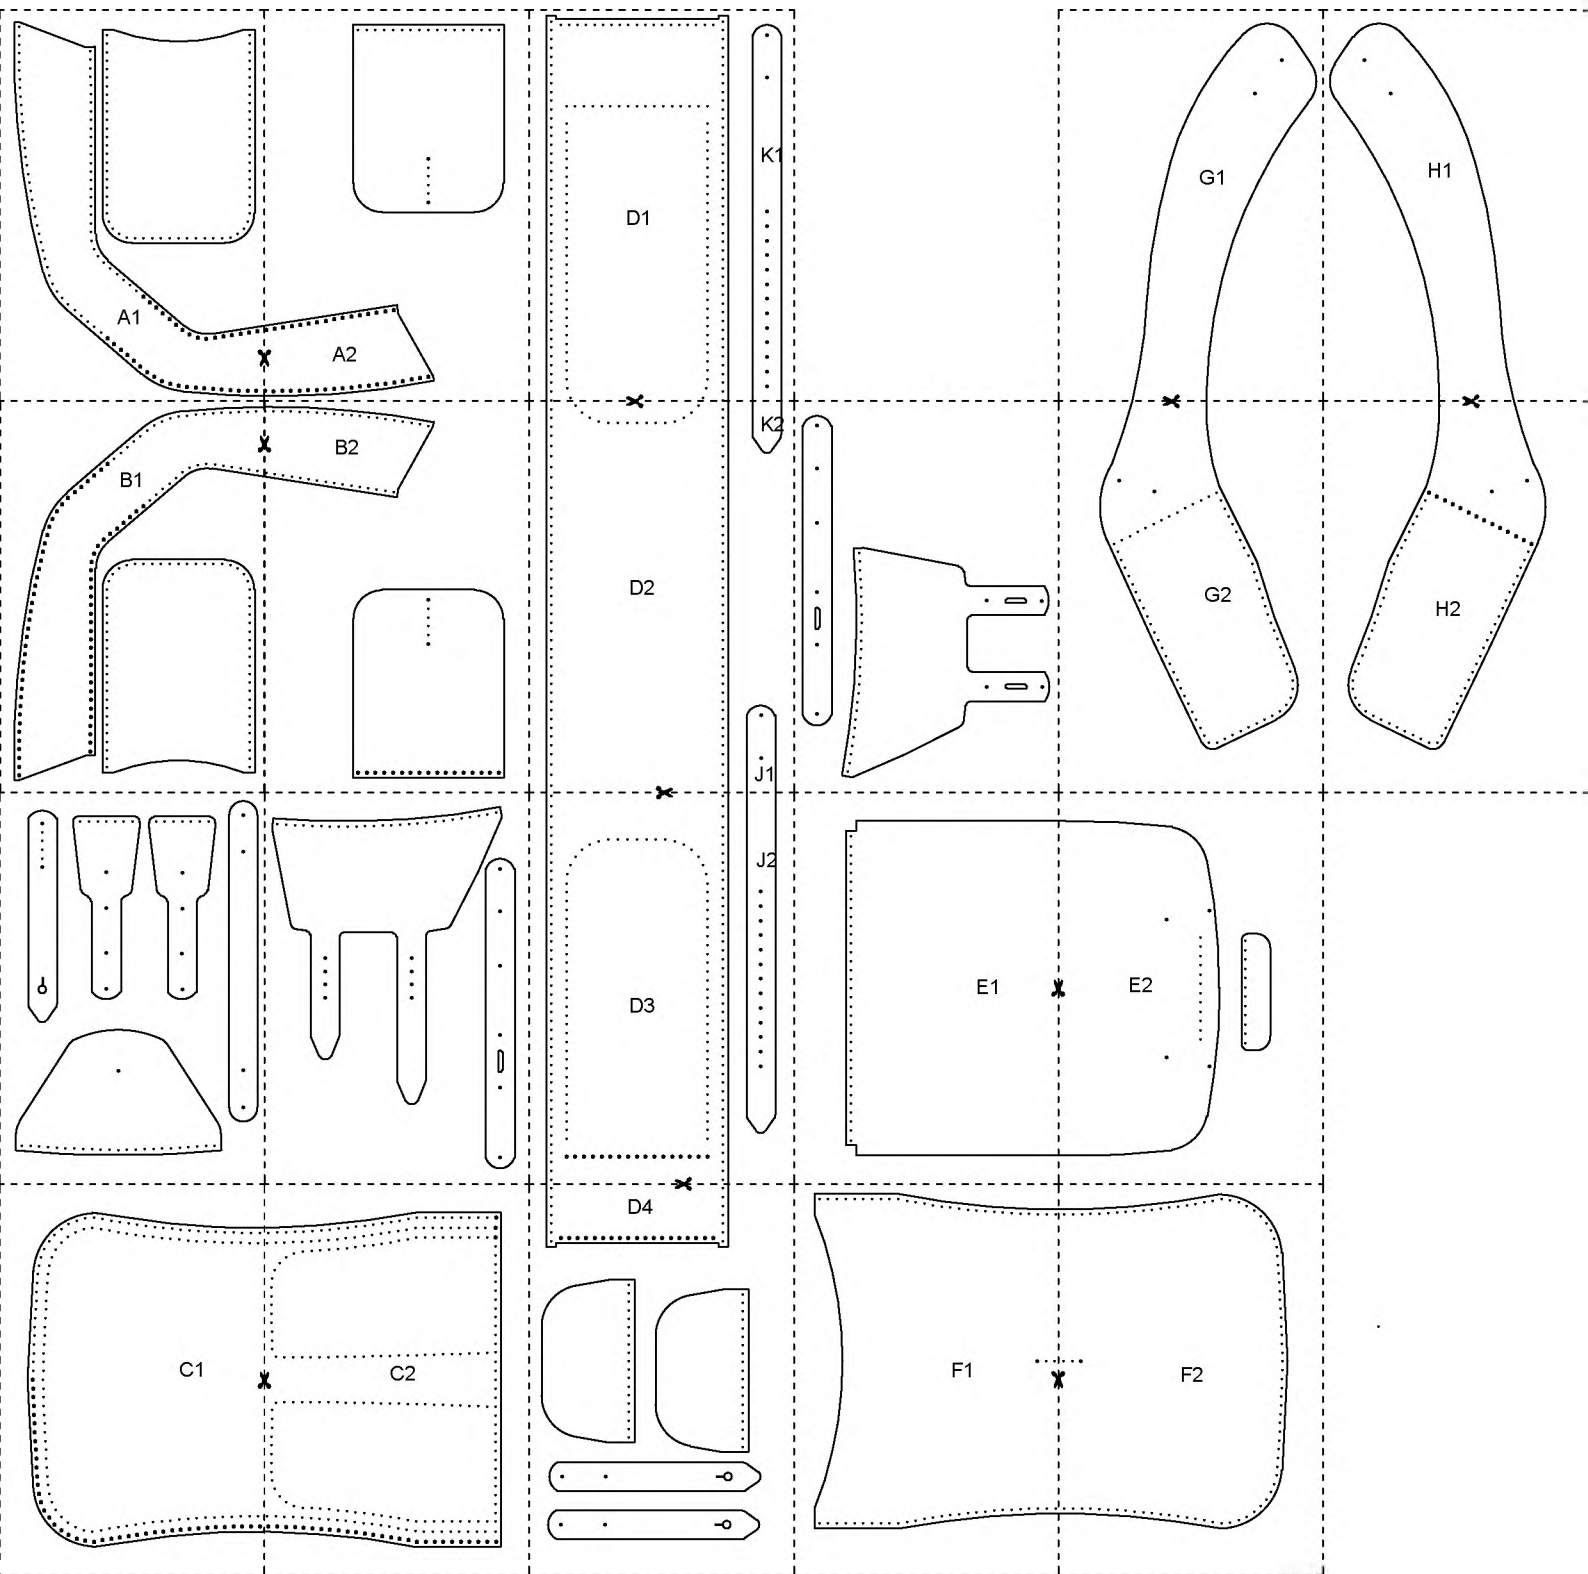


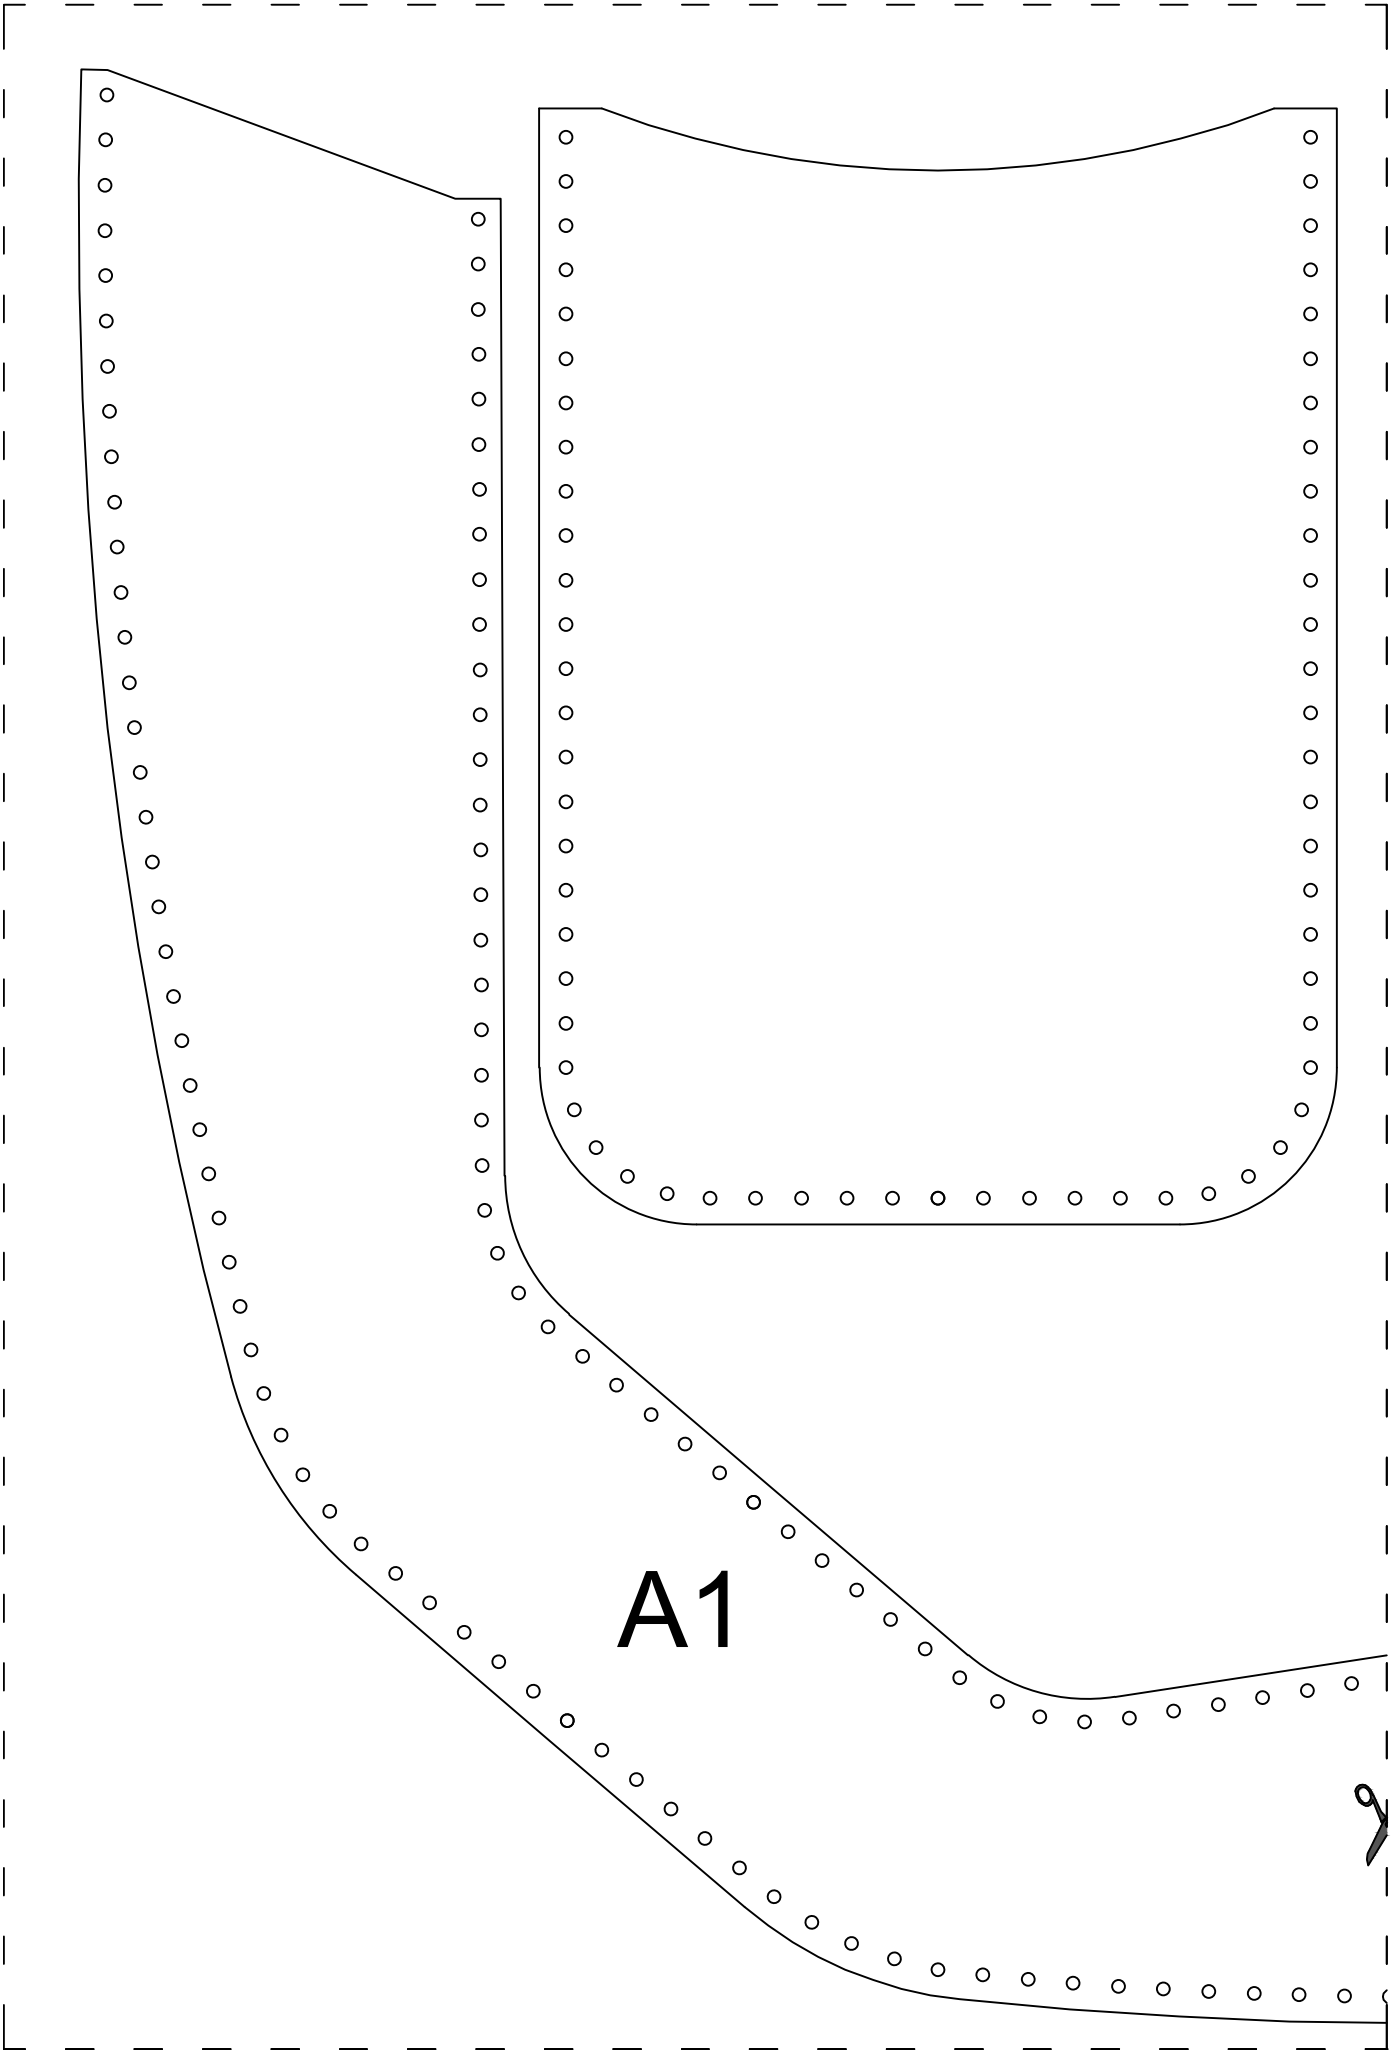




**A1**




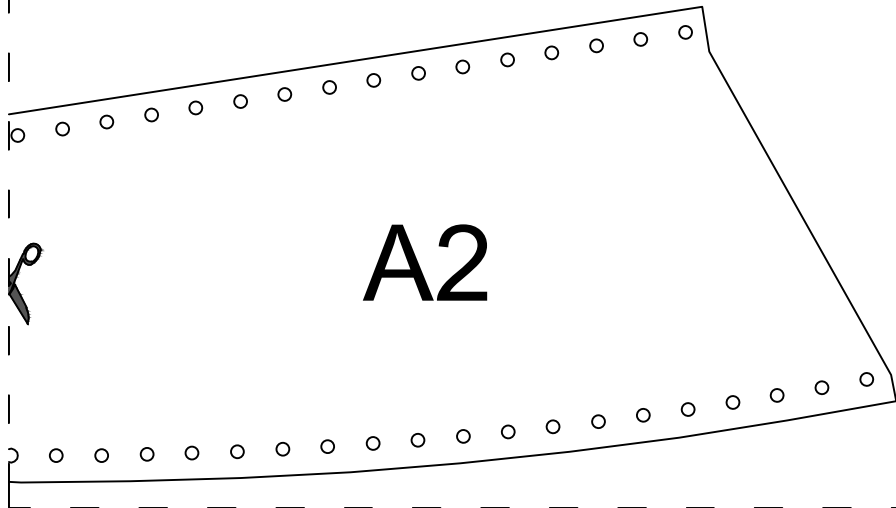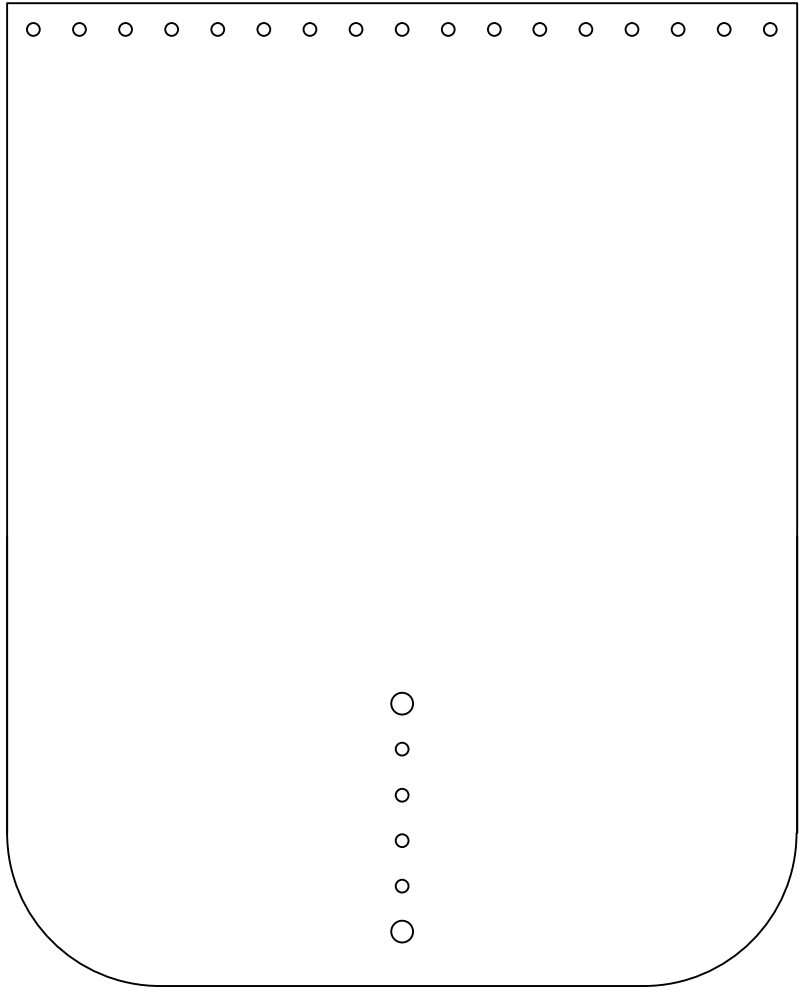  


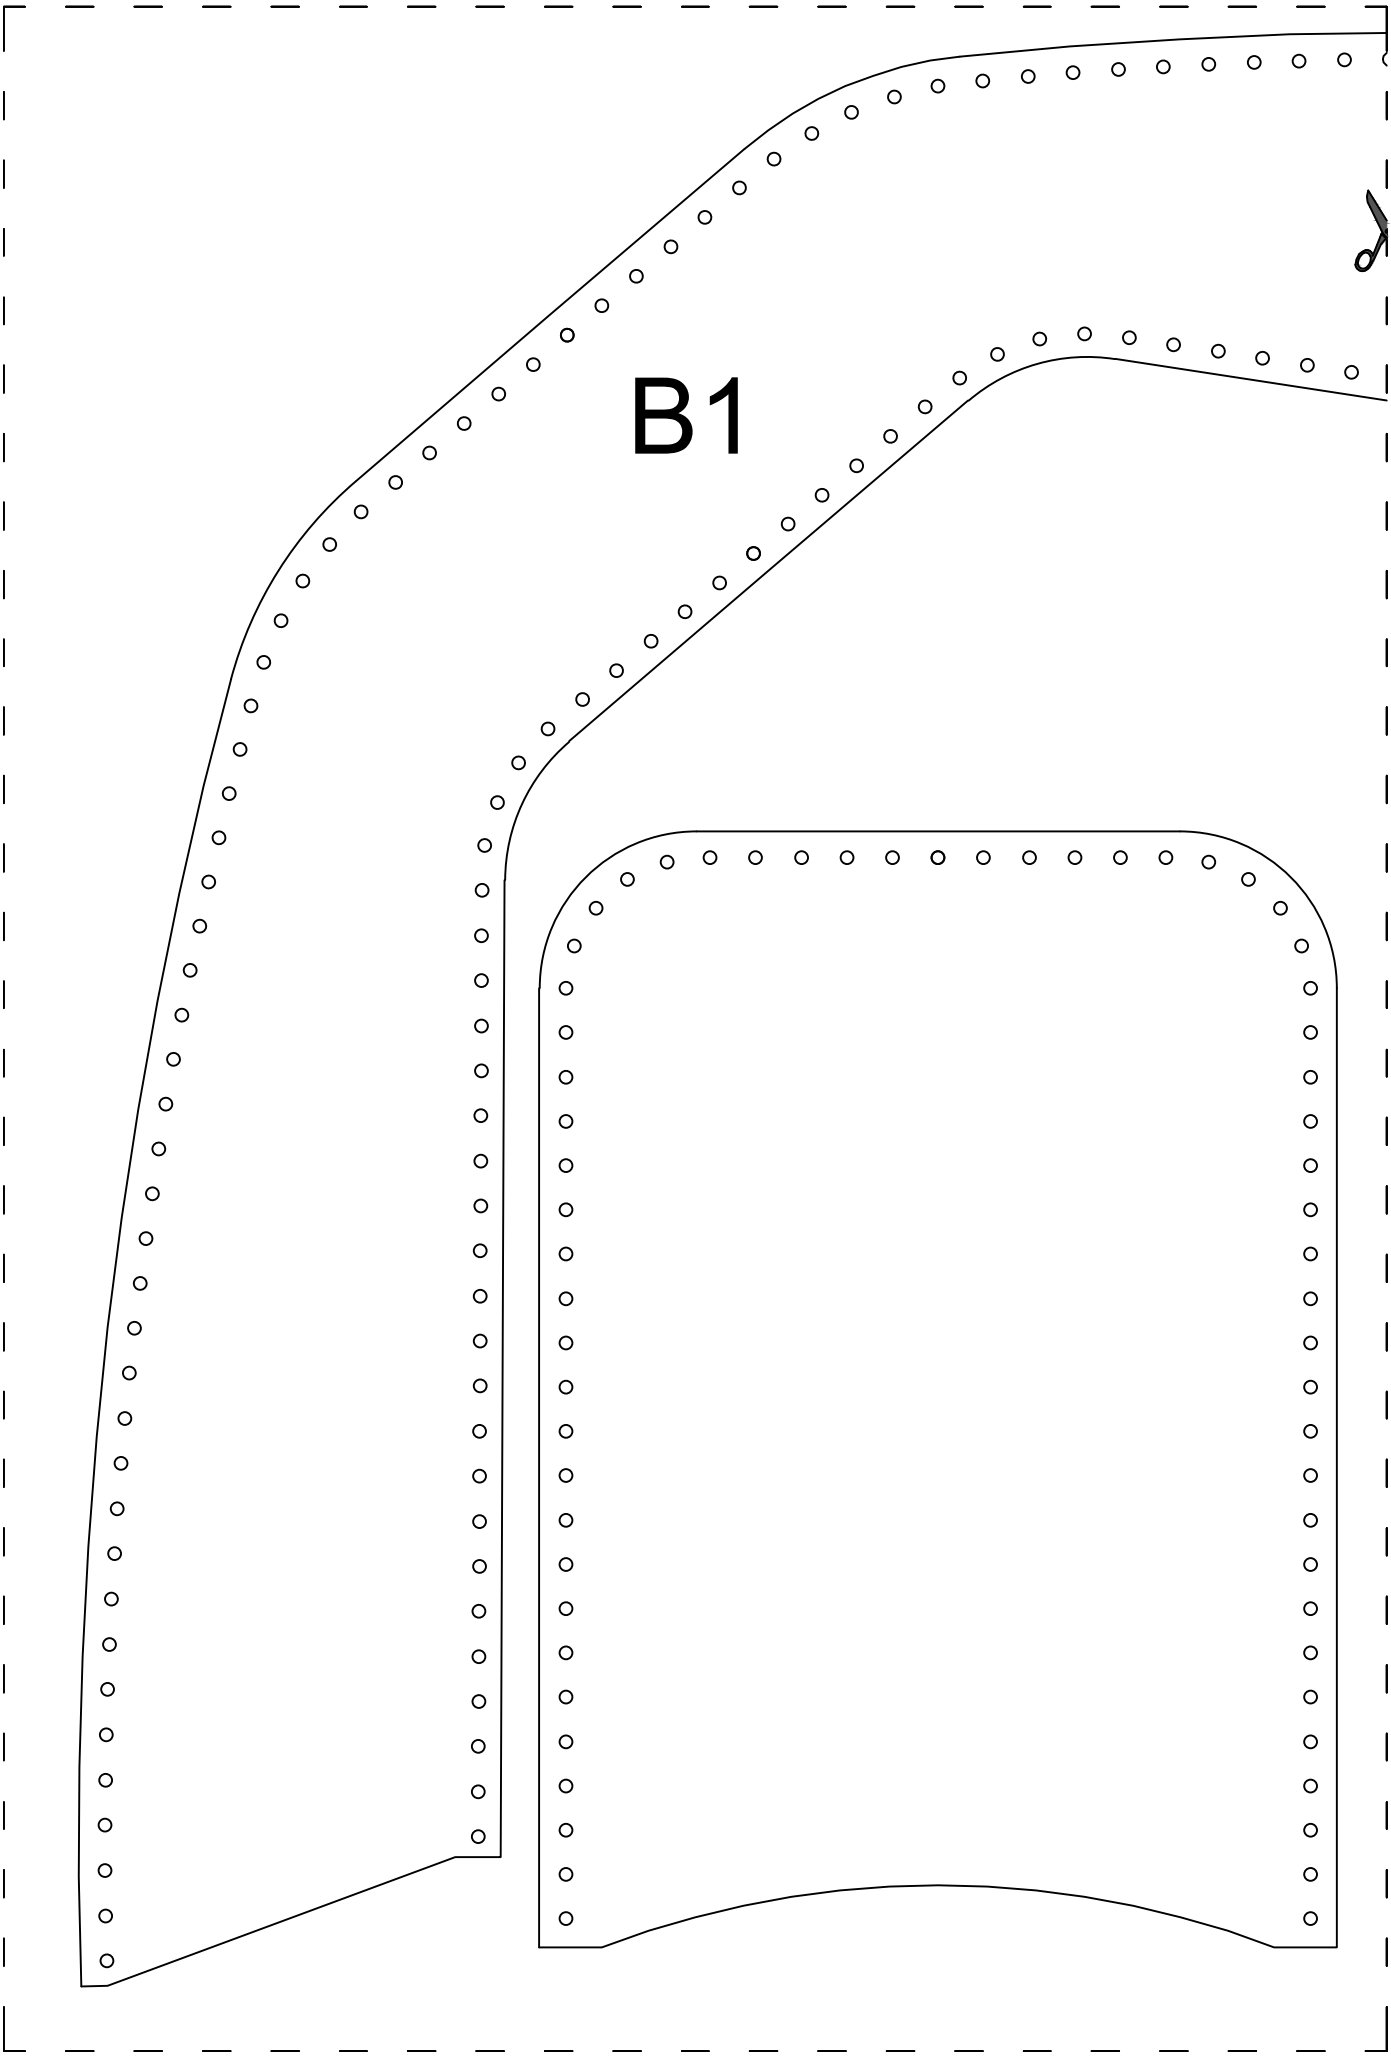 



**B1**

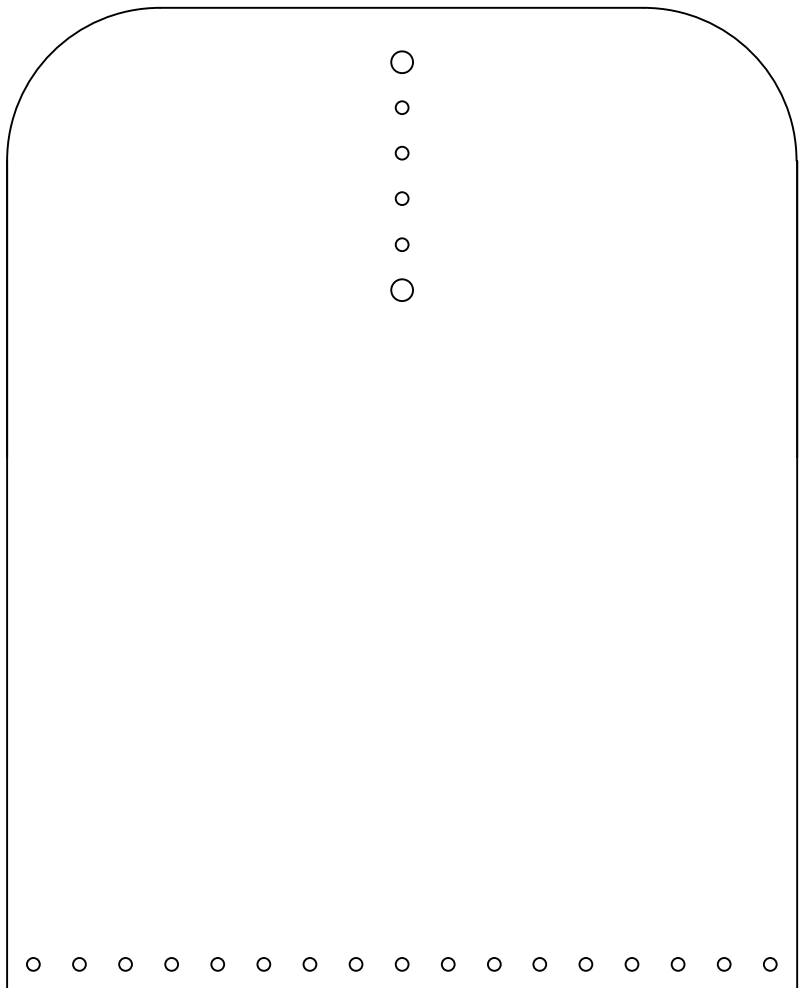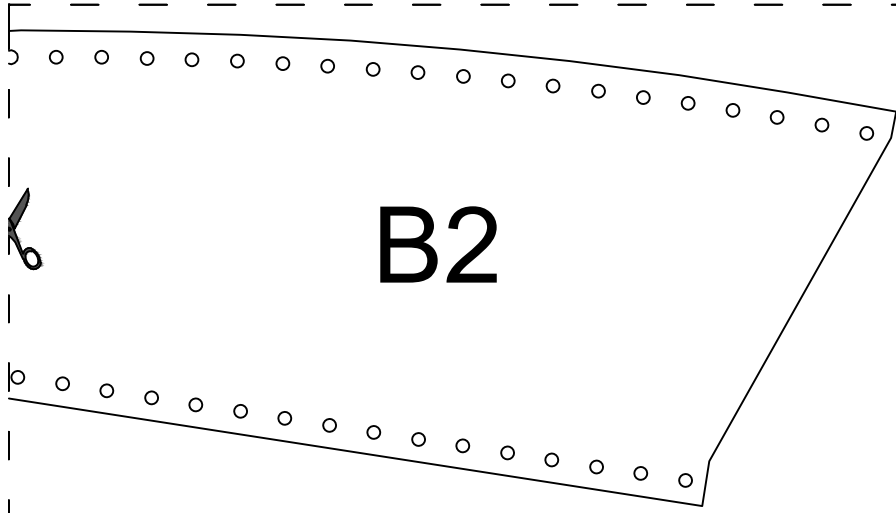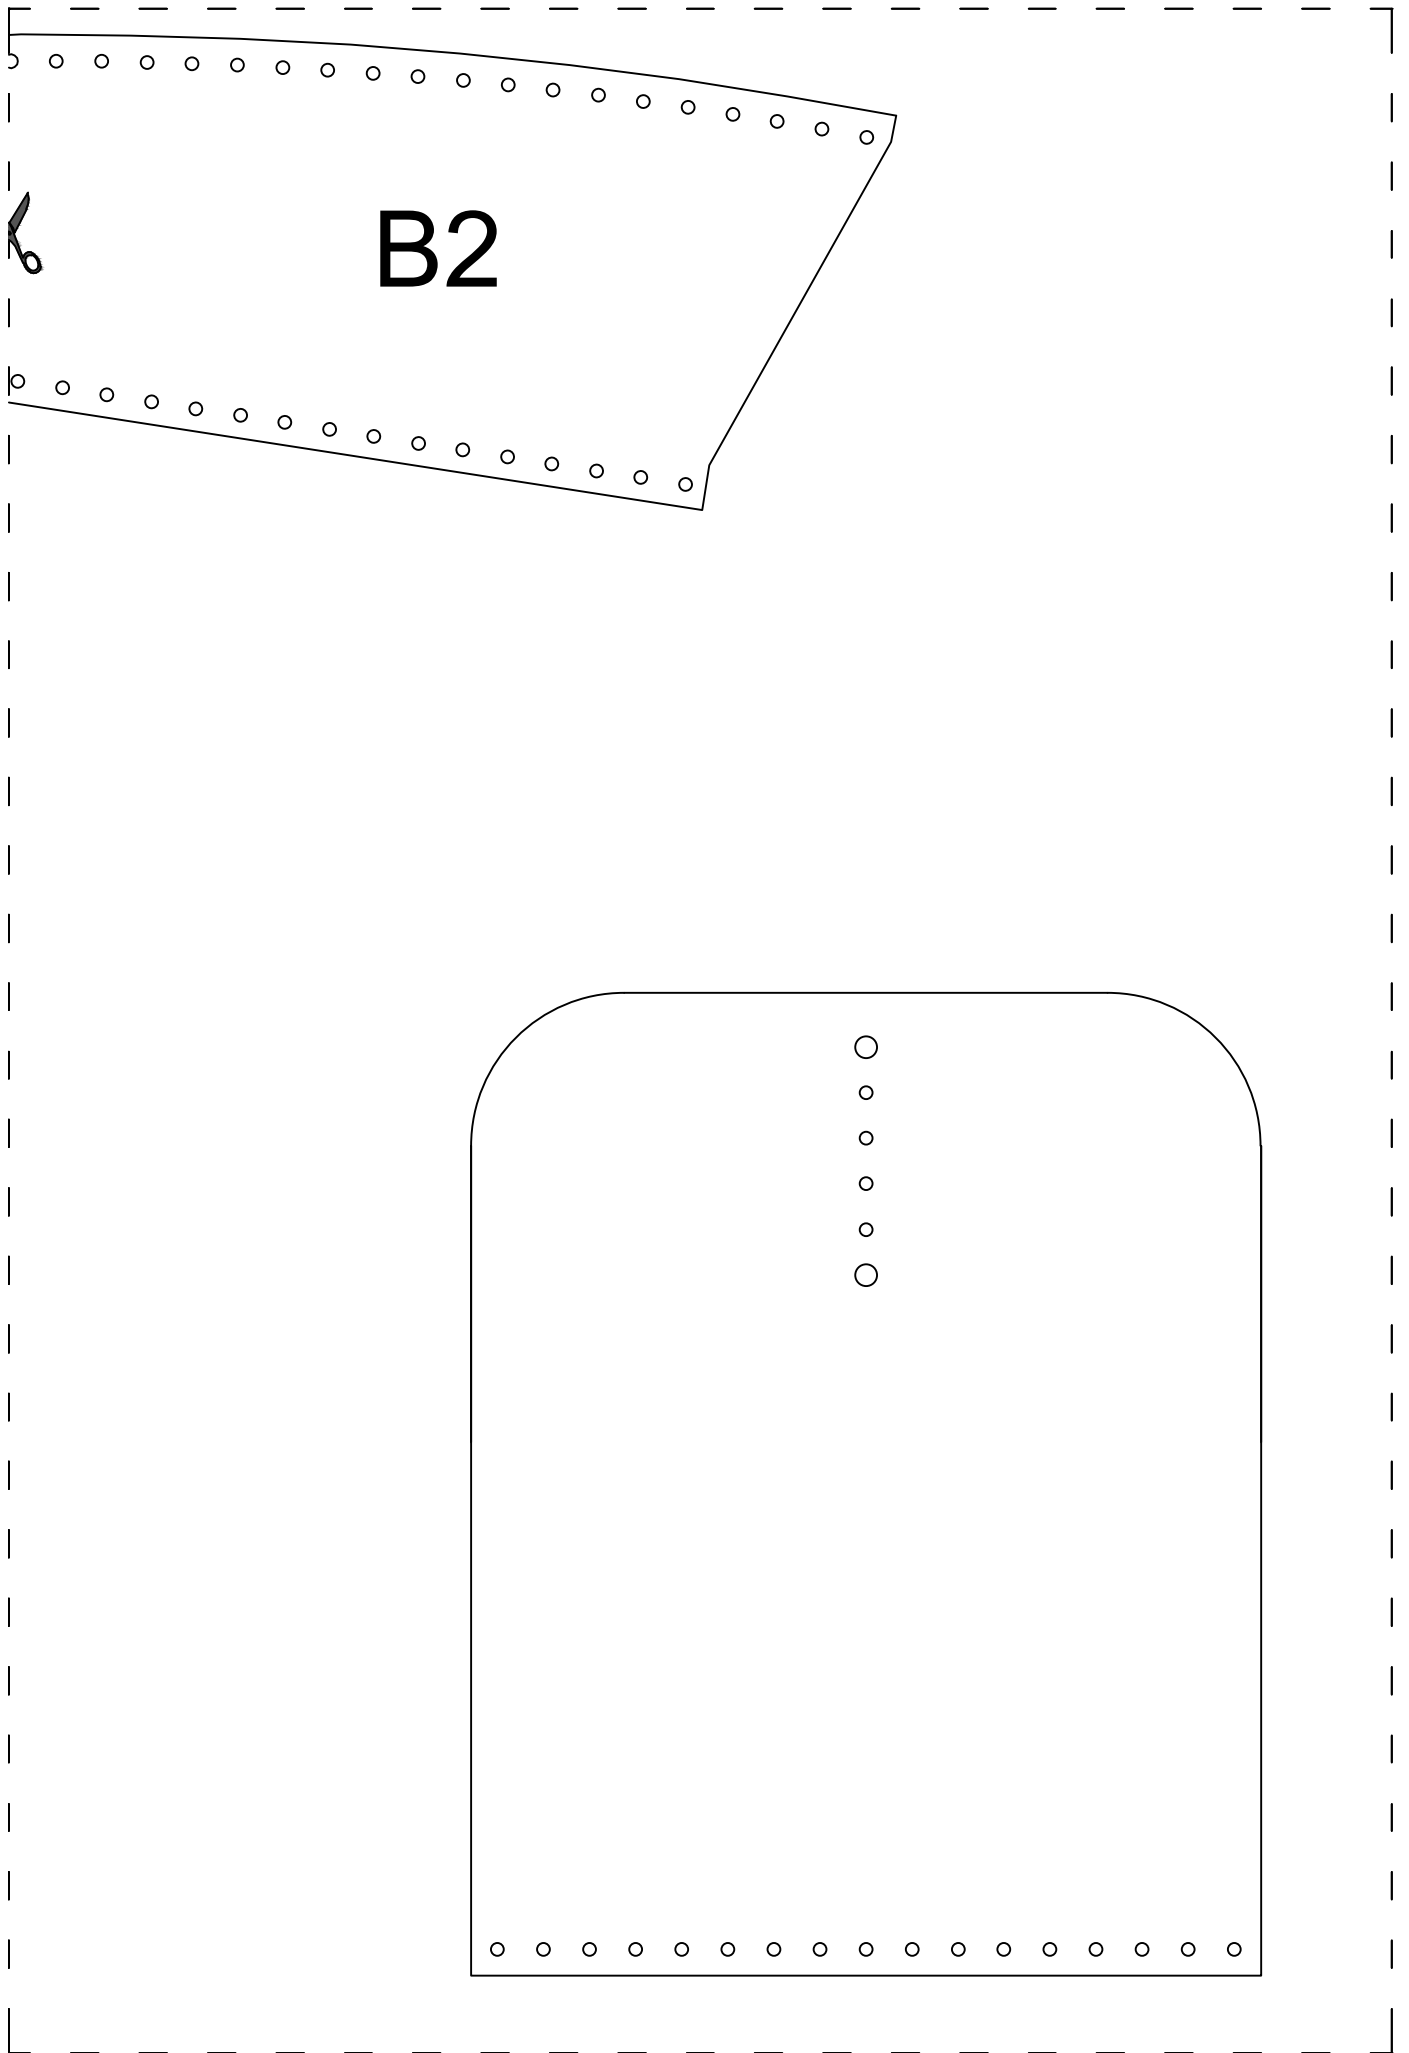   

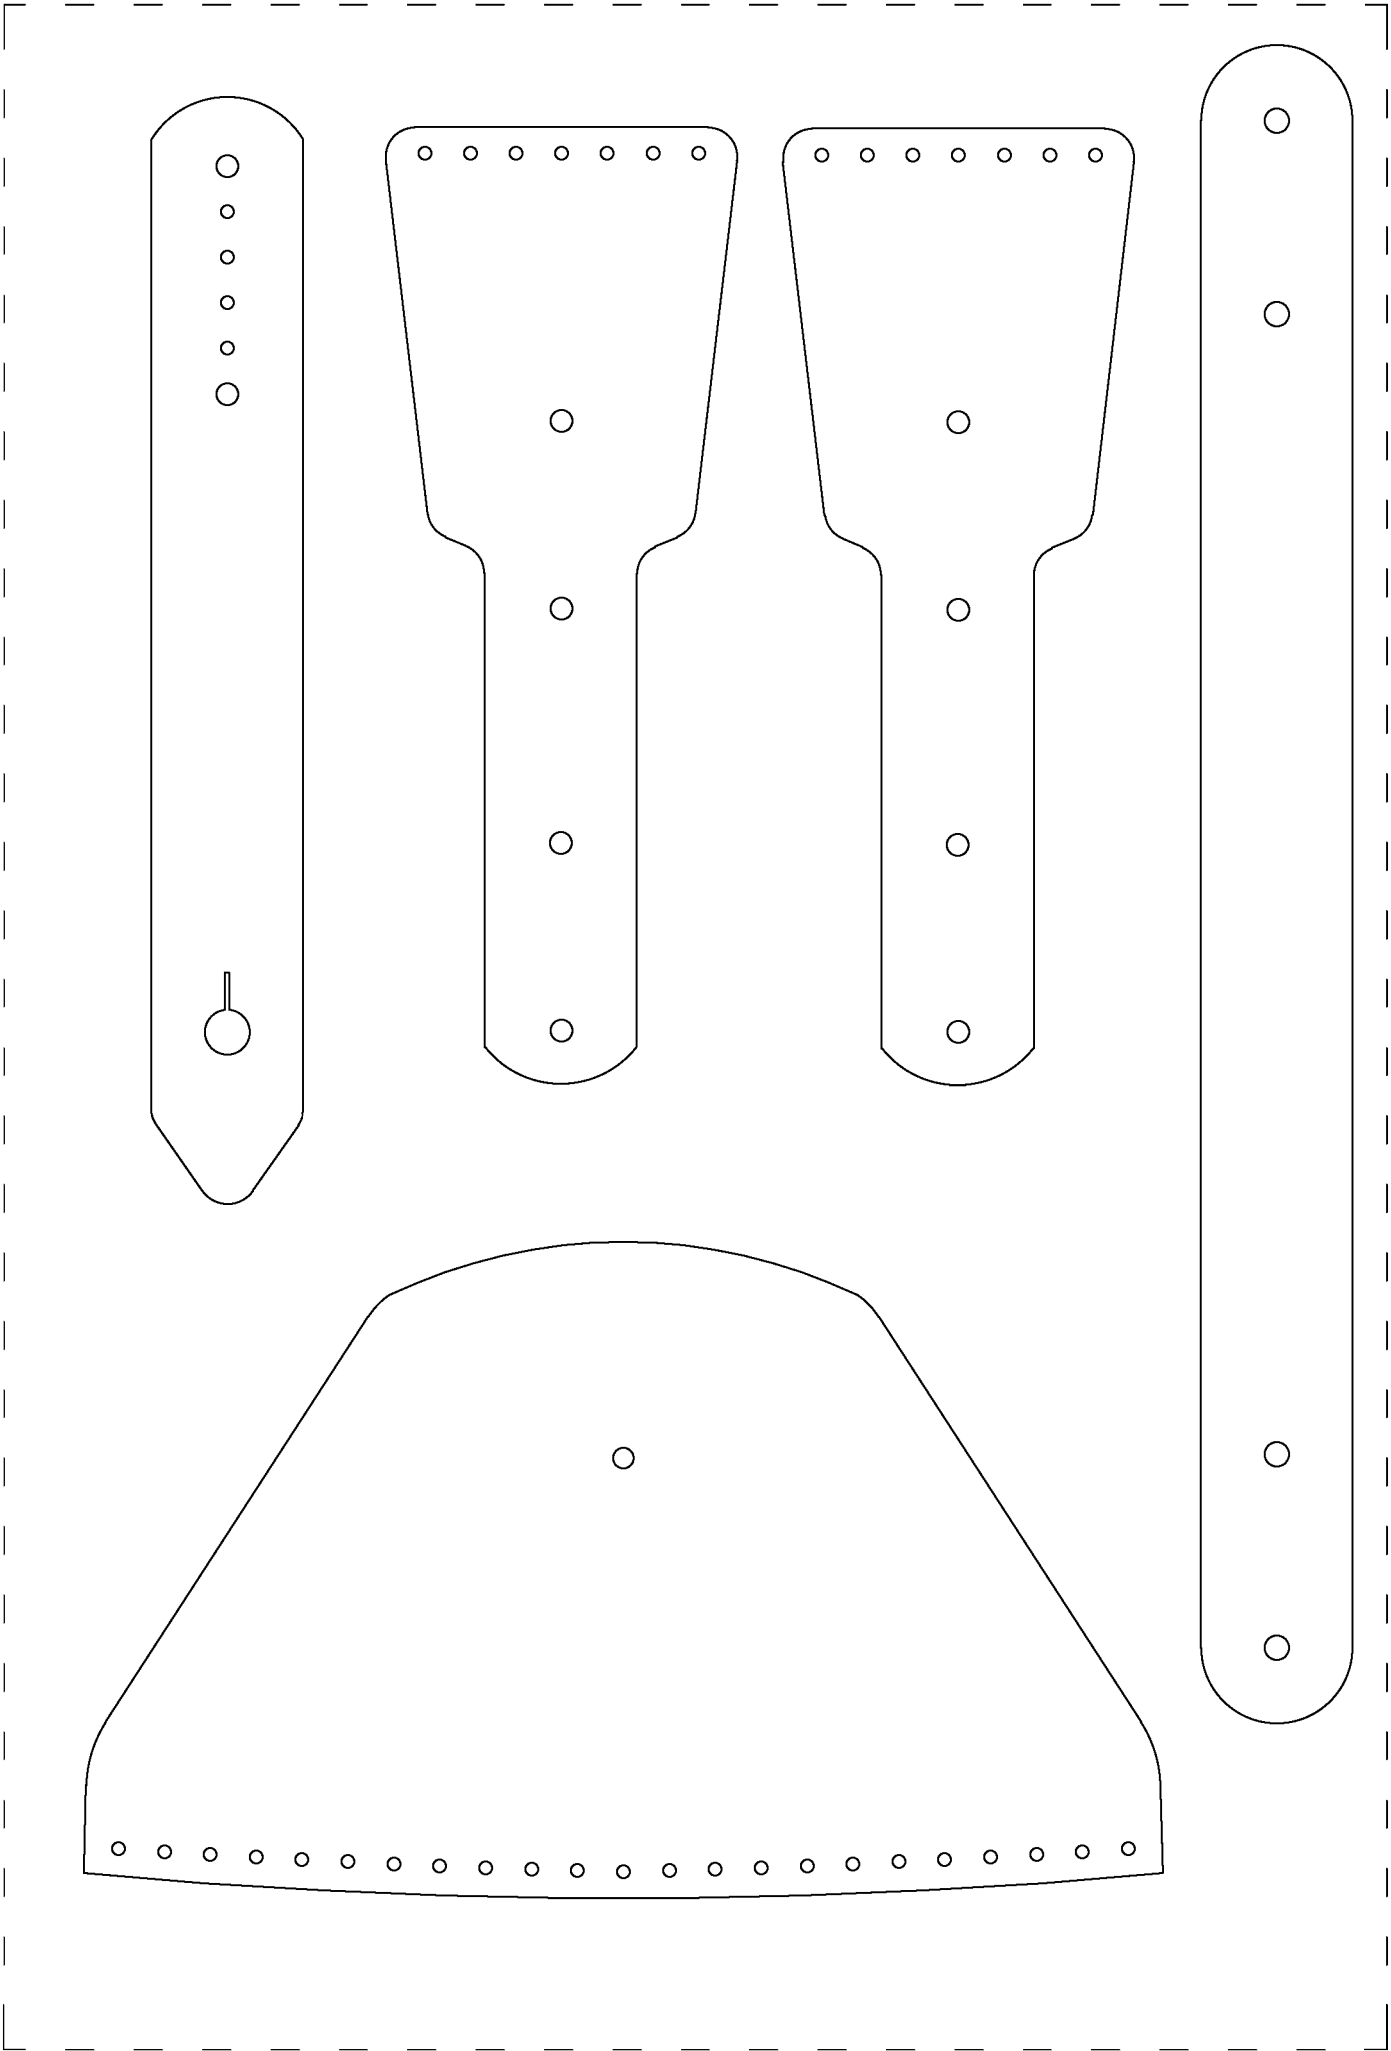 


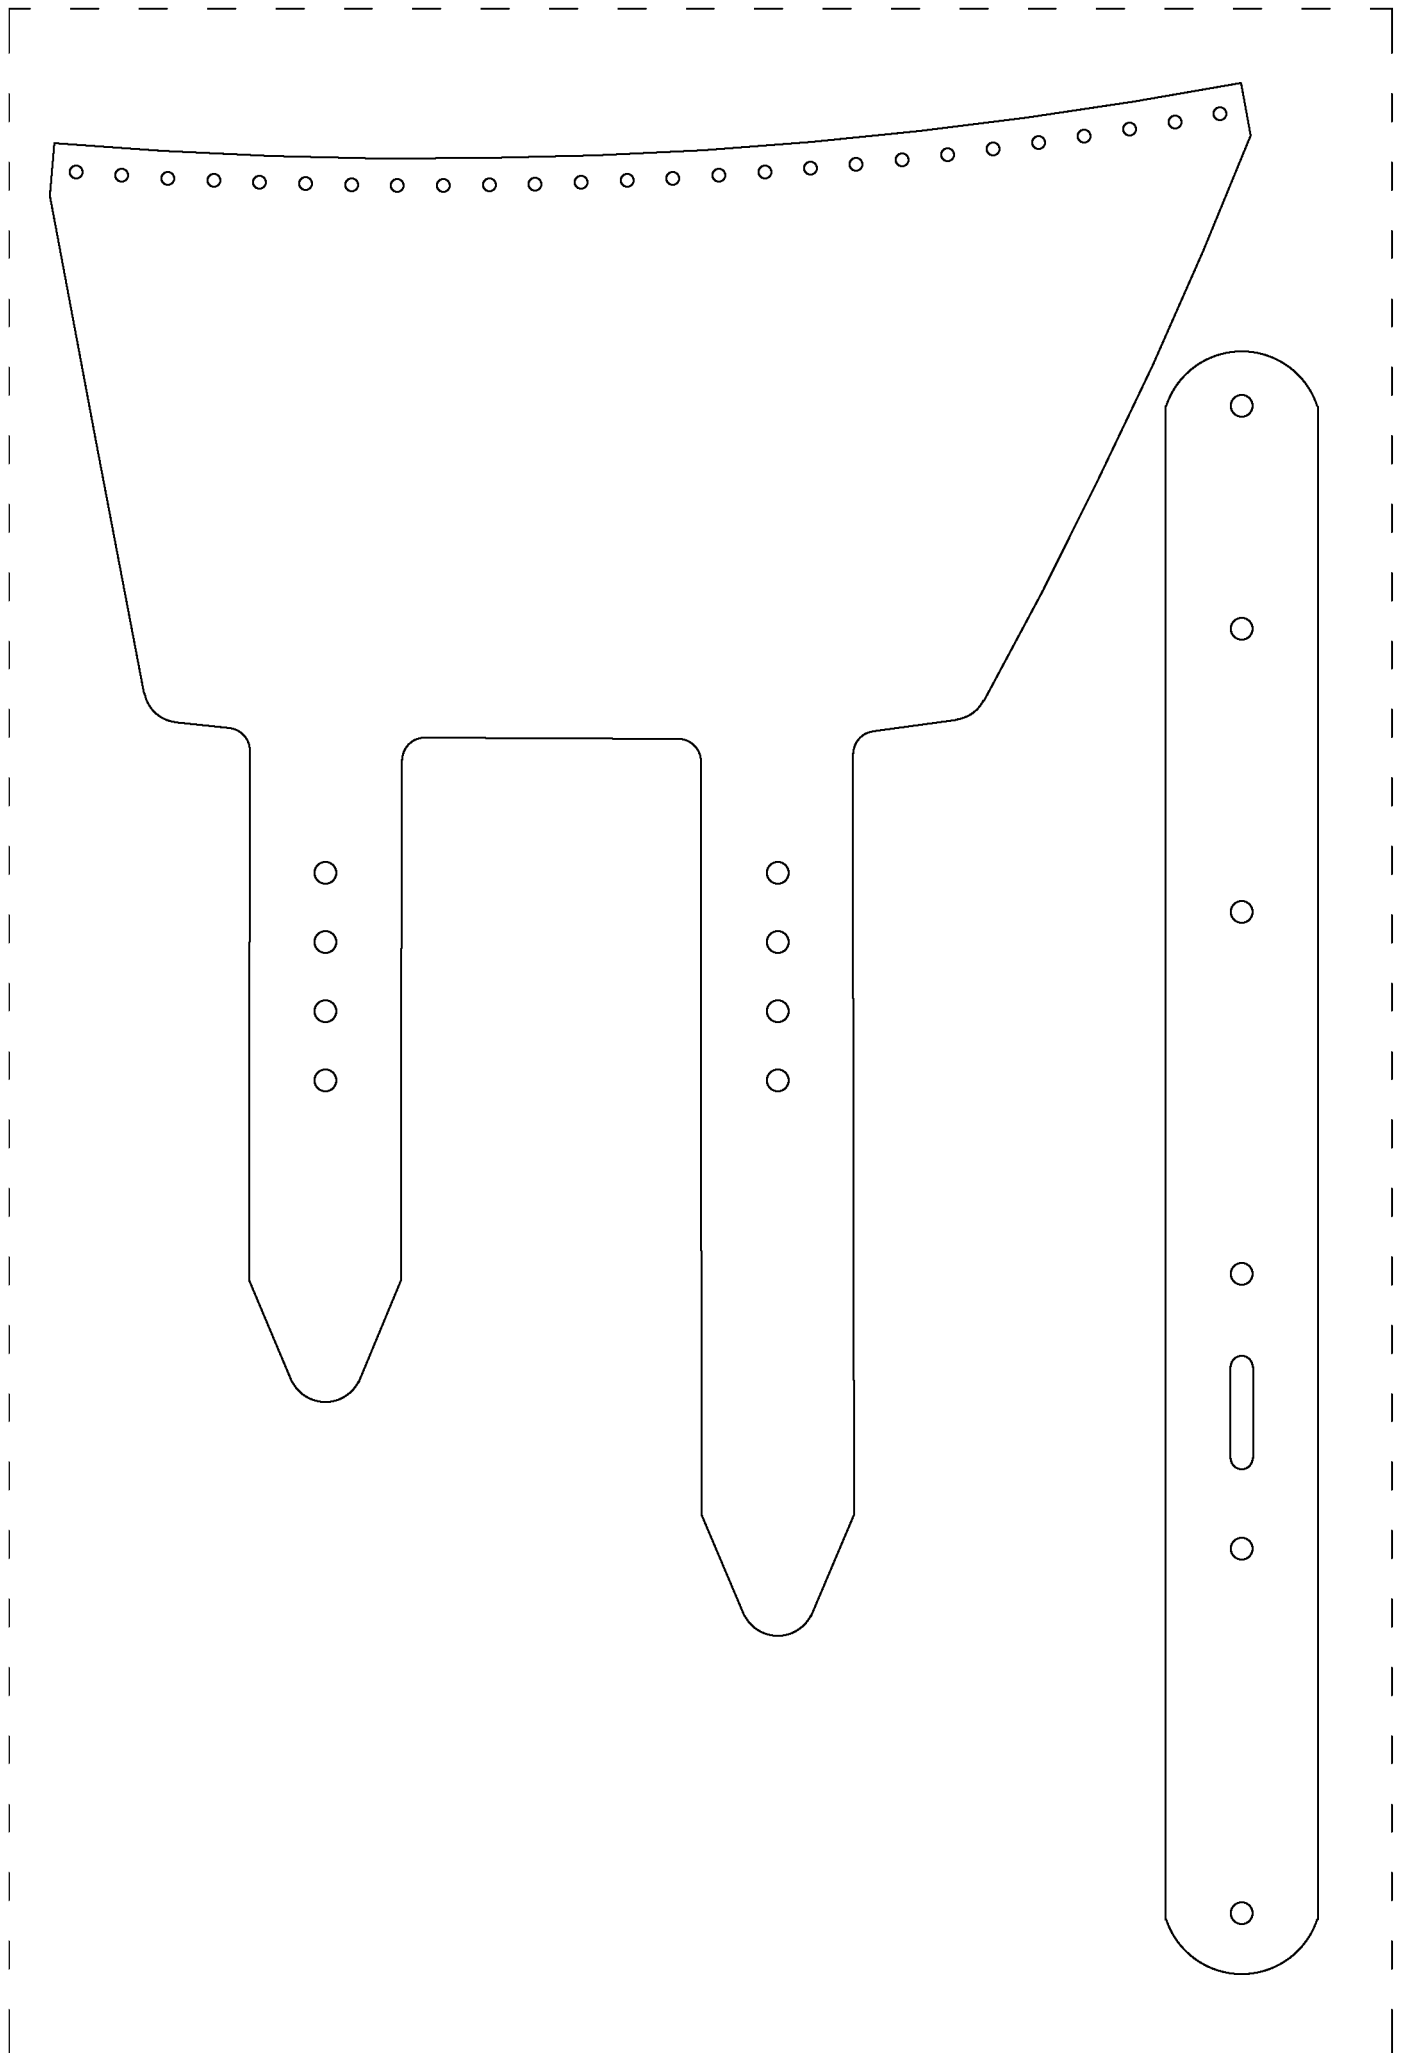 




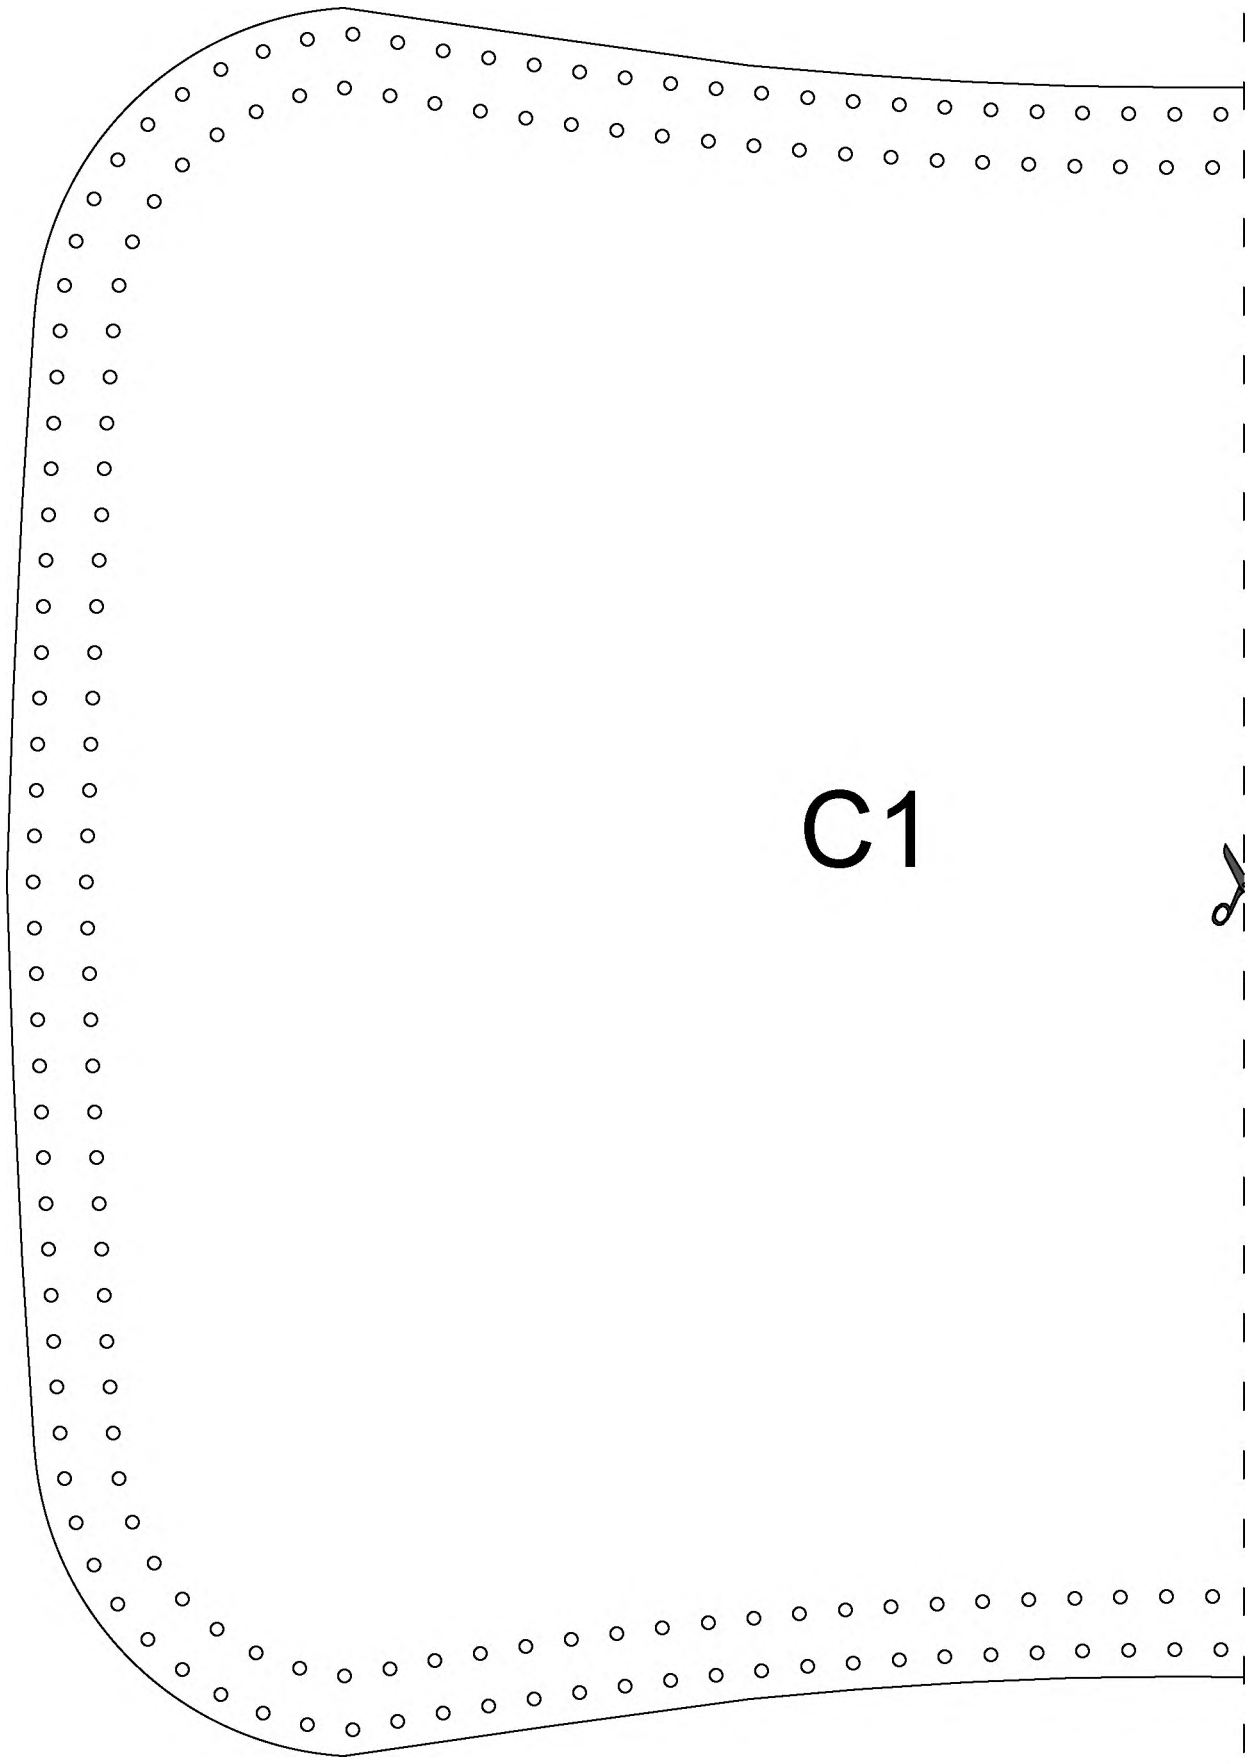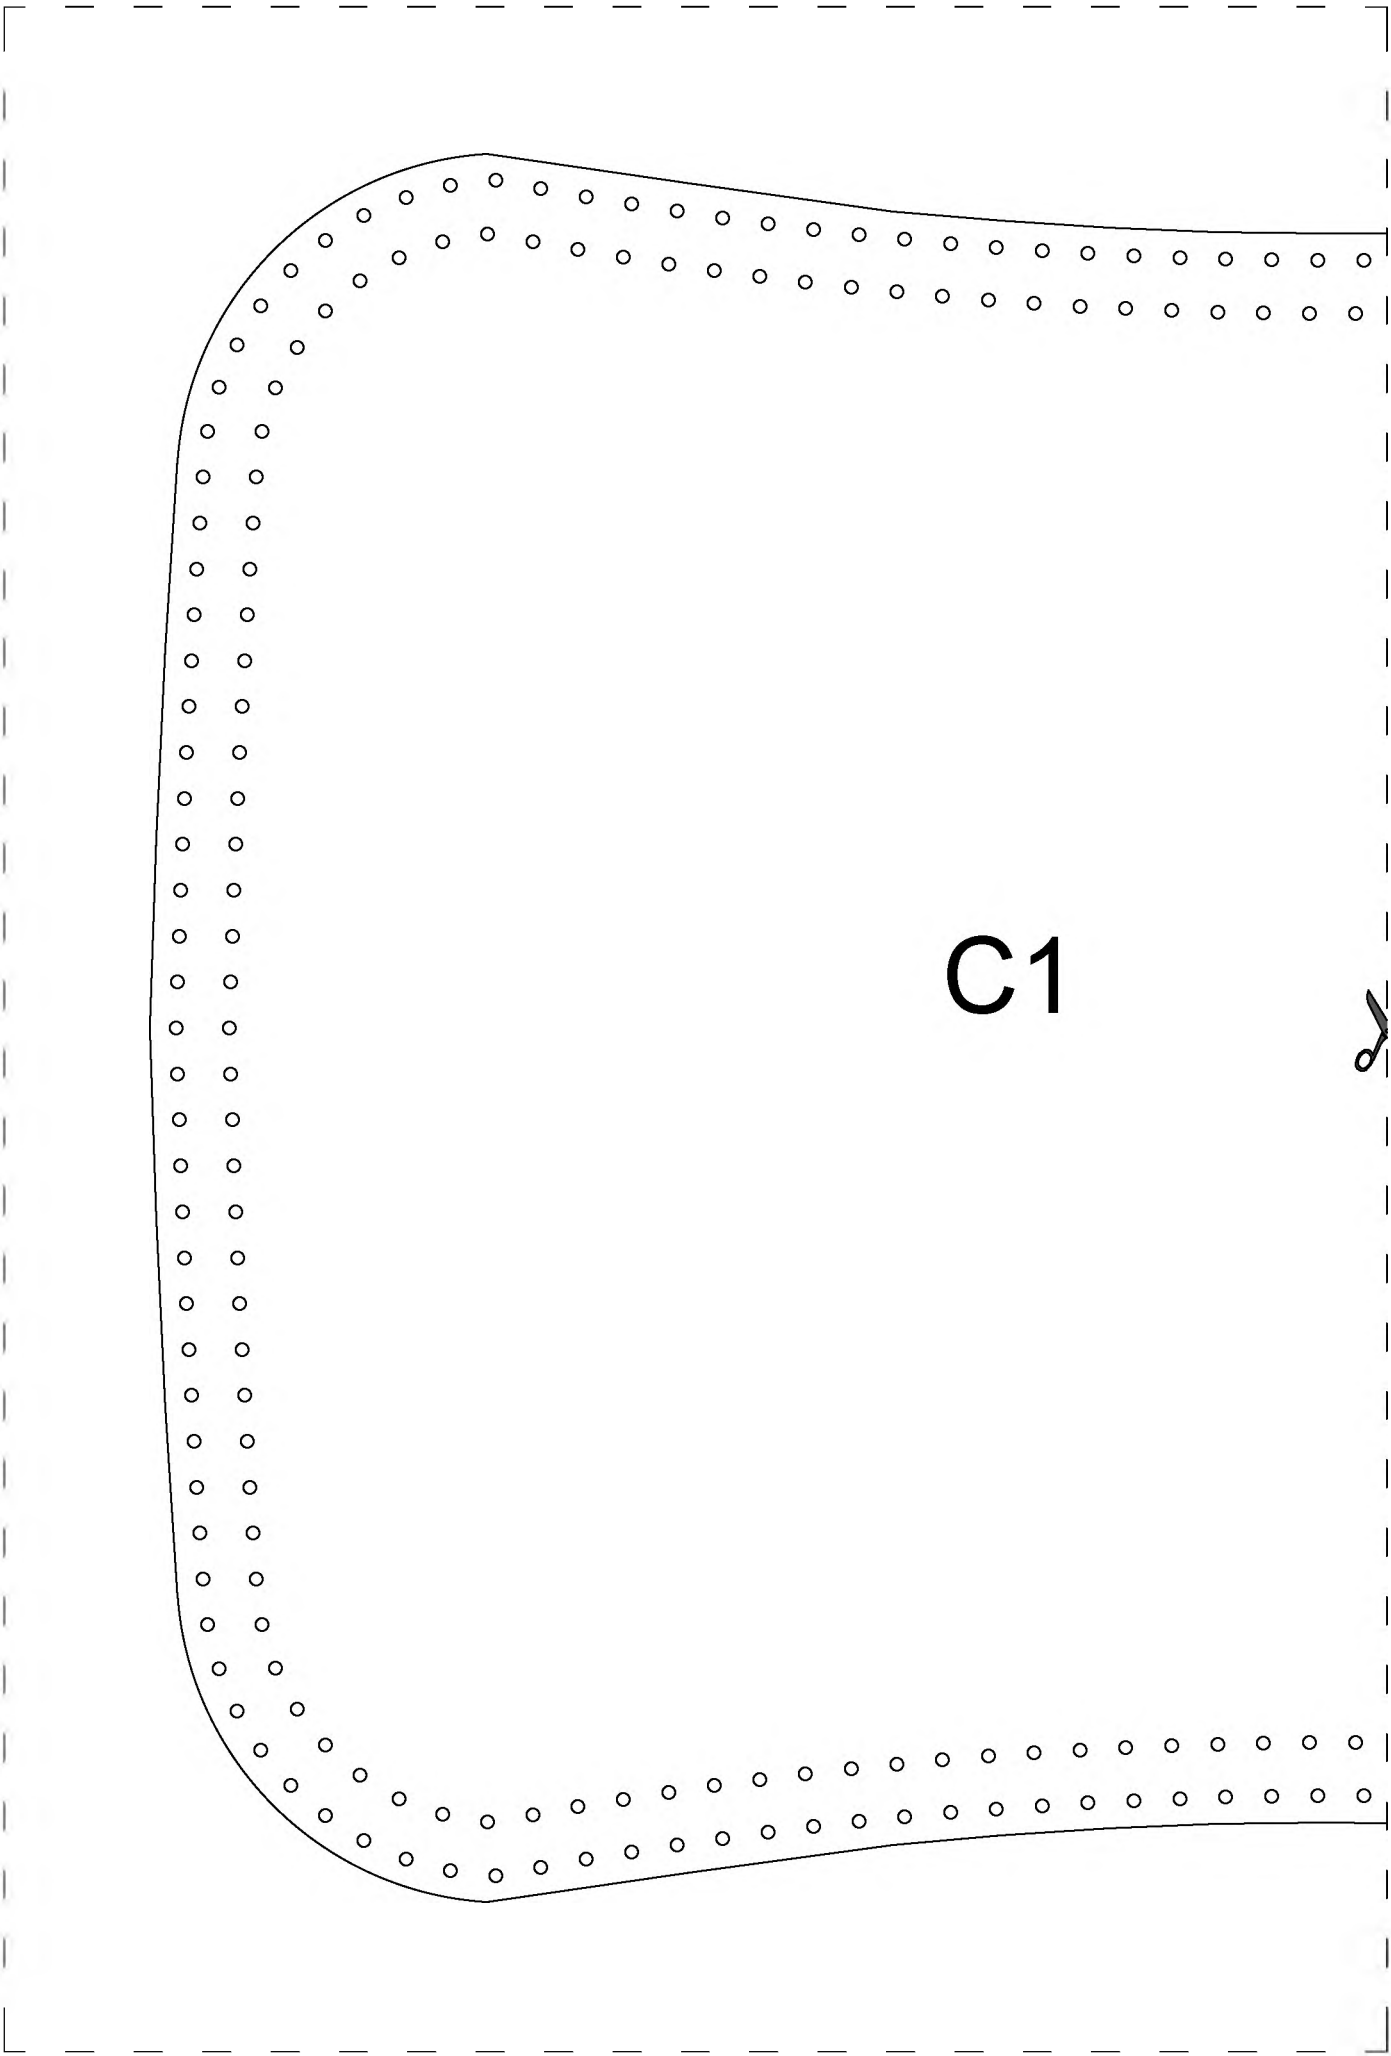  


C1



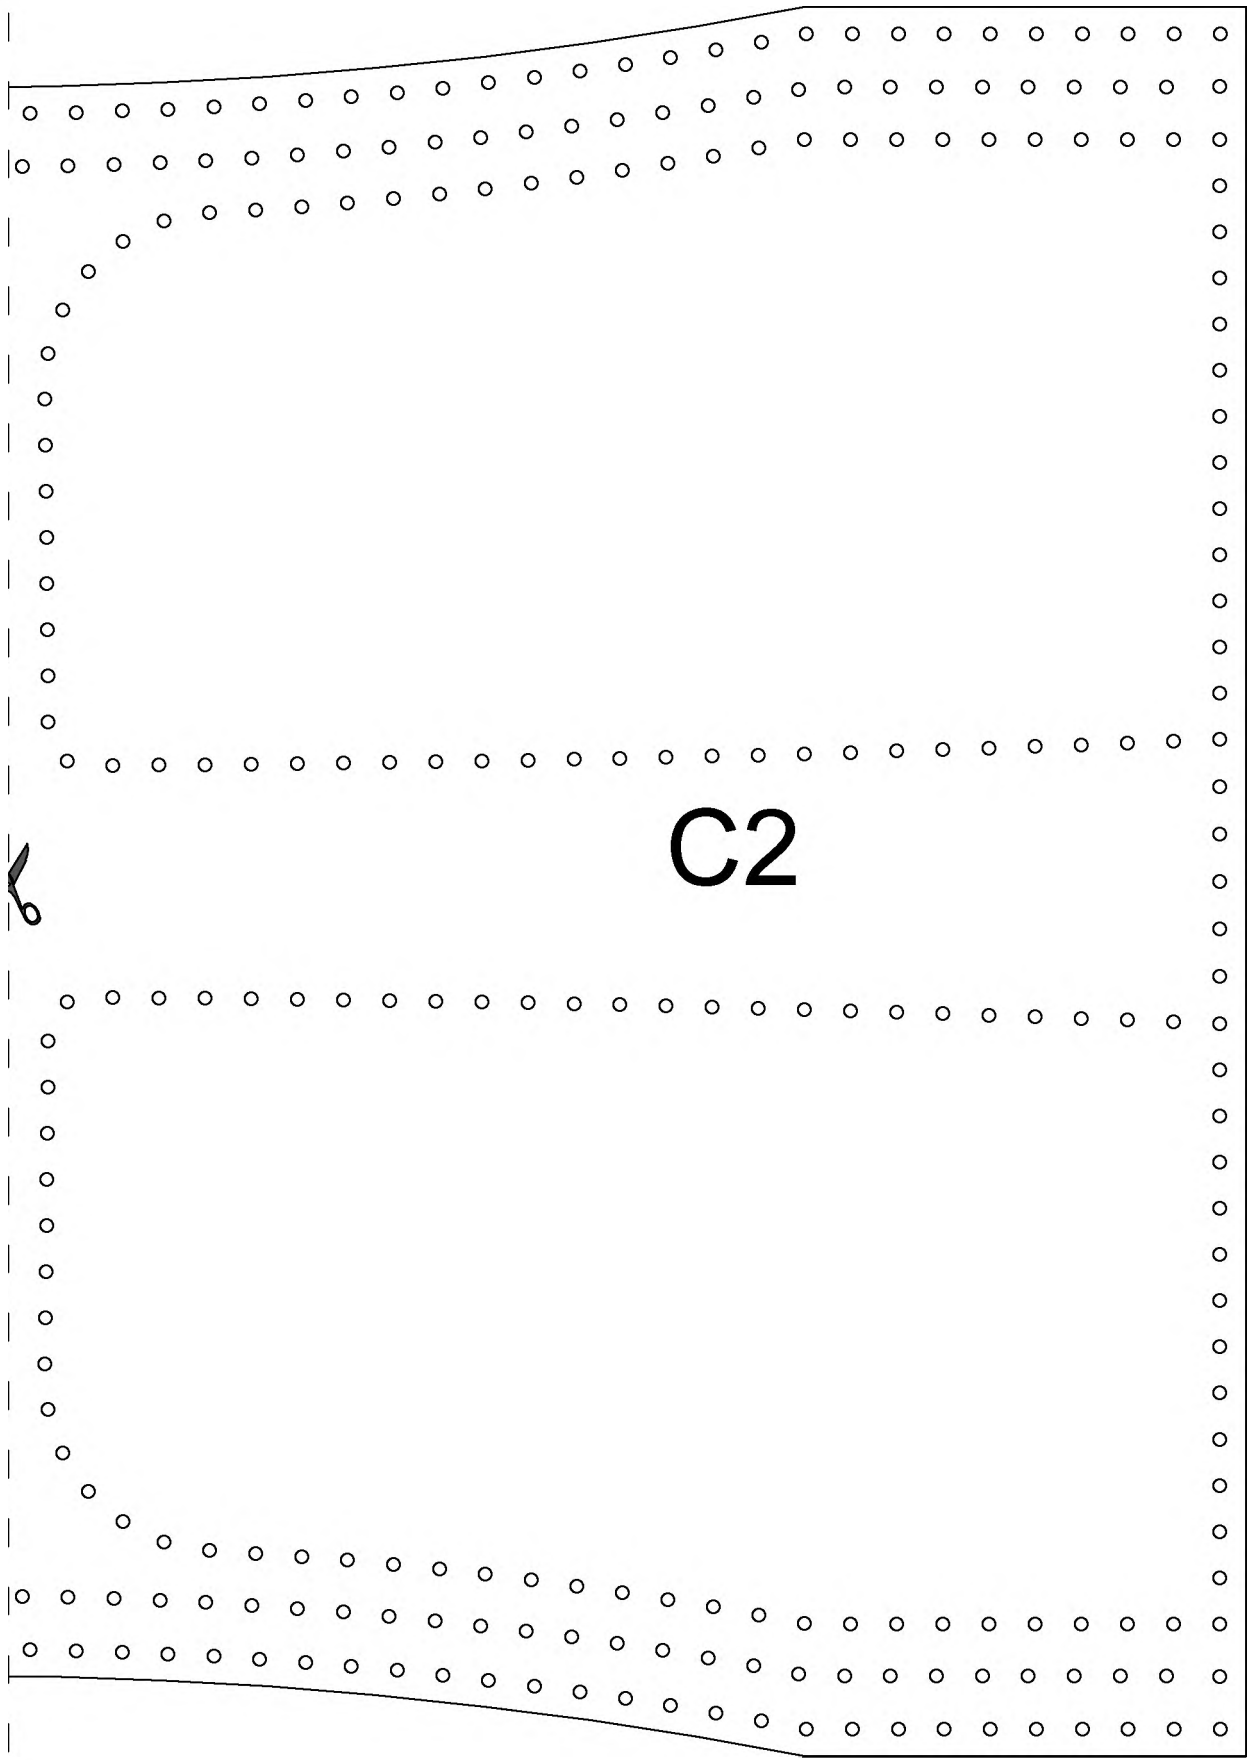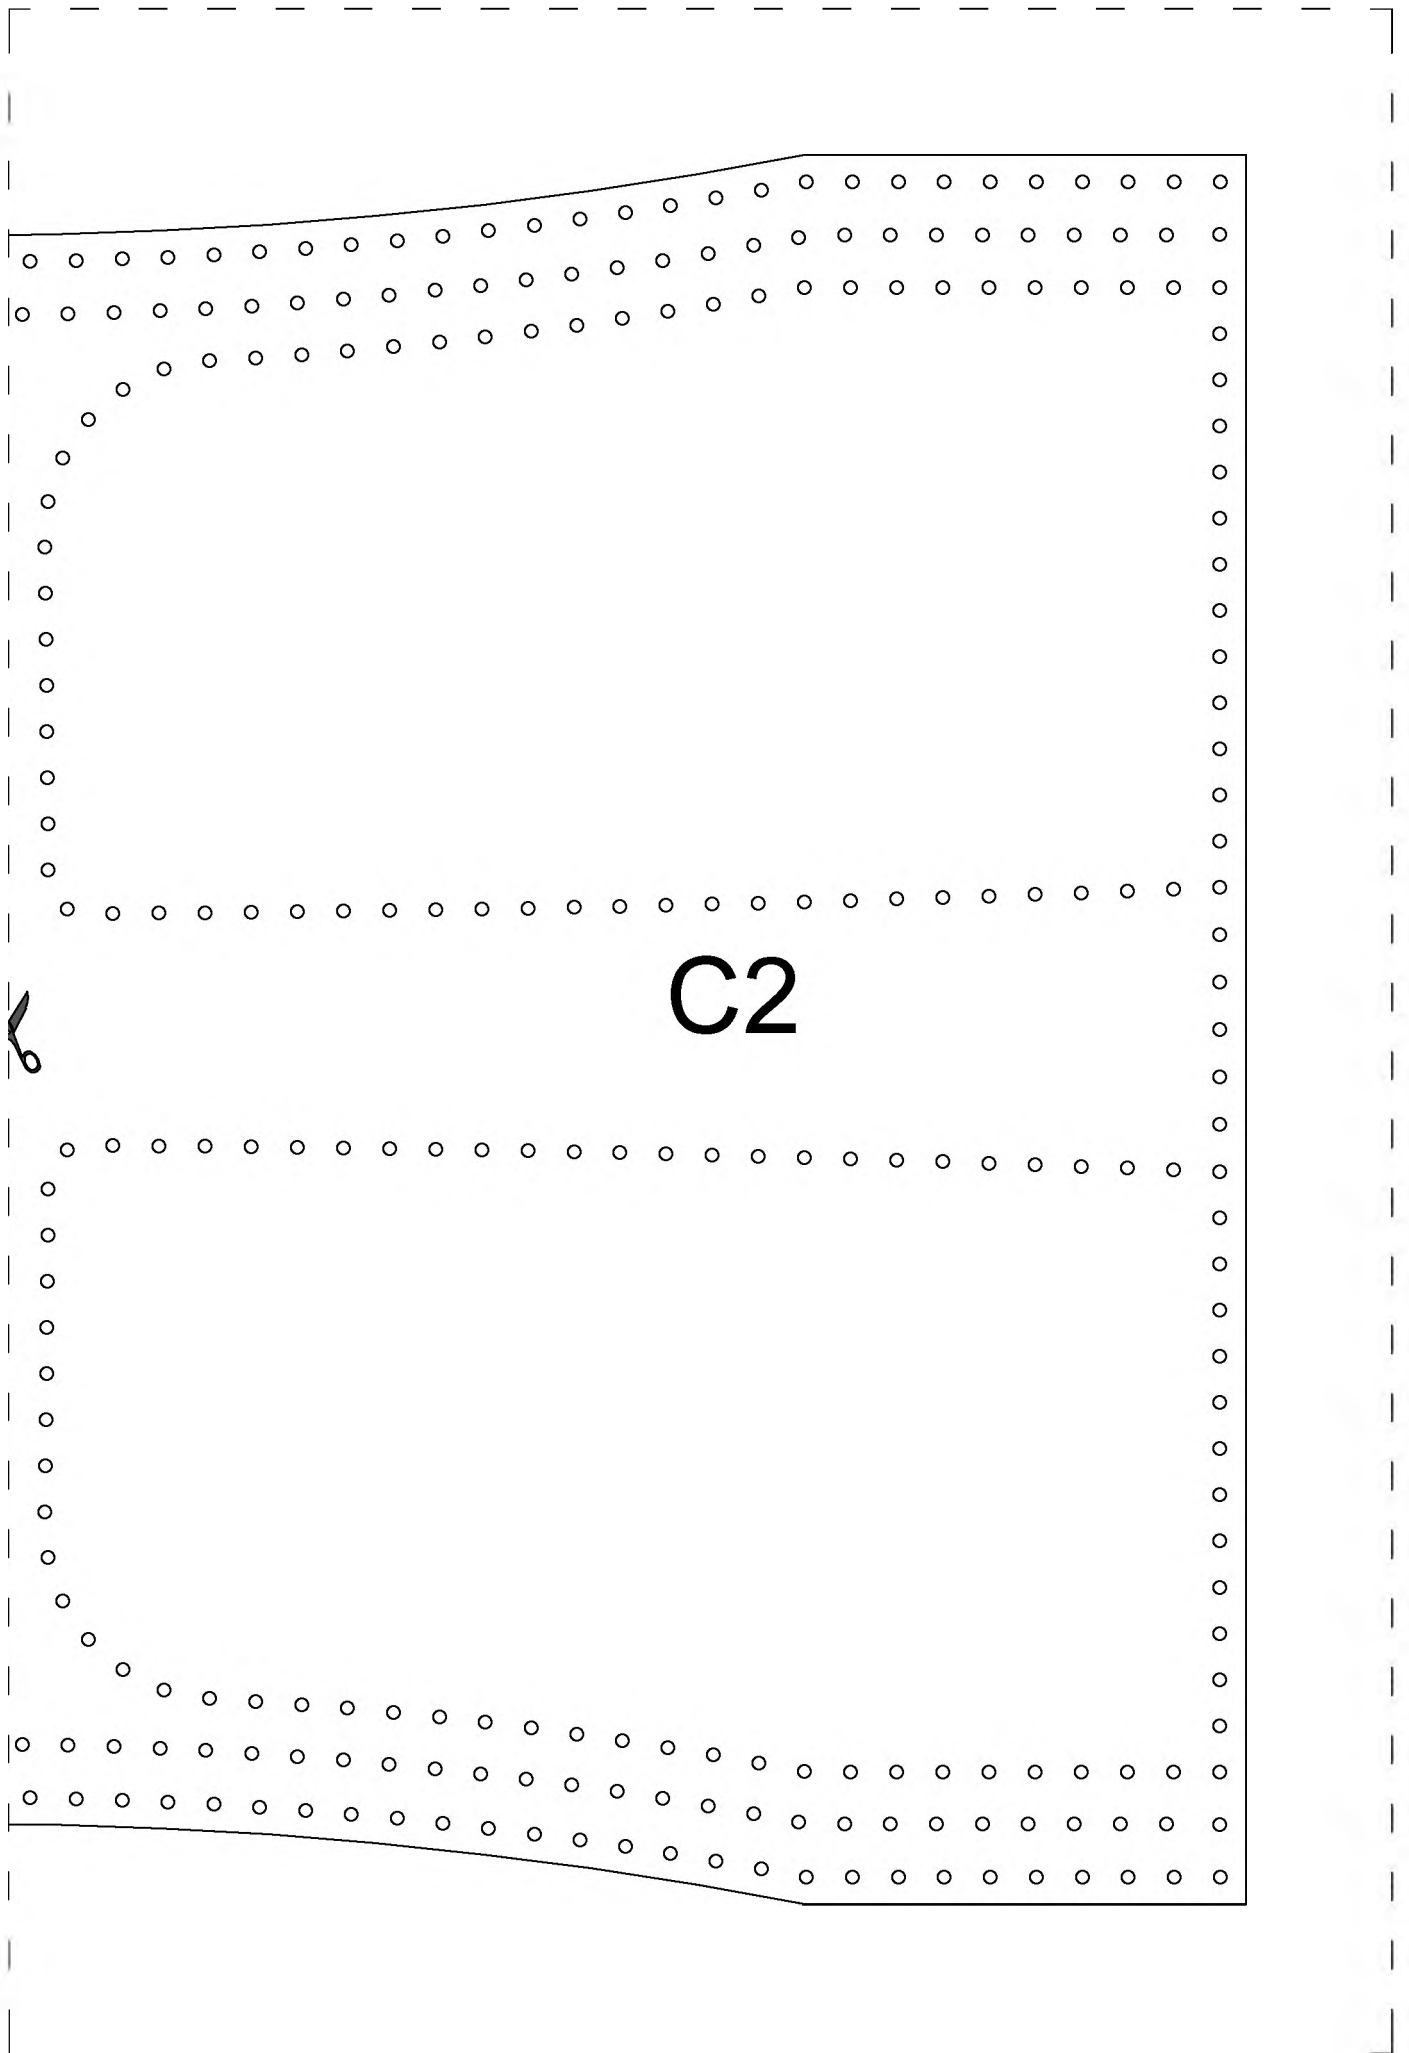  

C2



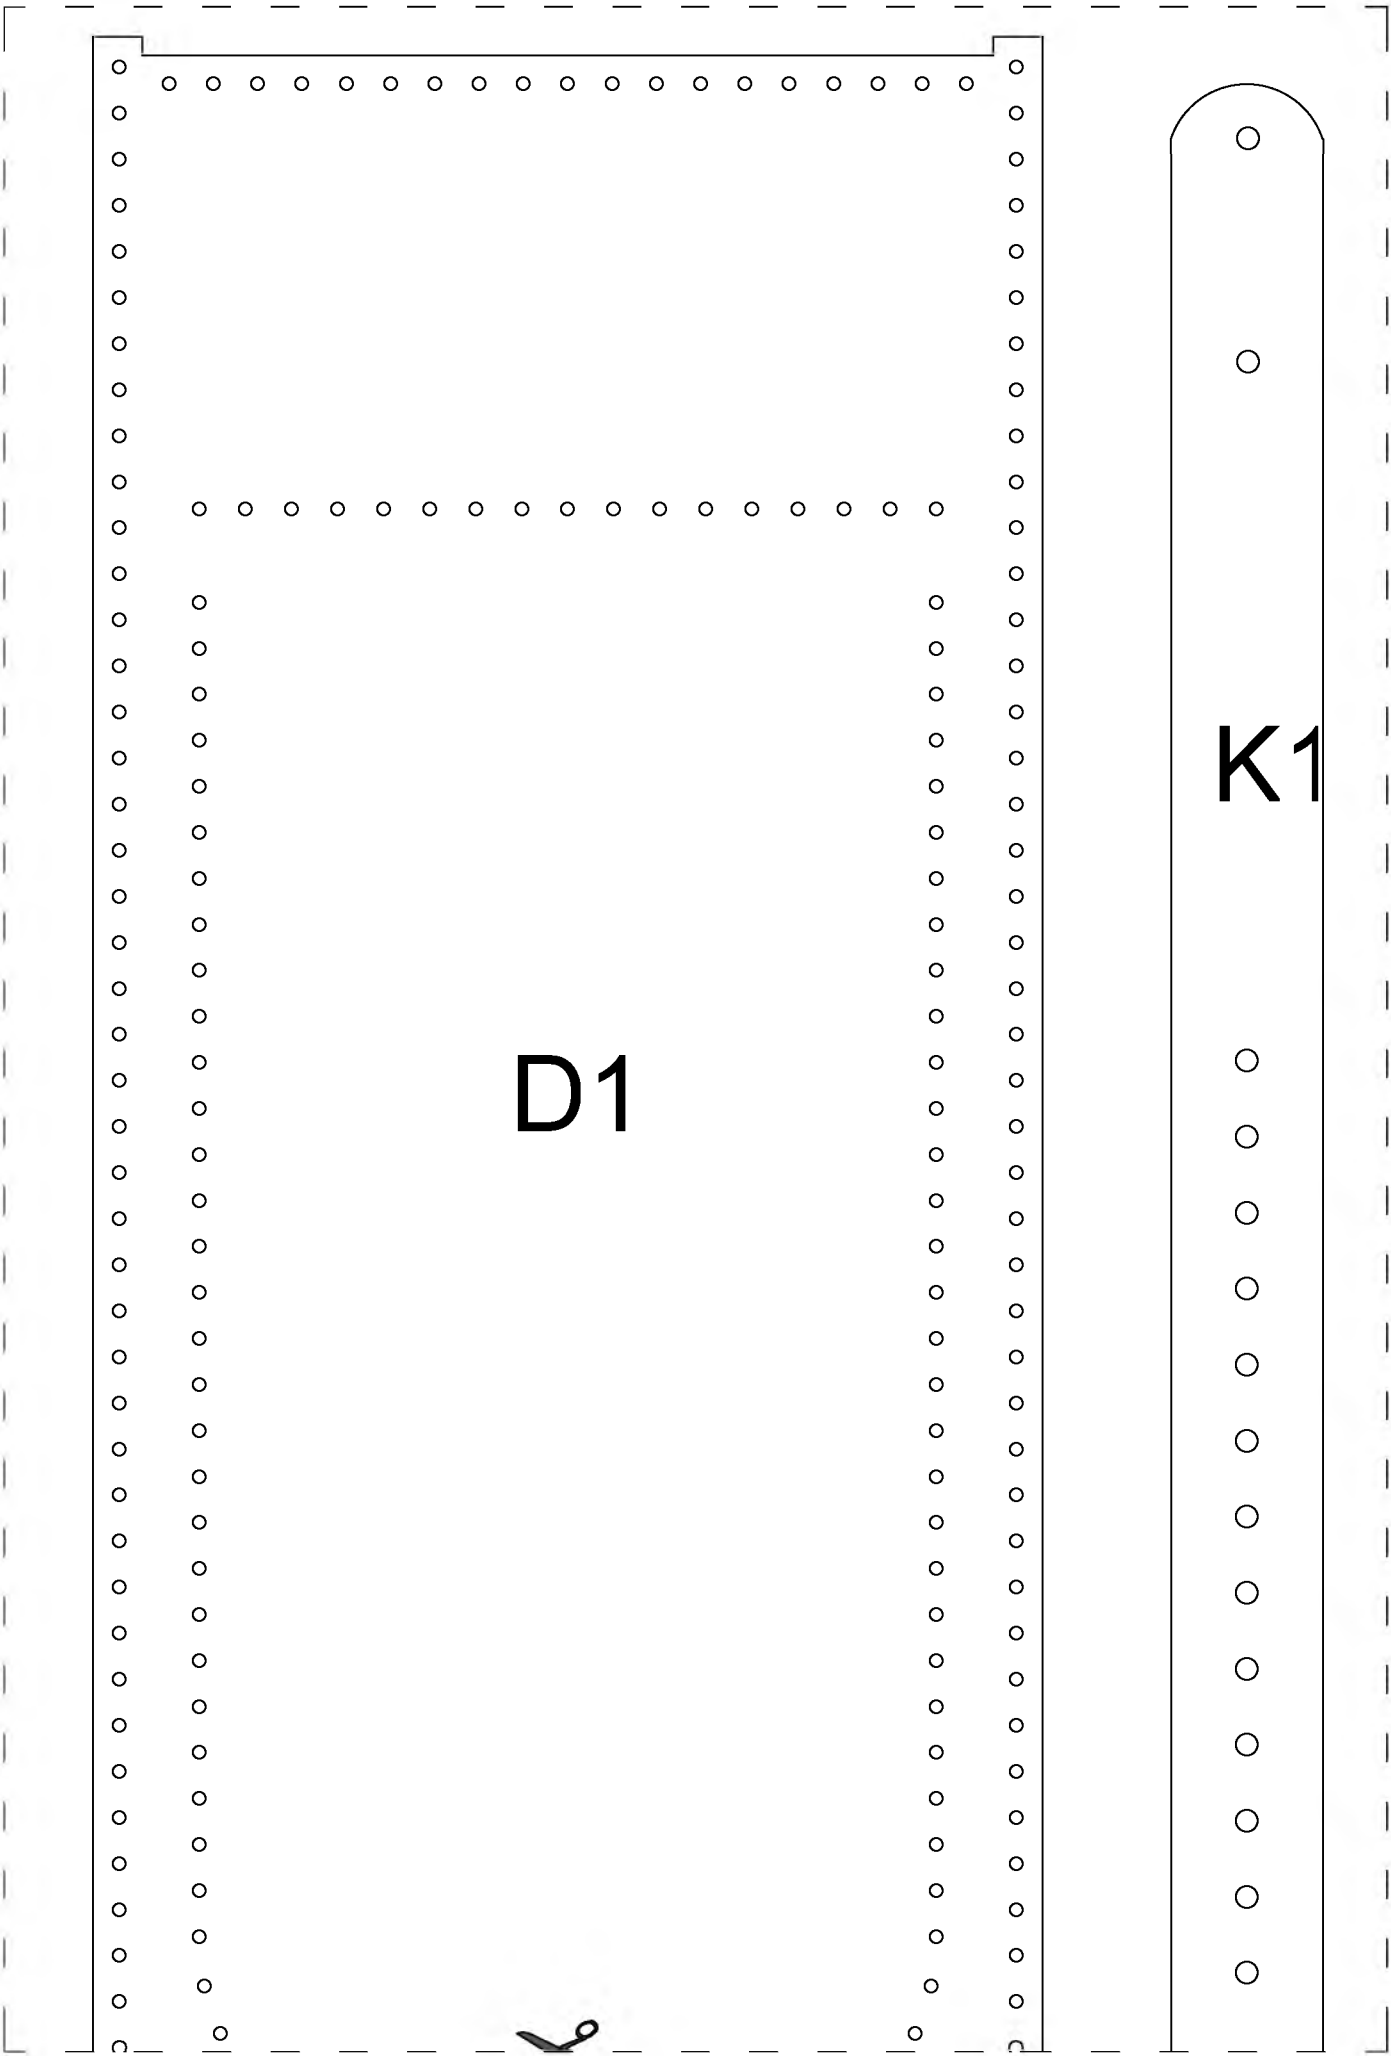 

D1

 
K1

D2

K2

J1




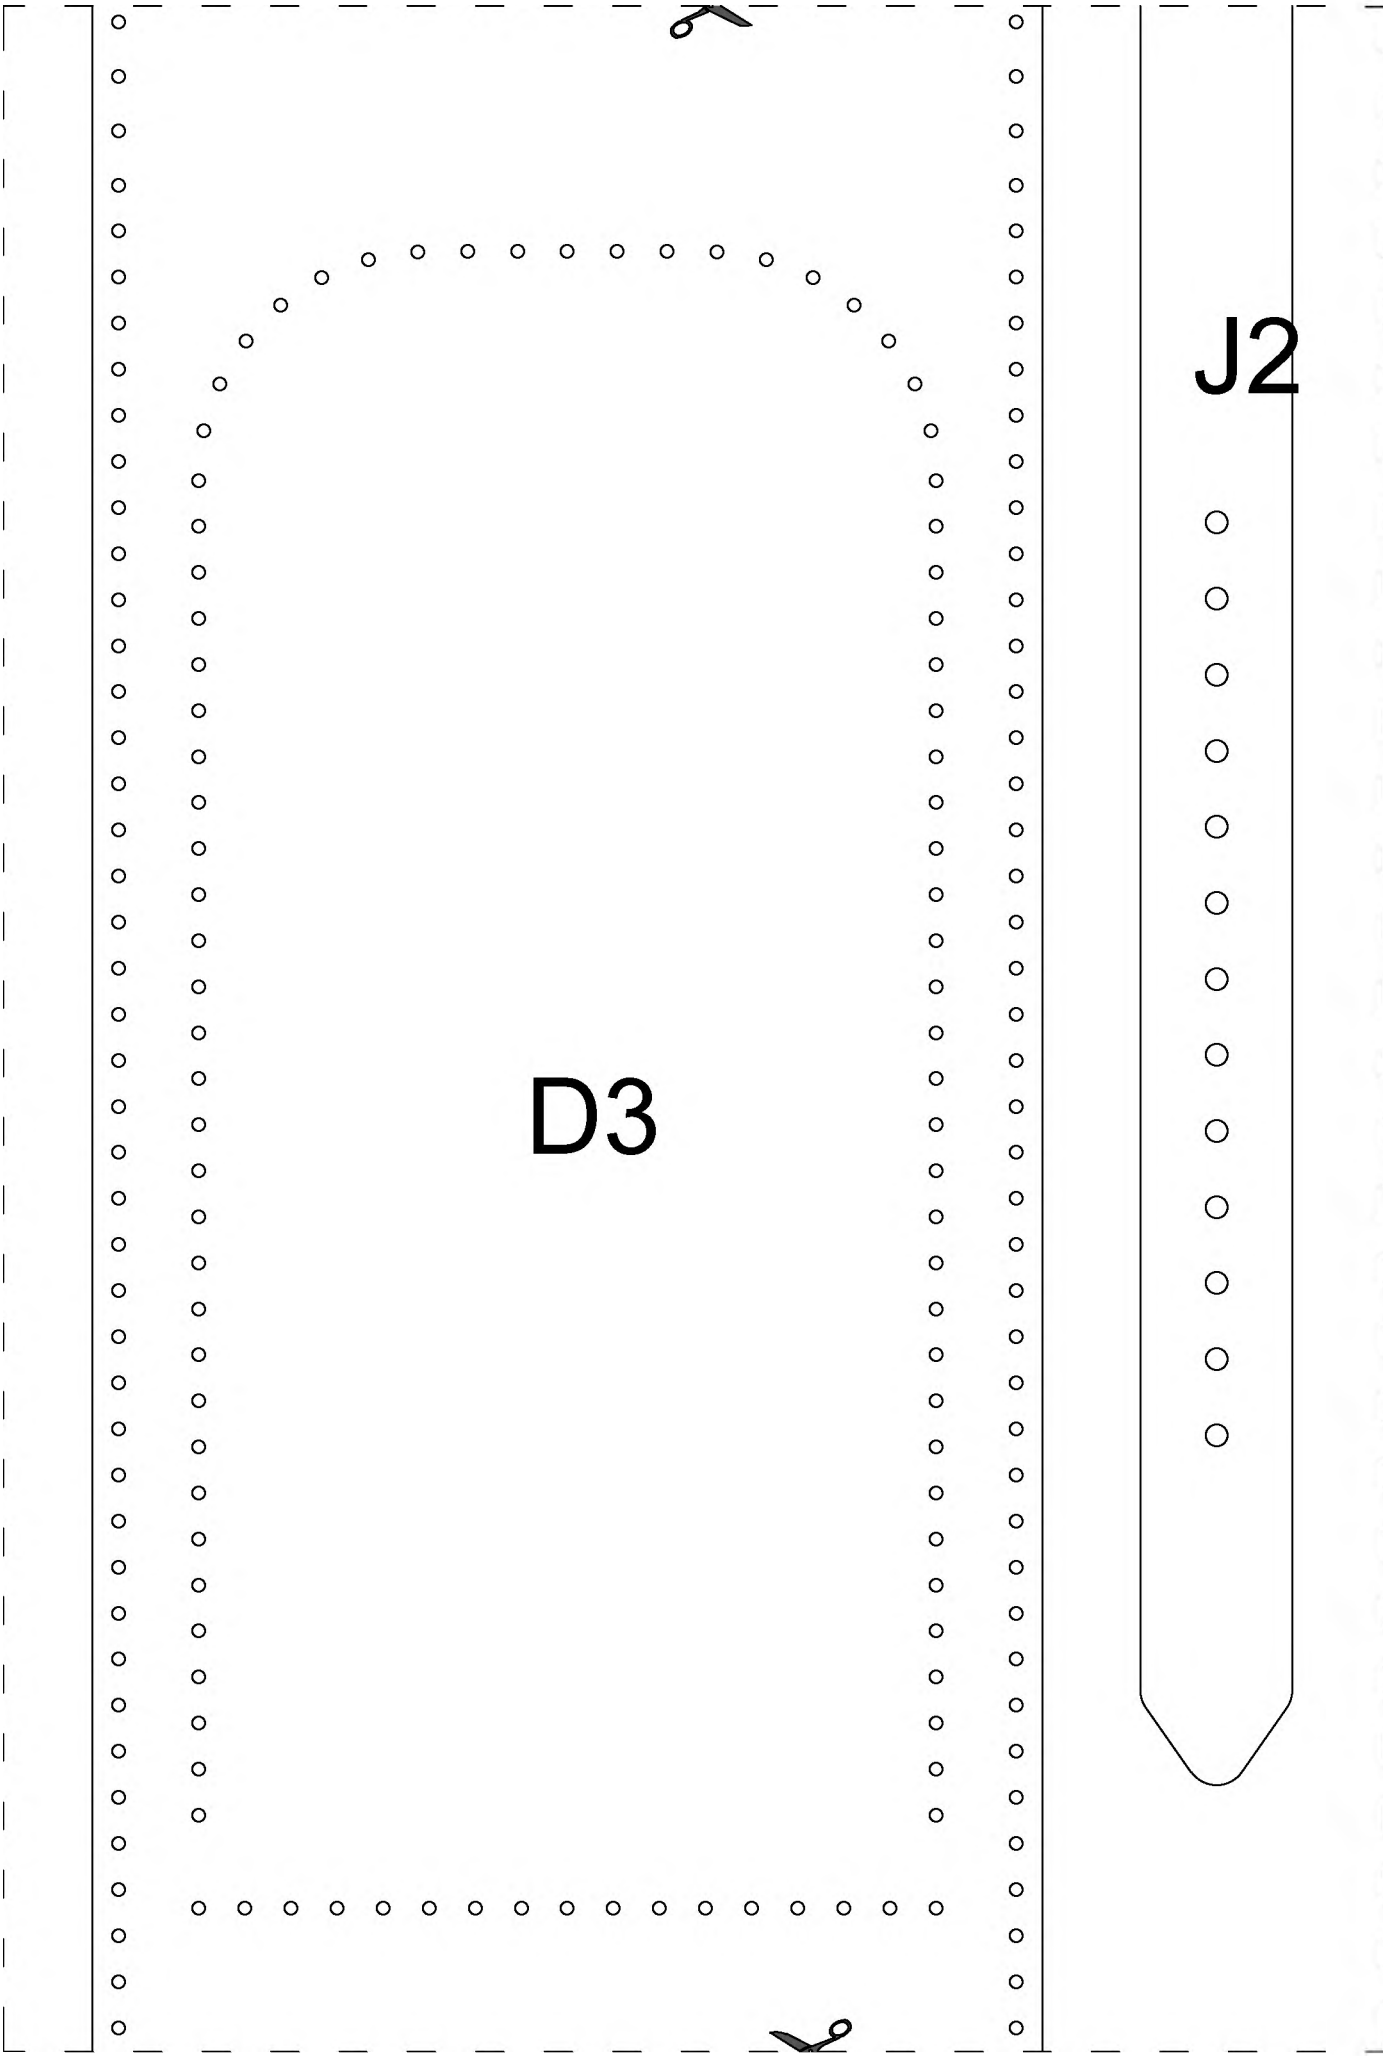





D3




 J2

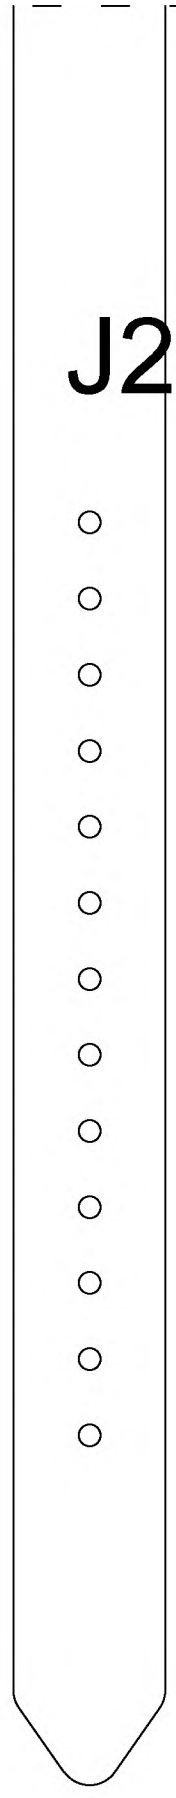

D4

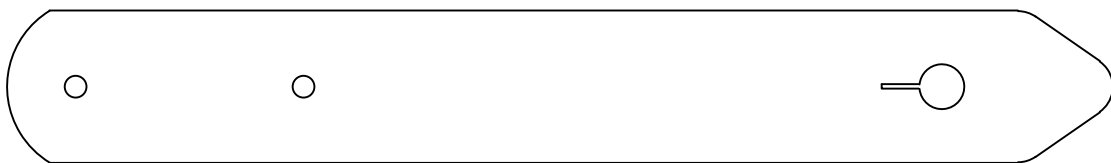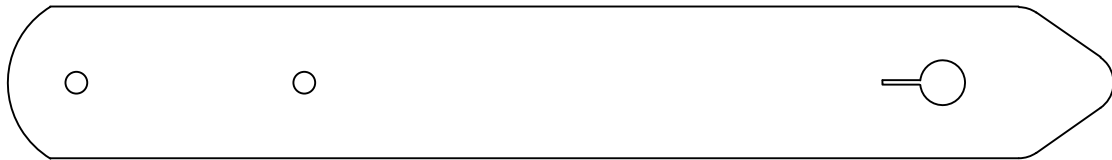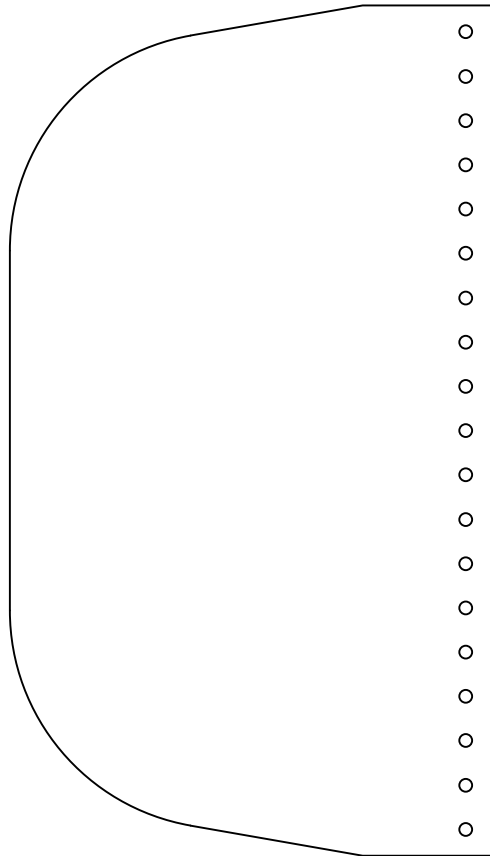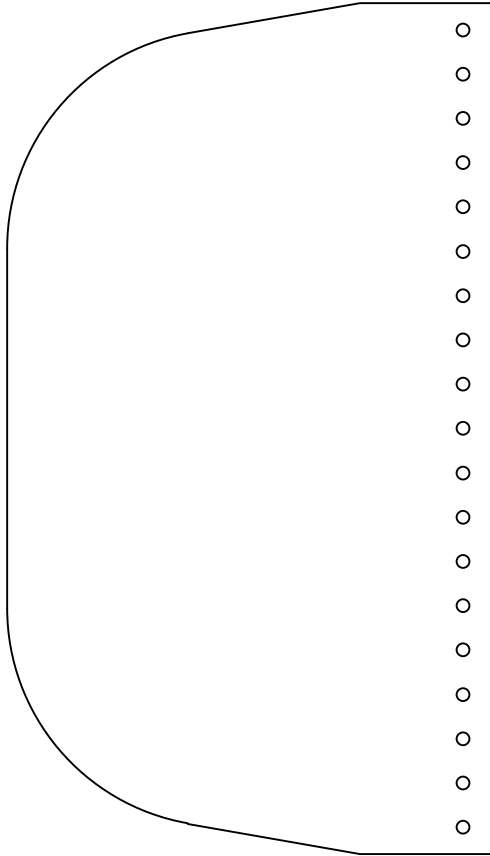    


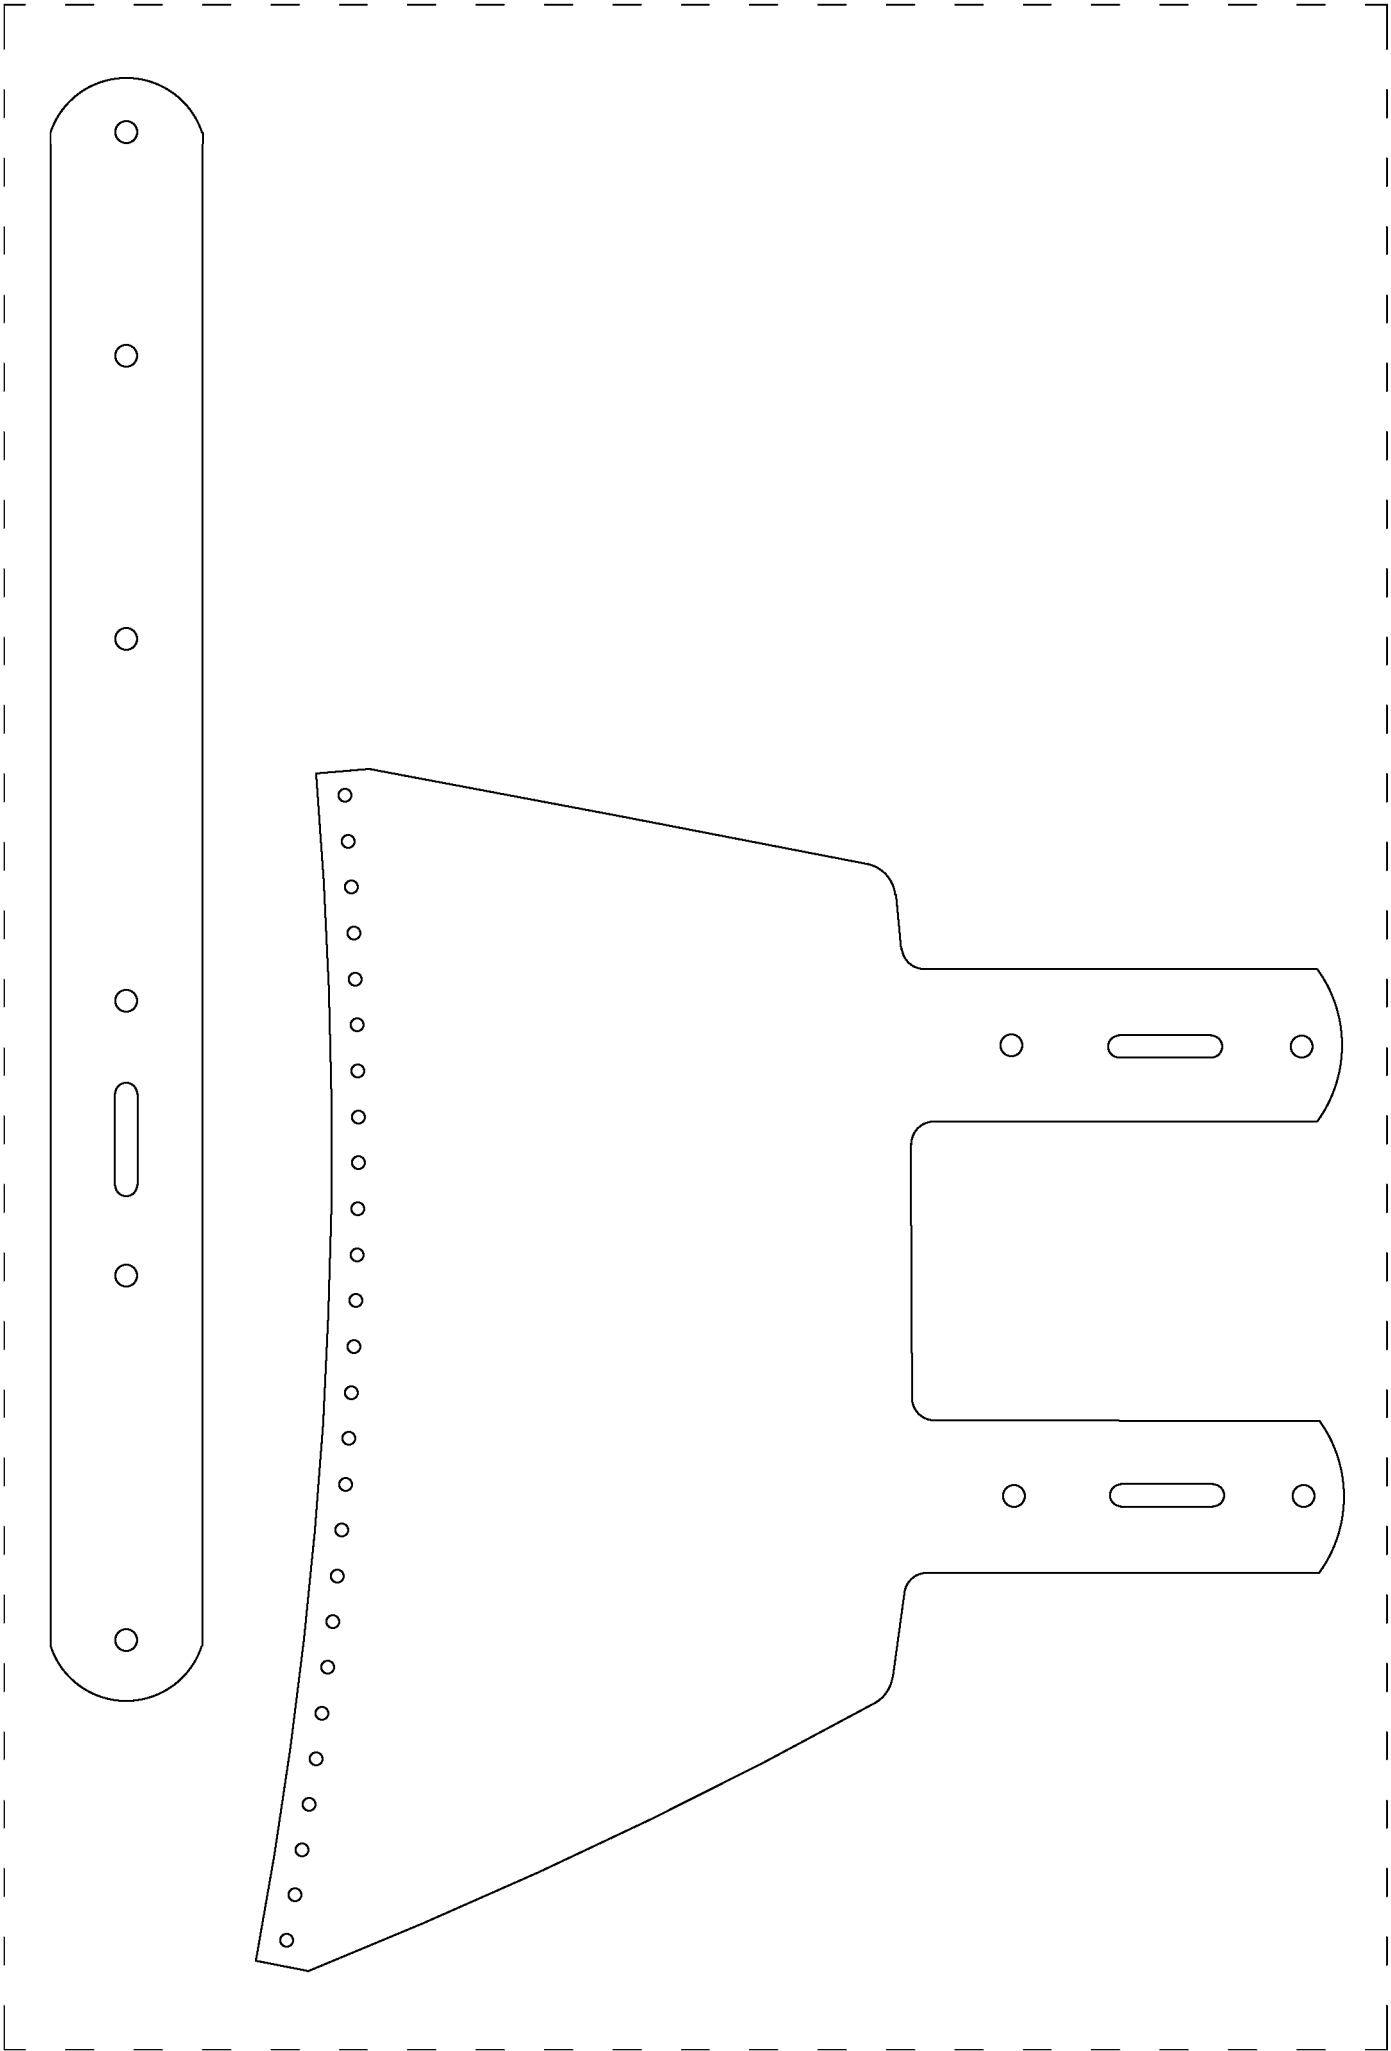 


E1






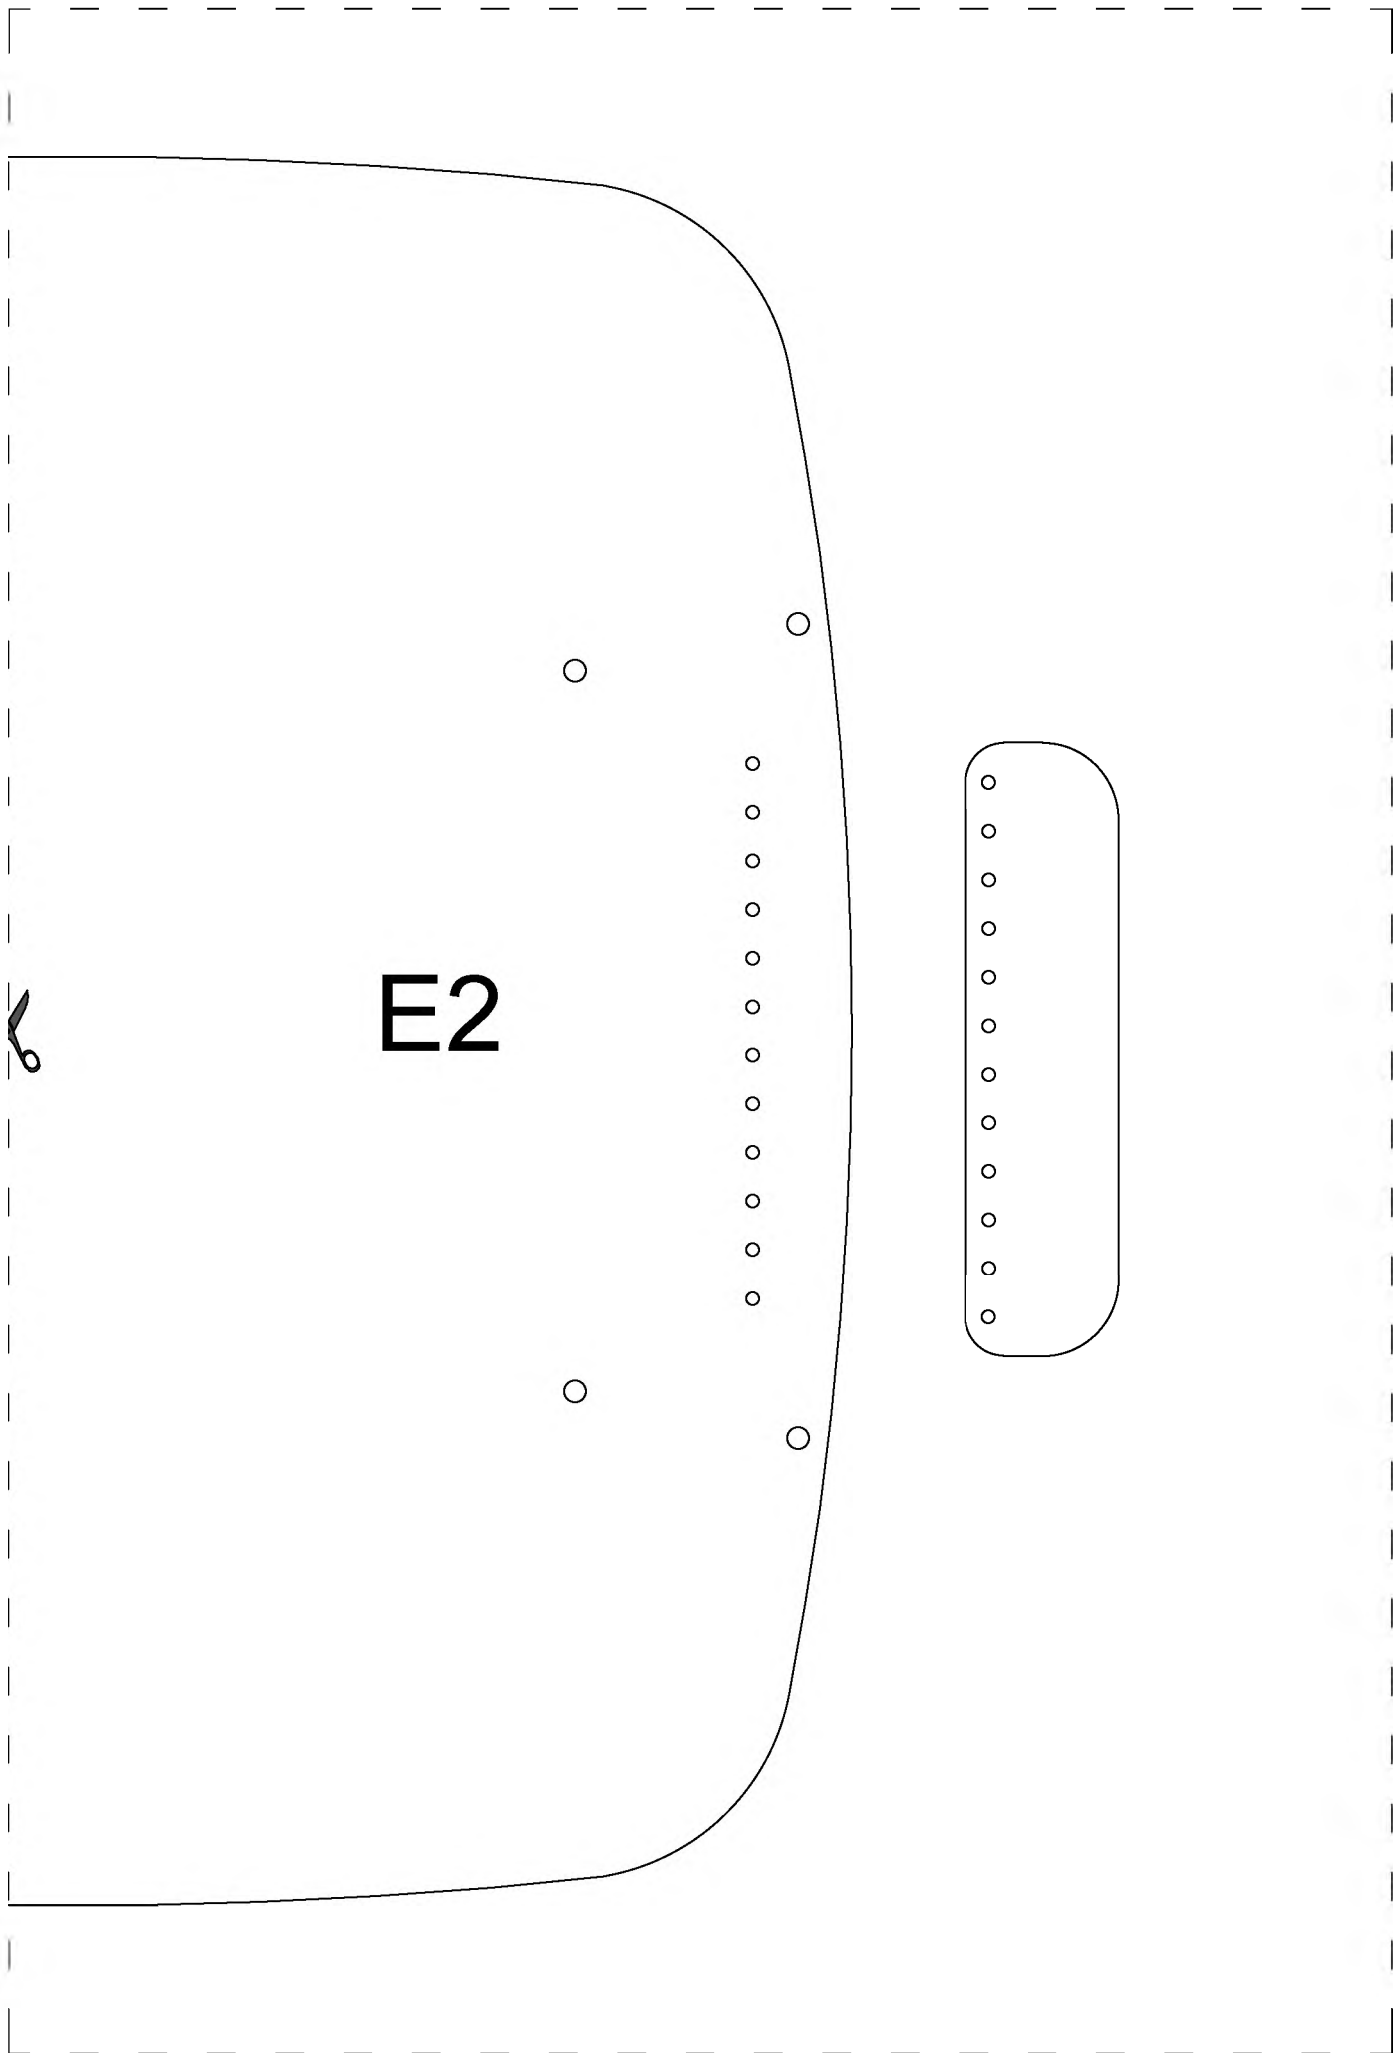 


E2

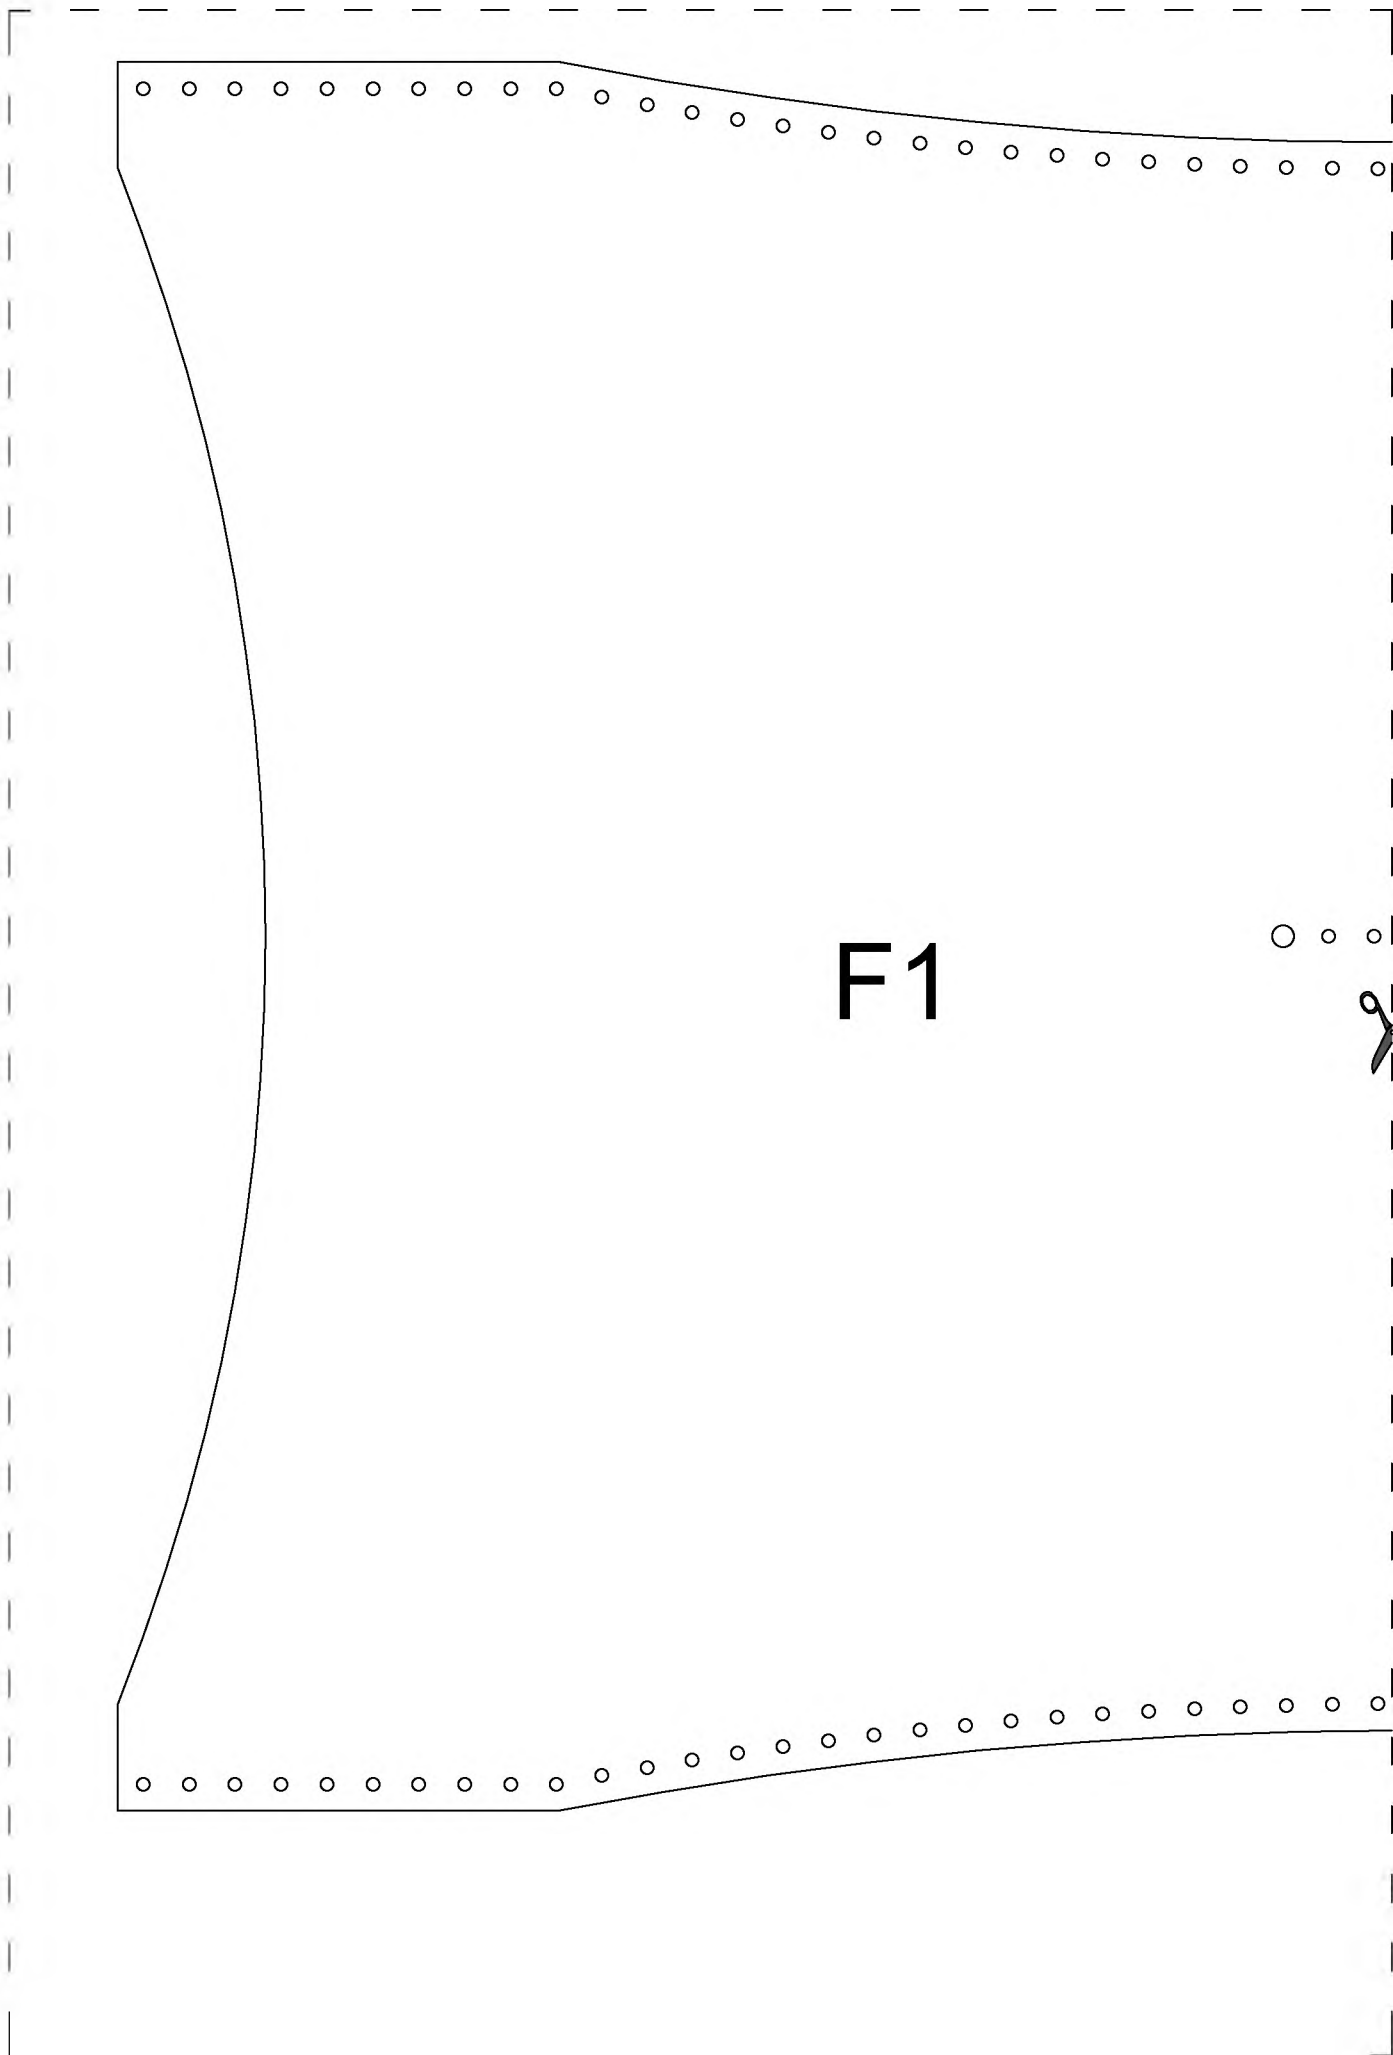 



F1

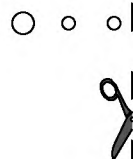 

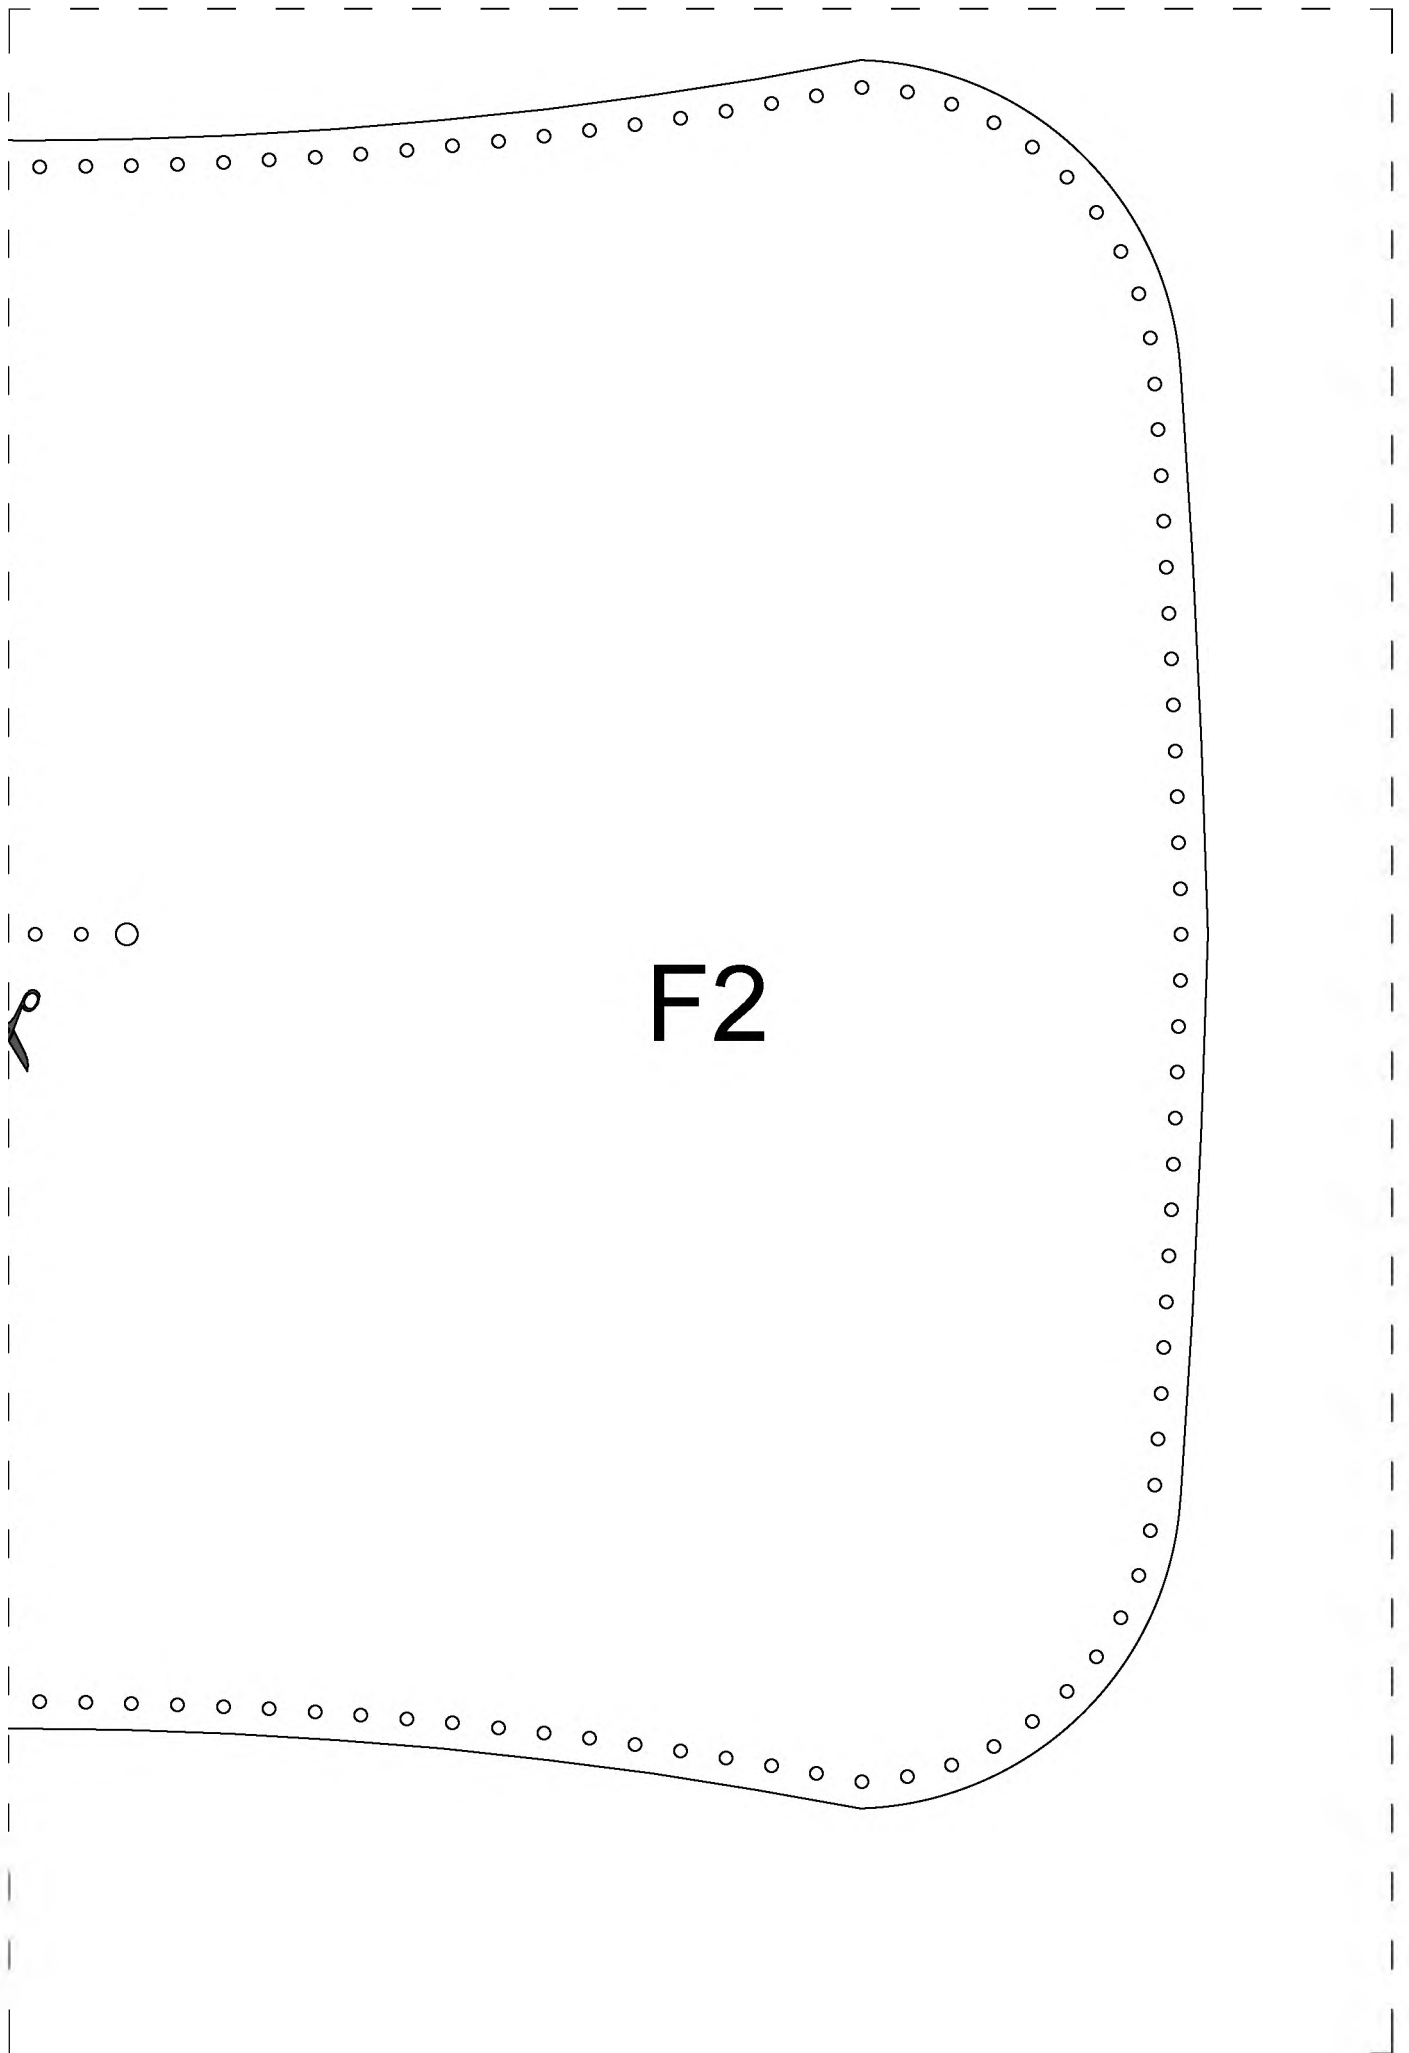 


F2

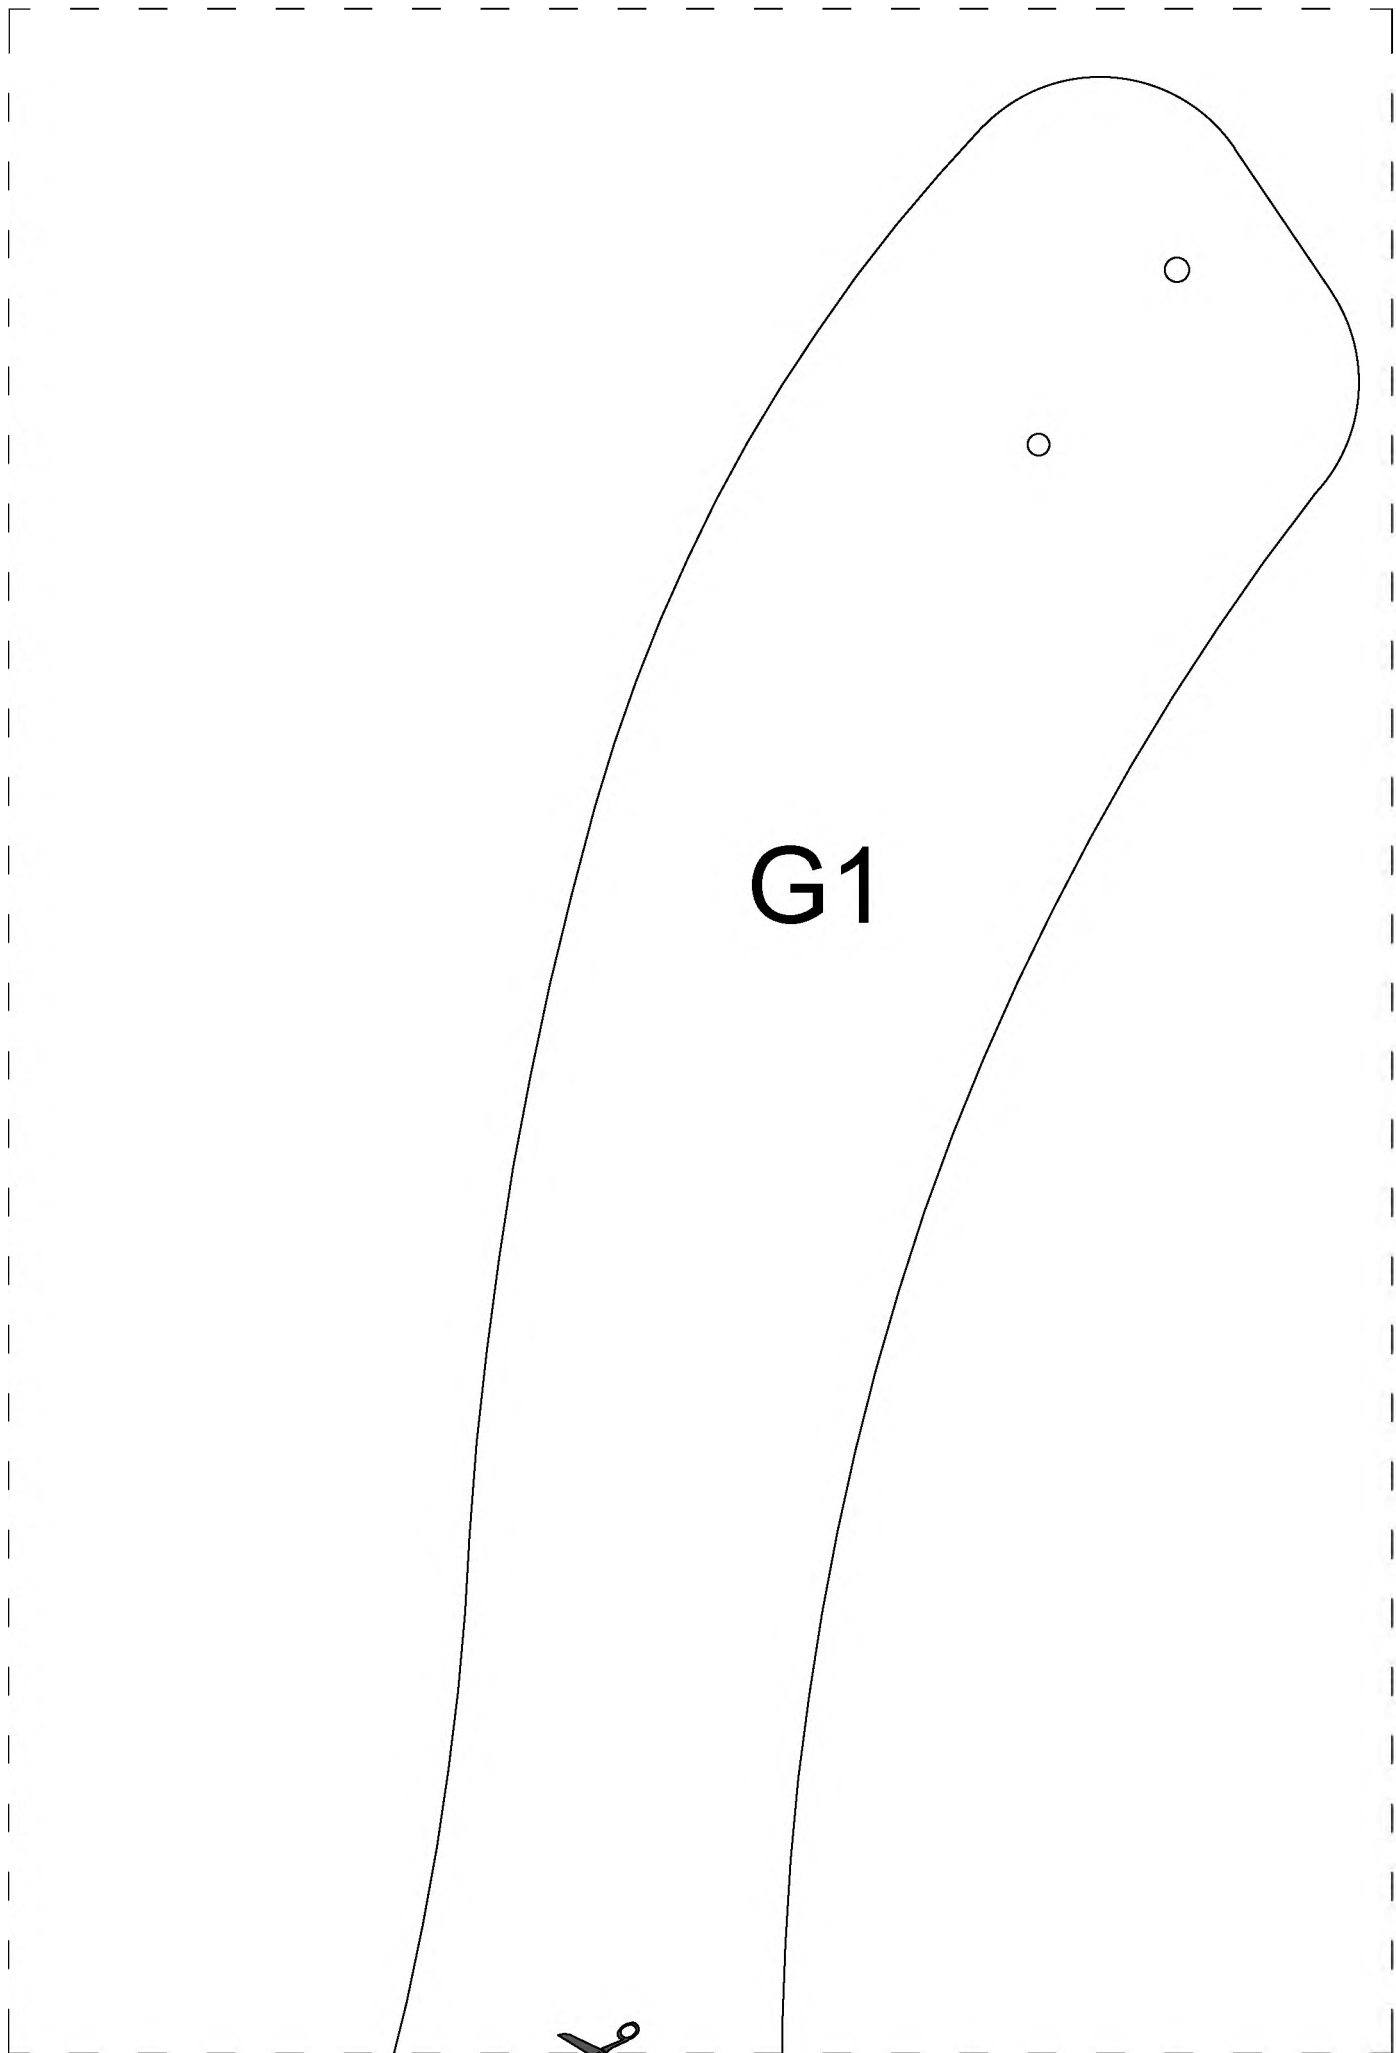 


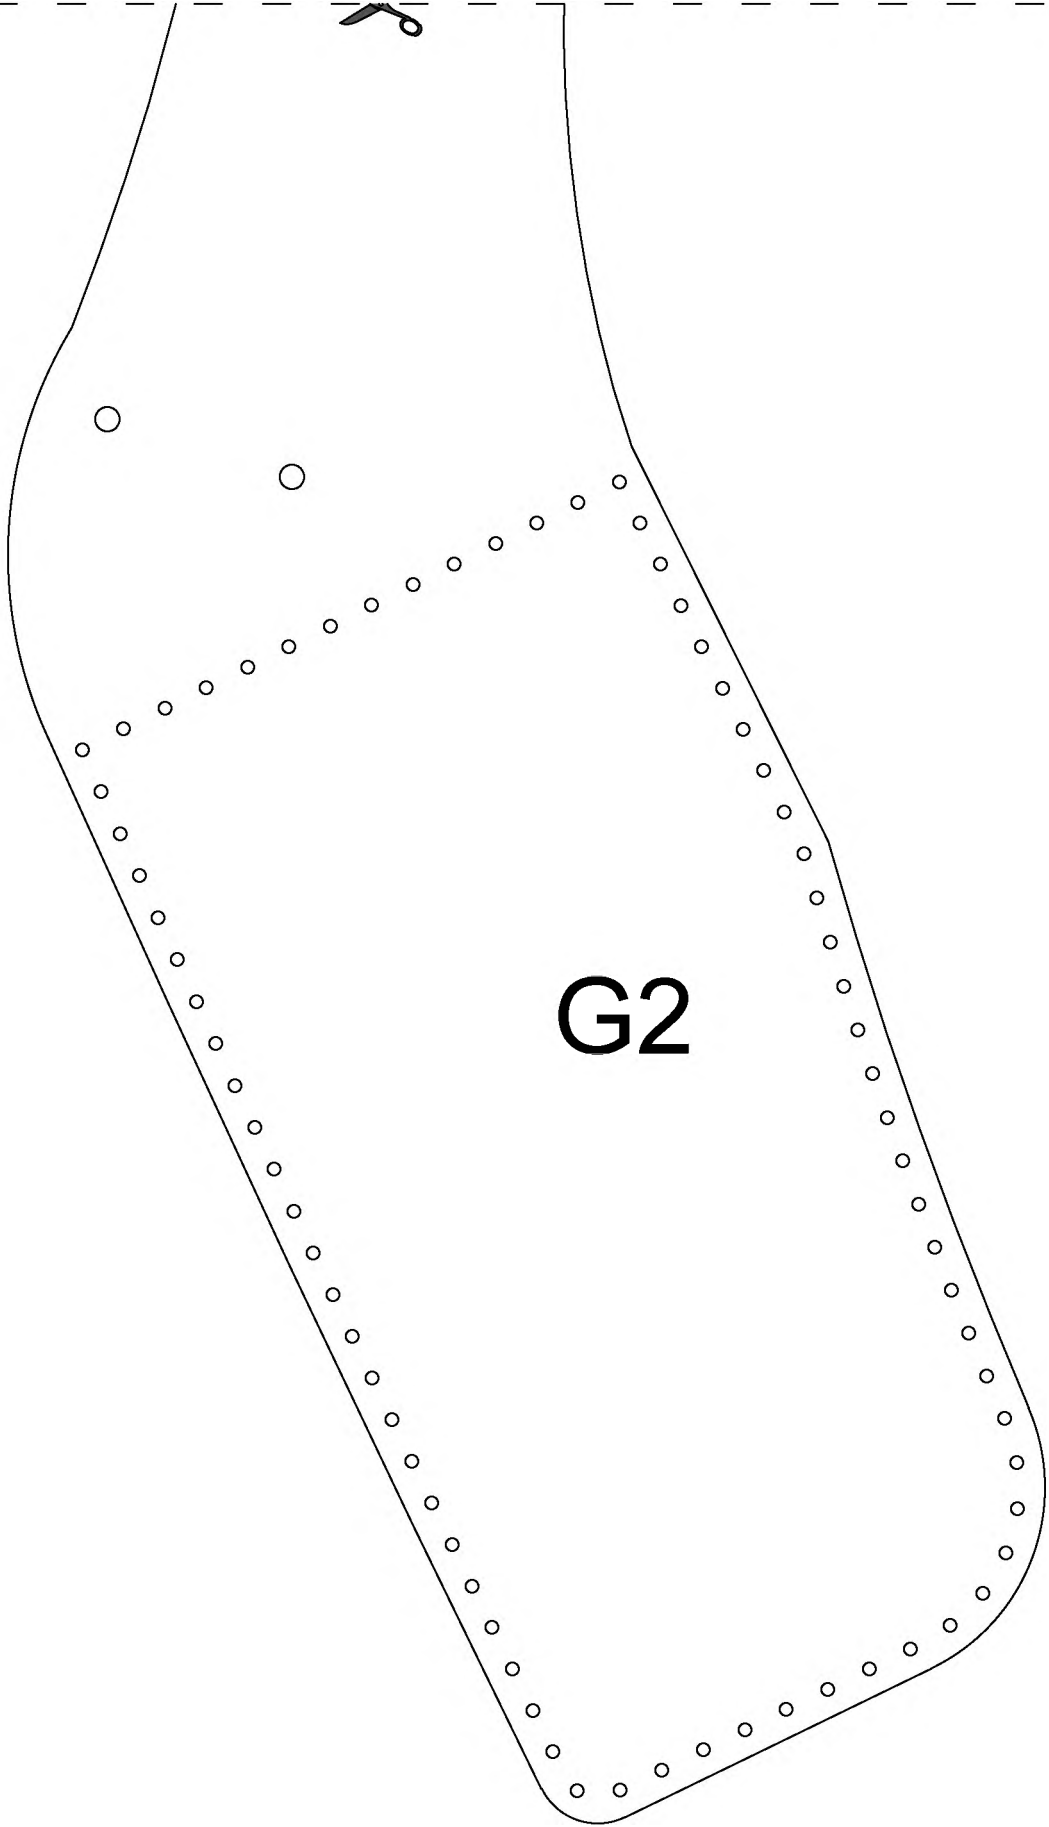 

**G2**

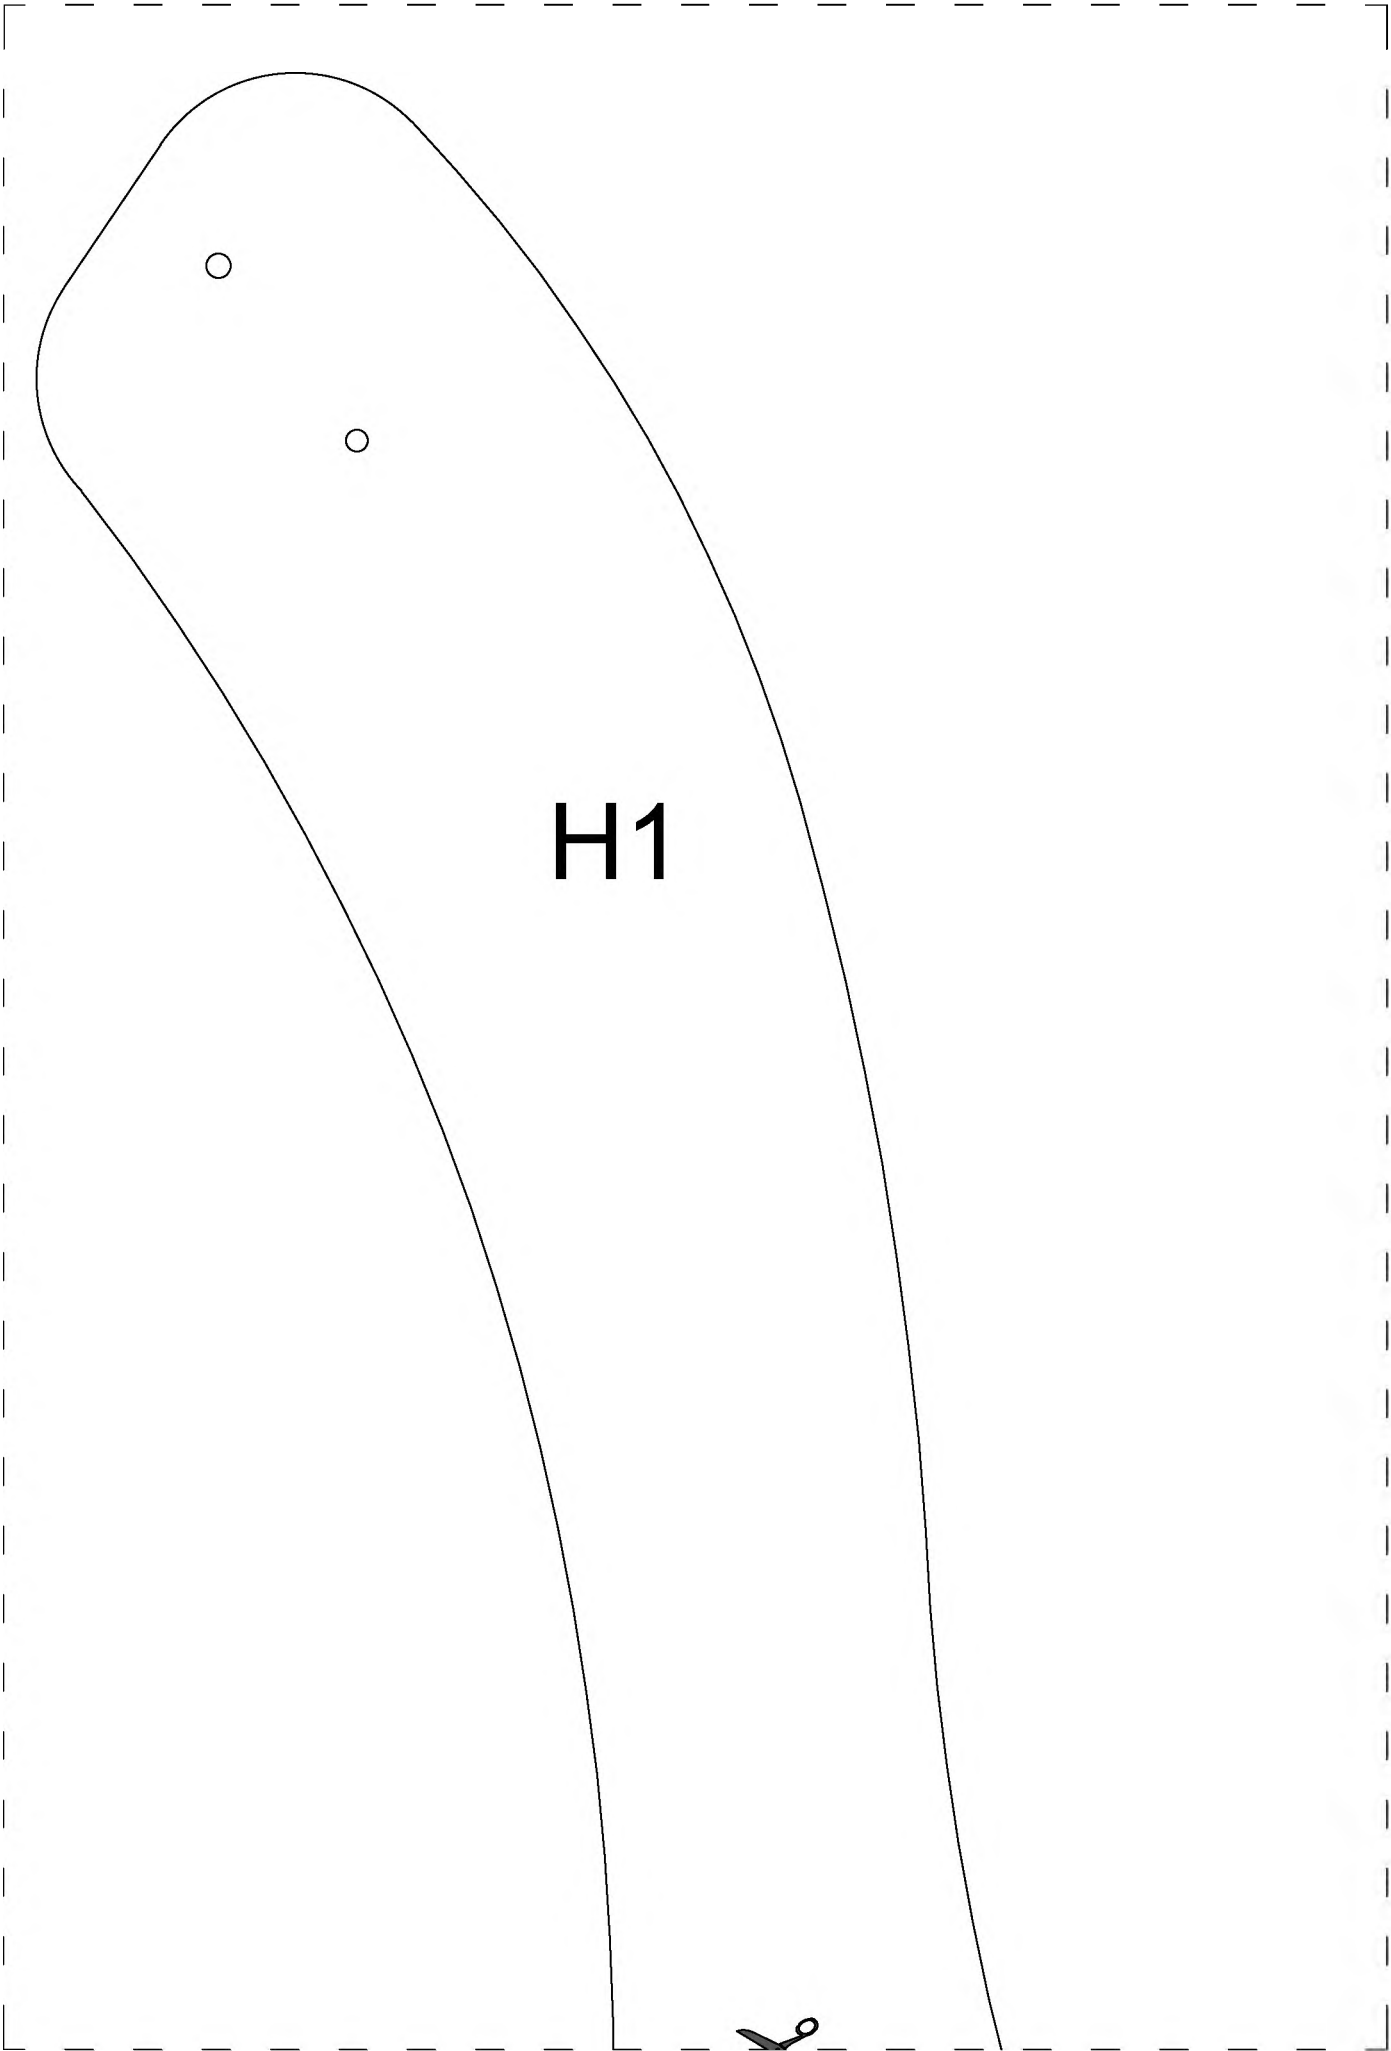 

**H1**

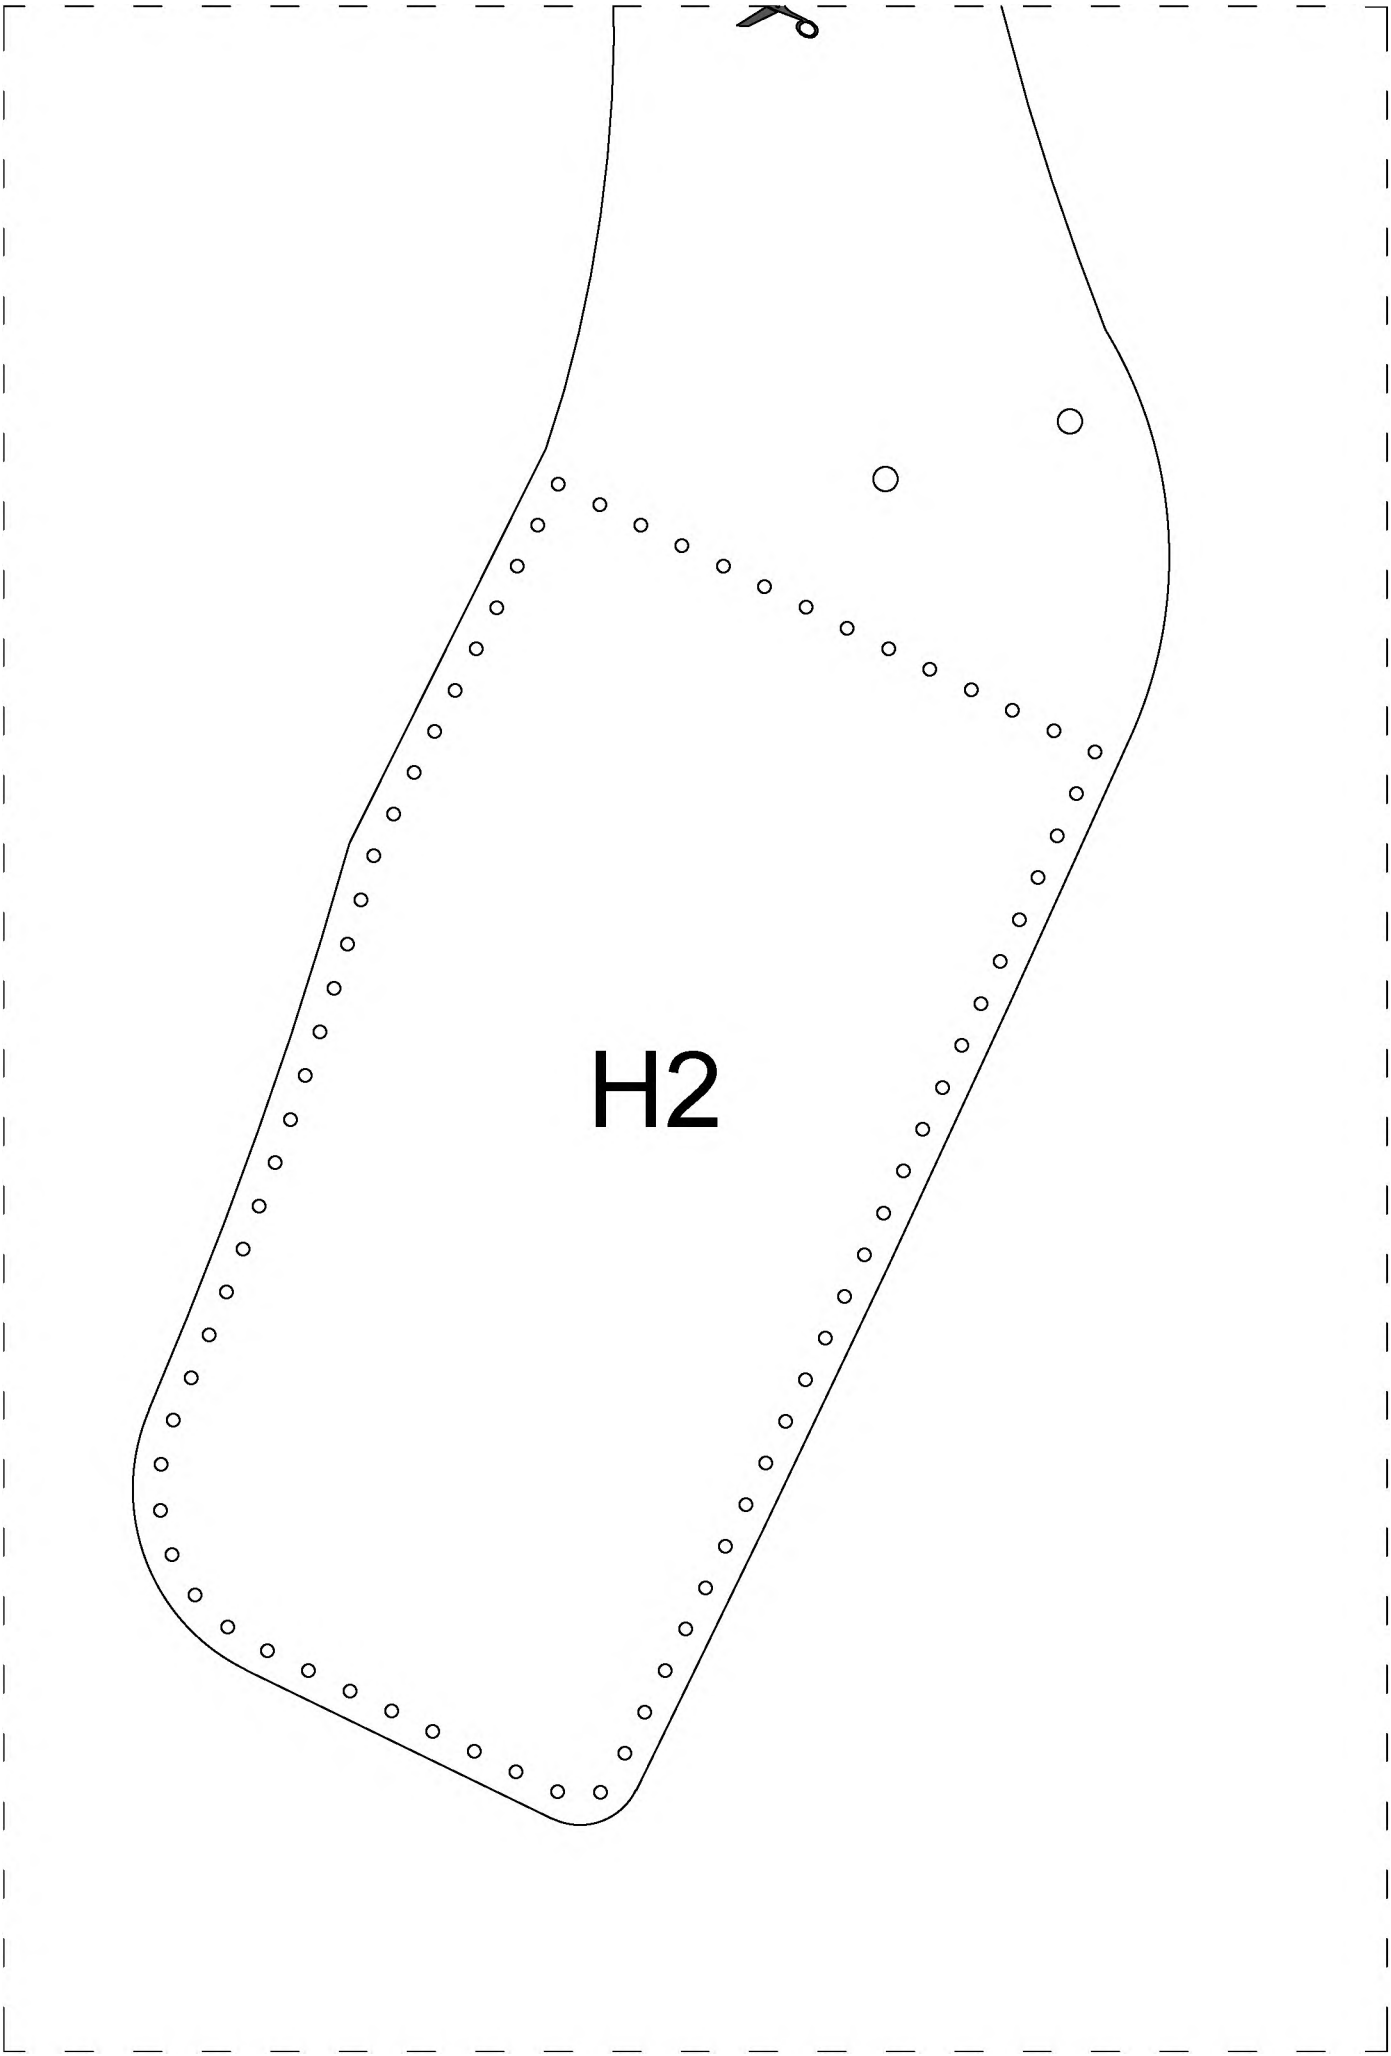 

H2