

No Sew Purse

By Paintyee

Instagram: Paintyee

Instruction video on
youtube under Paintyee

Materials needed for this project:

- 5-6 oz leather (regular stiffness)

- 0.8mm thread

- 3/4in D rings 2

- 6 rivets

- Sam Browne button 6.9mm or 8mm

————— Cut


- - - - - Assemble

————— Align

● Punch

Straps are not included

Size reference

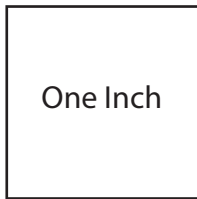

Attach to Flaps

Attach to Flaps

Front

Attach to bottom

