

WELCOME TO THE KINGDOM.

THANK-YOU FOR PURCHASING THIS PATTERN.
HERE ARE SOME SUGGESTIONS TO HELP YOU GET STARTED.

LEATHER TYPE: CHROME TANNED LEATHER
LEATHER THICKNESS: 4 OUNCE OR 1.6MM
STITCH LINE: 4MM DISTANCE FROM OUTSIDE EDGE

THIS PATTERN IS FOR PERSONAL USE ONLY.
WE ENCOURAGE YOU TO COME UP WITH YOU OWN CREATIVE DESIGNS.
YOU CAN DO IT!

IF YOU HAVE ANY QUESTIONS ABOUT THIS PATTERN
EMAIL US AT INFO@LITTLEKINGGOODS.COM

NOW GO AND MAKE SOMETHING BEAUTIFUL.

CLEAN. SIMPLE. RUGGED.




REFERENCE ASSEMBLY DIAGRAMS AND NOTES

*NOT TO SCALE

ASSEMBLED PAPER PATTERNS

This is what the pattern should look like after cutting and assembling..

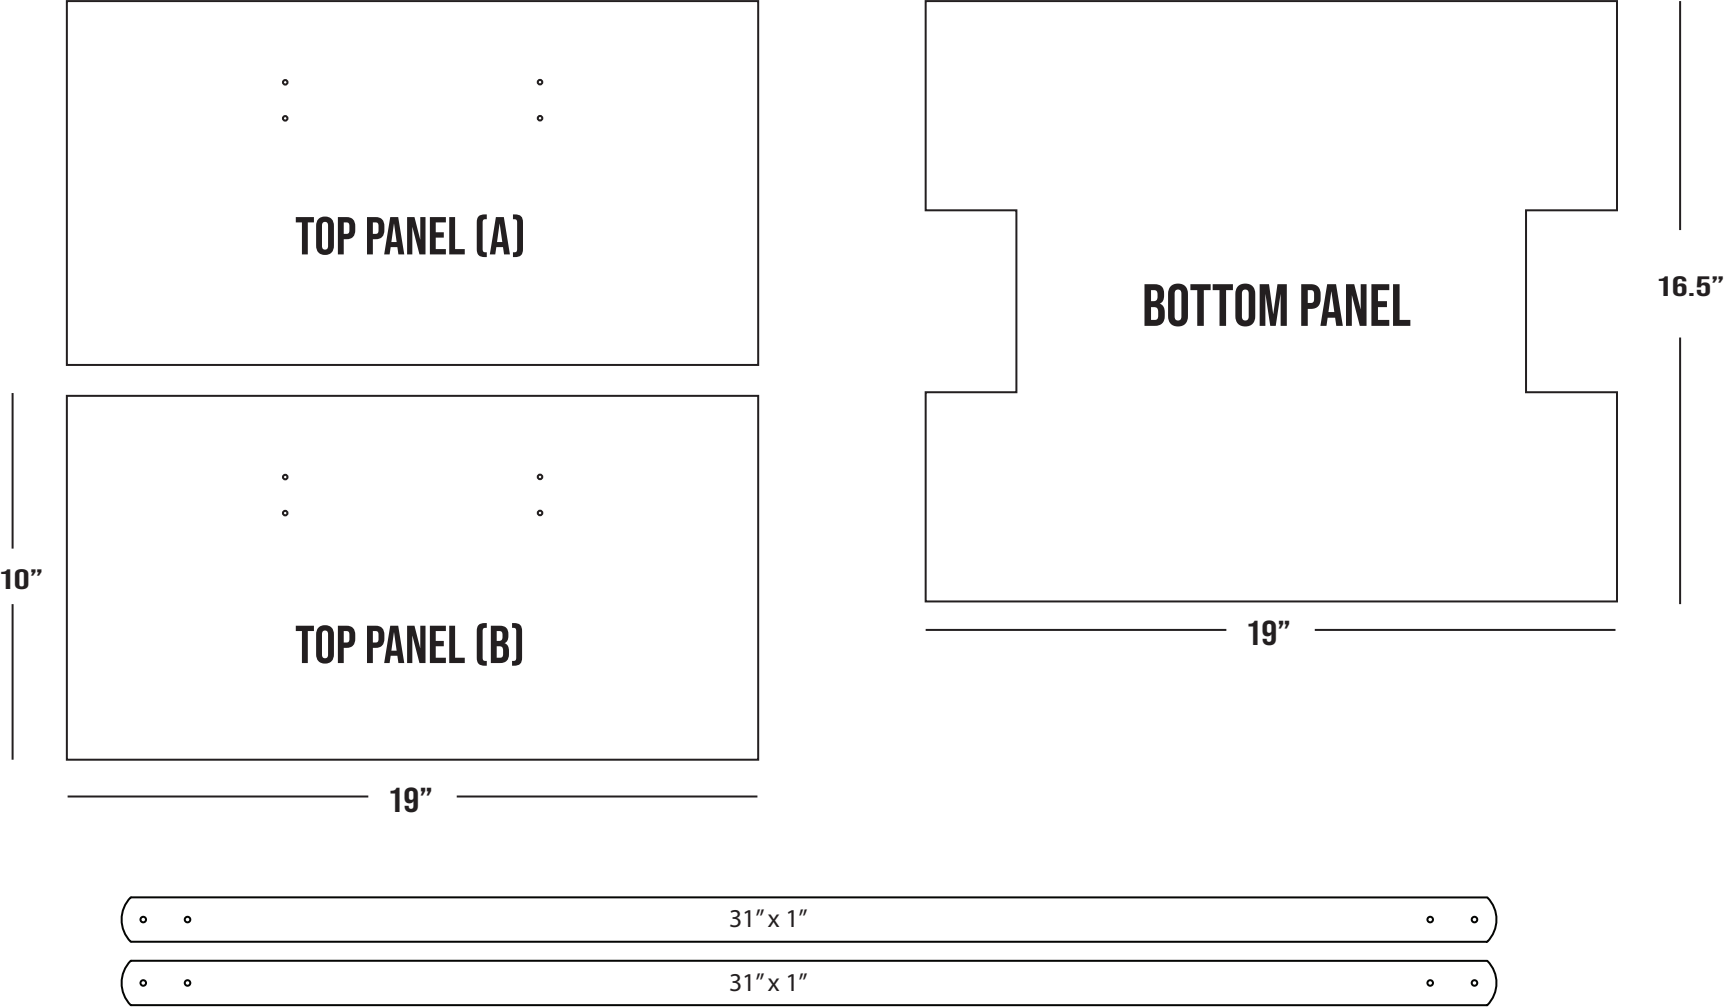


REFERENCE ASSEMBLY DIAGRAMS AND NOTES

*NOT TO SCALE

ASSEMBLED LEATHER PIECES


This is what the panels should look like after cutting and assembling the leather pieces.

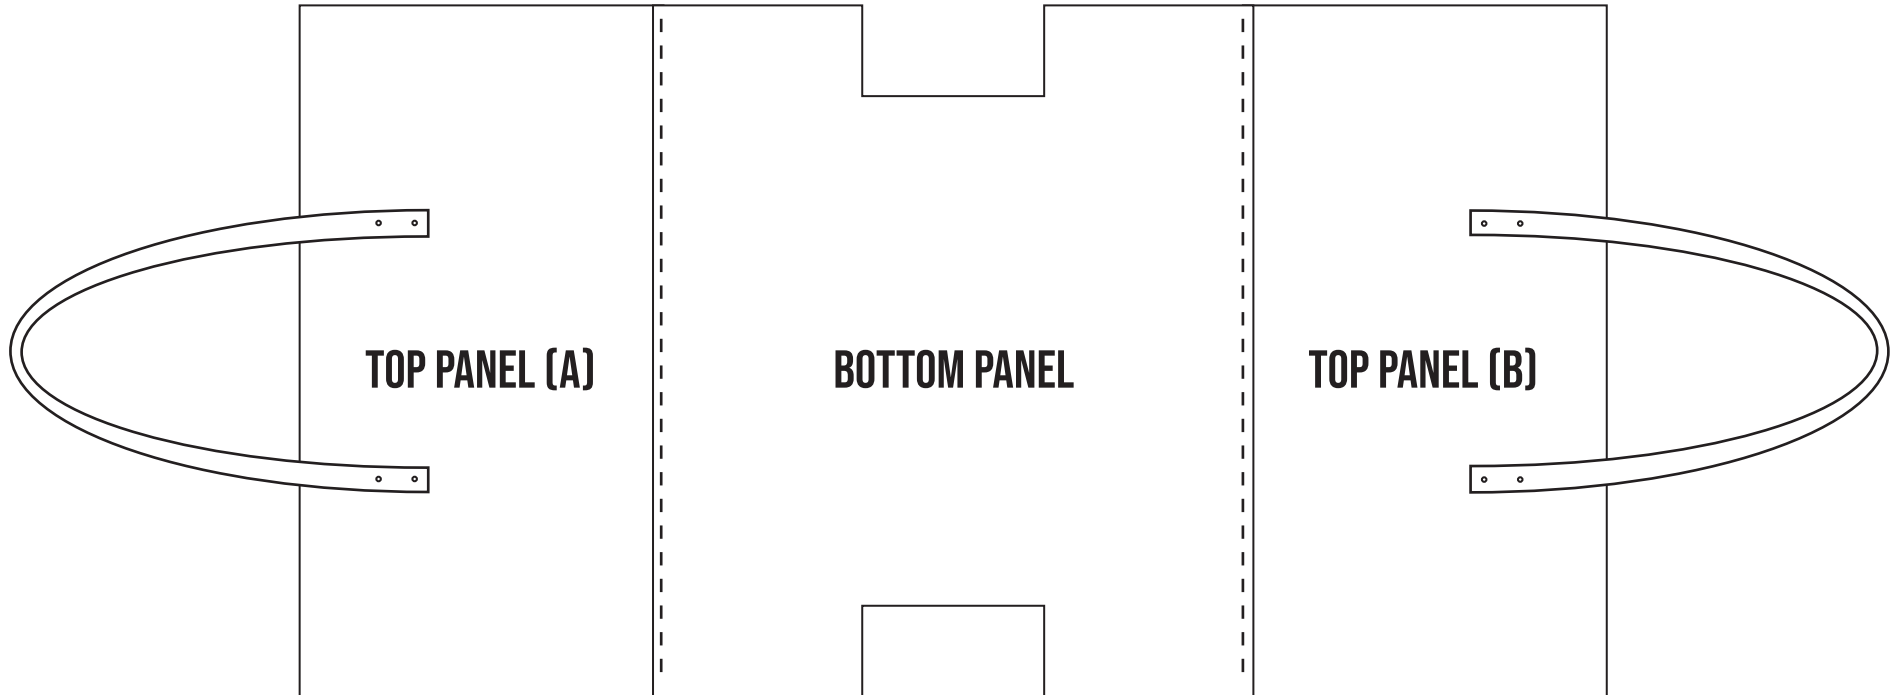

REFERENCE ASSEMBLY DIAGRAMS AND NOTES


*NOT TO SCALE

THE INSIDE OF THE TOTEBAG SHOULD BE FACING OUT.

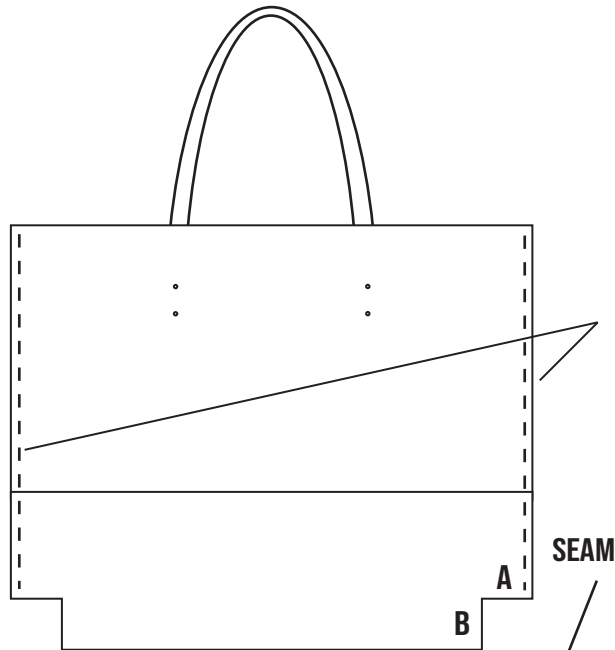


1. STITCH ALONG THE OUTER EDGES.

2. PUSH THE SEAM DOWN FROM A TO B.
THIS WILL OPEN UP THE BAG LIKE A MOUTH
AND "B" SHOULD FLARE OUT ON BOTH SIDES
AS SEEN IN THE TOP VIEW.

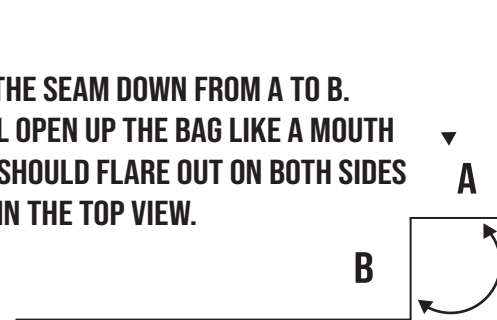

TOP VIEW

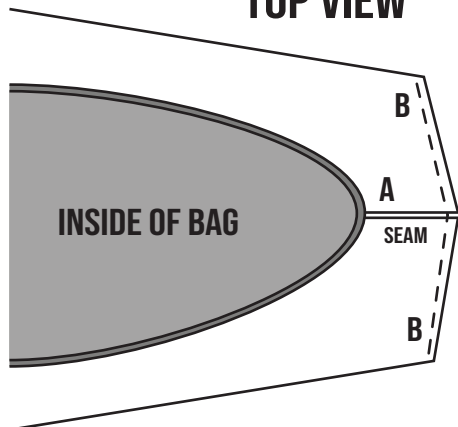

3. THIS PART IS A LITTLE TRICKY SO BE PATIENT.
STITCH THE BAG CLOSED ALONG THE DOTTED LINE AS SHOWN
IN THE TOP VIEW. REPEAT THIS PROCESS ON THE OTHER SIDE AS WELL.

4. THIS PART IS A ALSO LITTLE TRICKY SO BE PATIENT, THERE!
NOW TURN THE BAG INSIDE OUT. BE CAREFUL NOT TO SCRATH THE LEATHER.
USE RUBBER GLOVES IF NECESSARY.



SKIVE WIDTH (1.5 cm)

After skiving, roll (fold and glue) the edge down and stitch across the edge to keep leather from unfolding.
Make the stitch 1cm from the edge.

If you do not wish to roll the edge, simply trim across the dotted line.

BOTTOM PANEL

A

B



SKIVE WIDTH (1.5 cm)


After skiving, roll (fold and glue) the edge down and stitch across the edge to keep leather from unfolding.
Make the stitch 1cm from the edge.

If you do not wish to roll the edge, simply trim across the dotted line.


A

BOTTOM PANEL

B

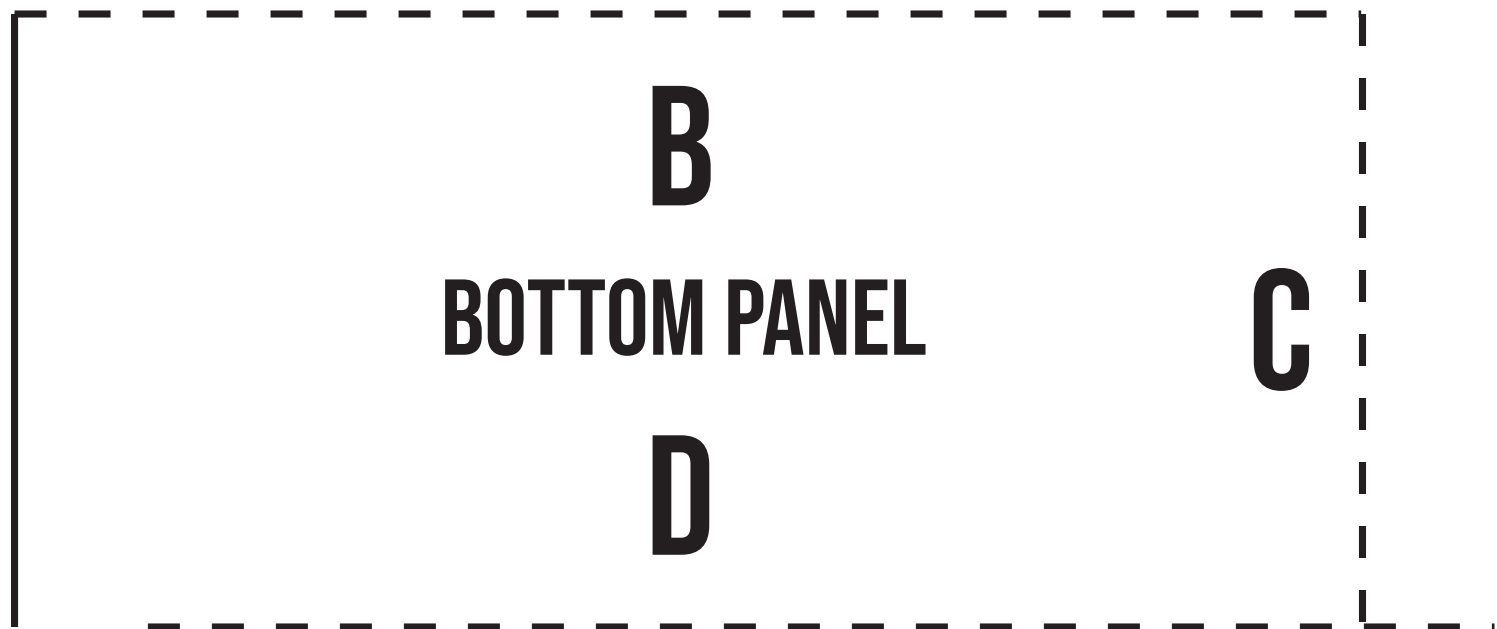

SUGGESTED STRAP LENGTH: 31" X 1"

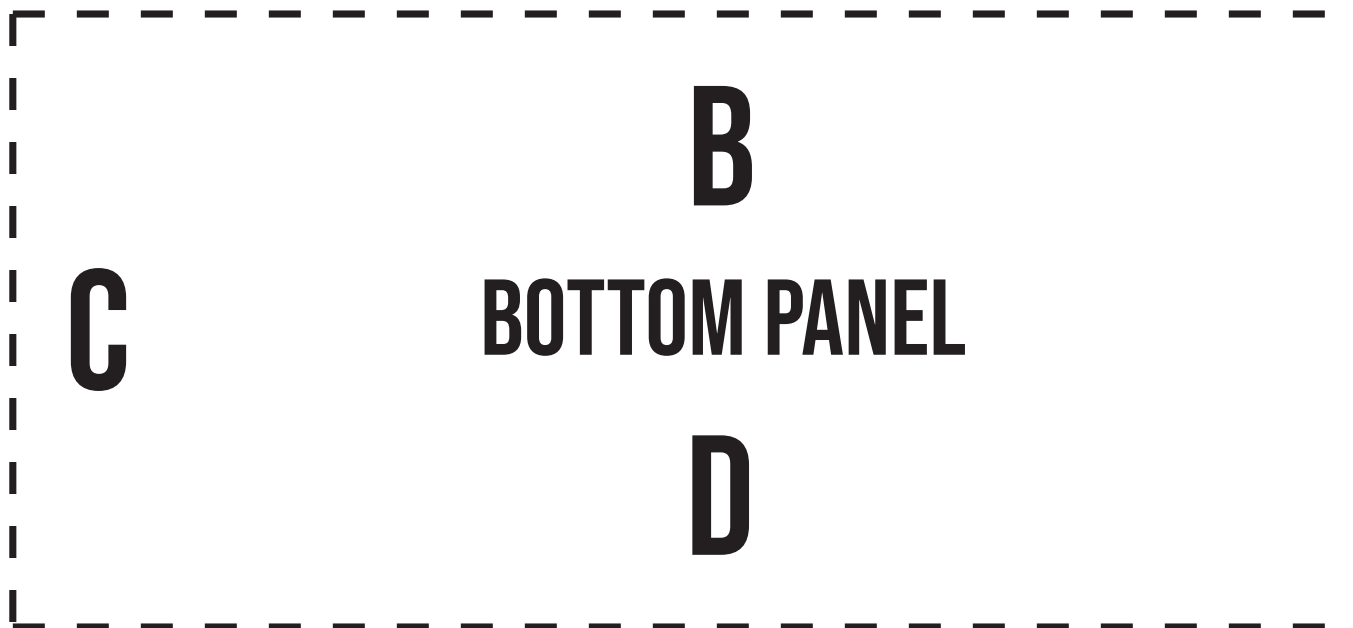

OPTIONAL MAKERS MARK TAG



D

BOTTOM PANEL

E

After skiving, roll (fold and glue) the edge down and stitch across the edge to keep leather from unfolding.
Make the stitch 1cm from the edge.

If you do not wish to roll the edge, simply trim across the dotted line.



SKIVE WIDTH (1.5 cm)



The diagram shows a rectangular template for a 'BOTTOM PANEL'. A dashed line runs along the top and left edges. The top edge is labeled 'D' and the left edge is labeled 'E'. A solid line runs along the right and bottom edges. The right edge has a 90-degree fold at the top. The bottom edge has a dashed line near the bottom, with a double-headed arrow indicating a 'SKIVE WIDTH (1.5 cm)' between this dashed line and the solid bottom edge. Instructions are provided for finishing the edges.

D

E

BOTTOM PANEL

After skiving, roll (fold and glue) the edge down and stitch across the edge to keep leather from unfolding.
Make the stitch 1cm from the edge.

If you do not wish to roll the edge, simply trim across the dotted line.



SKIVE WIDTH (1.5 cm)



SKIVE WIDTH (1.5 cm)

After skiving, roll (fold and glue) the edge down and stitch across the edge to keep leather from unfolding.
Make the stitch 1cm from the edge.

If you do not wish to roll the edge, simply trim across the dotted line.

TOP PANEL (A)



A

B



SKIVE WIDTH (1.5 cm)

After skiving, roll (fold and glue) the edge down and stitch across the edge to keep leather from unfolding.
Make the stitch 1cm from the edge.

If you do not wish to roll the edge, simply trim across the dotted line.

A



TOP PANEL (A)

B

B

TOP PANEL (A)

C

B

C

TOP PANEL (A)



SKIVE WIDTH (1.5 cm)

After skiving, roll (fold and glue) the edge down and stitch across the edge to keep leather from unfolding.
Make the stitch 1cm from the edge.

If you do not wish to roll the edge, simply trim across the dotted line.

TOP PANEL (B)



A

B



SKIVE WIDTH (1.5 cm)

After skiving, roll (fold and glue) the edge down and stitch across the edge to keep leather from unfolding.
Make the stitch 1 cm from the edge.

If you do not wish to roll the edge, simply trim across the dotted line.

A



TOP PANEL (B)

B

B

TOP PANEL (B)

C

B

C

TOP PANEL (B)