


vasileandpavel.com



Bike Saddle Bag

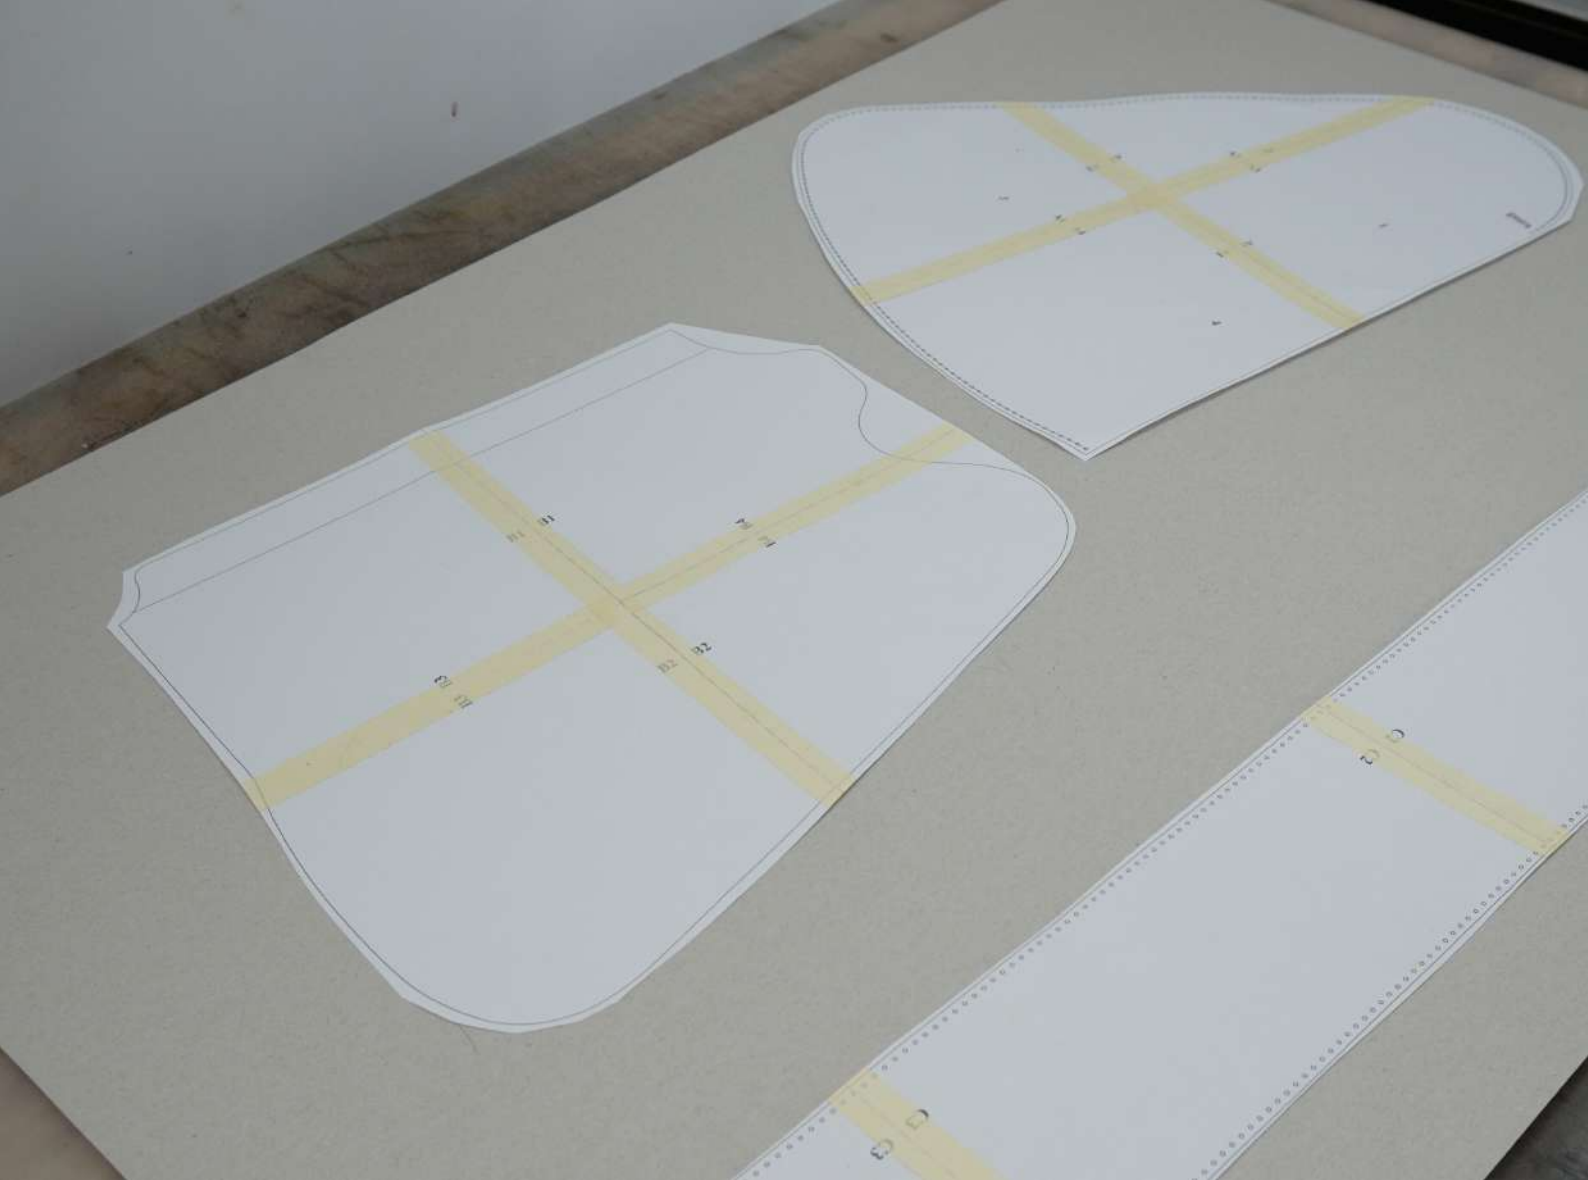































182 mm

Calibration Page

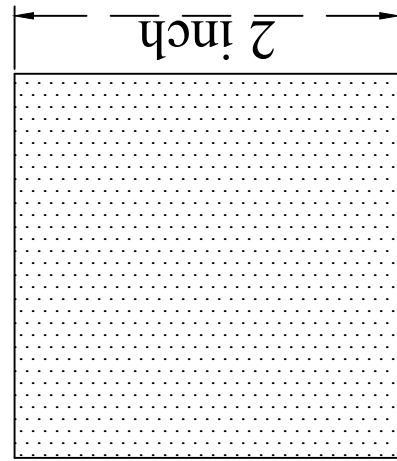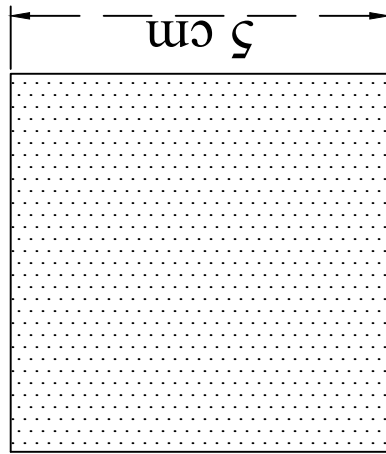


267 mm

10.5 inch

Legend


join line, for the parts bigger then a a4 or letter paper
also edge line to compensate for the printer edge margin



this is the contour of the parts




7.16 inch

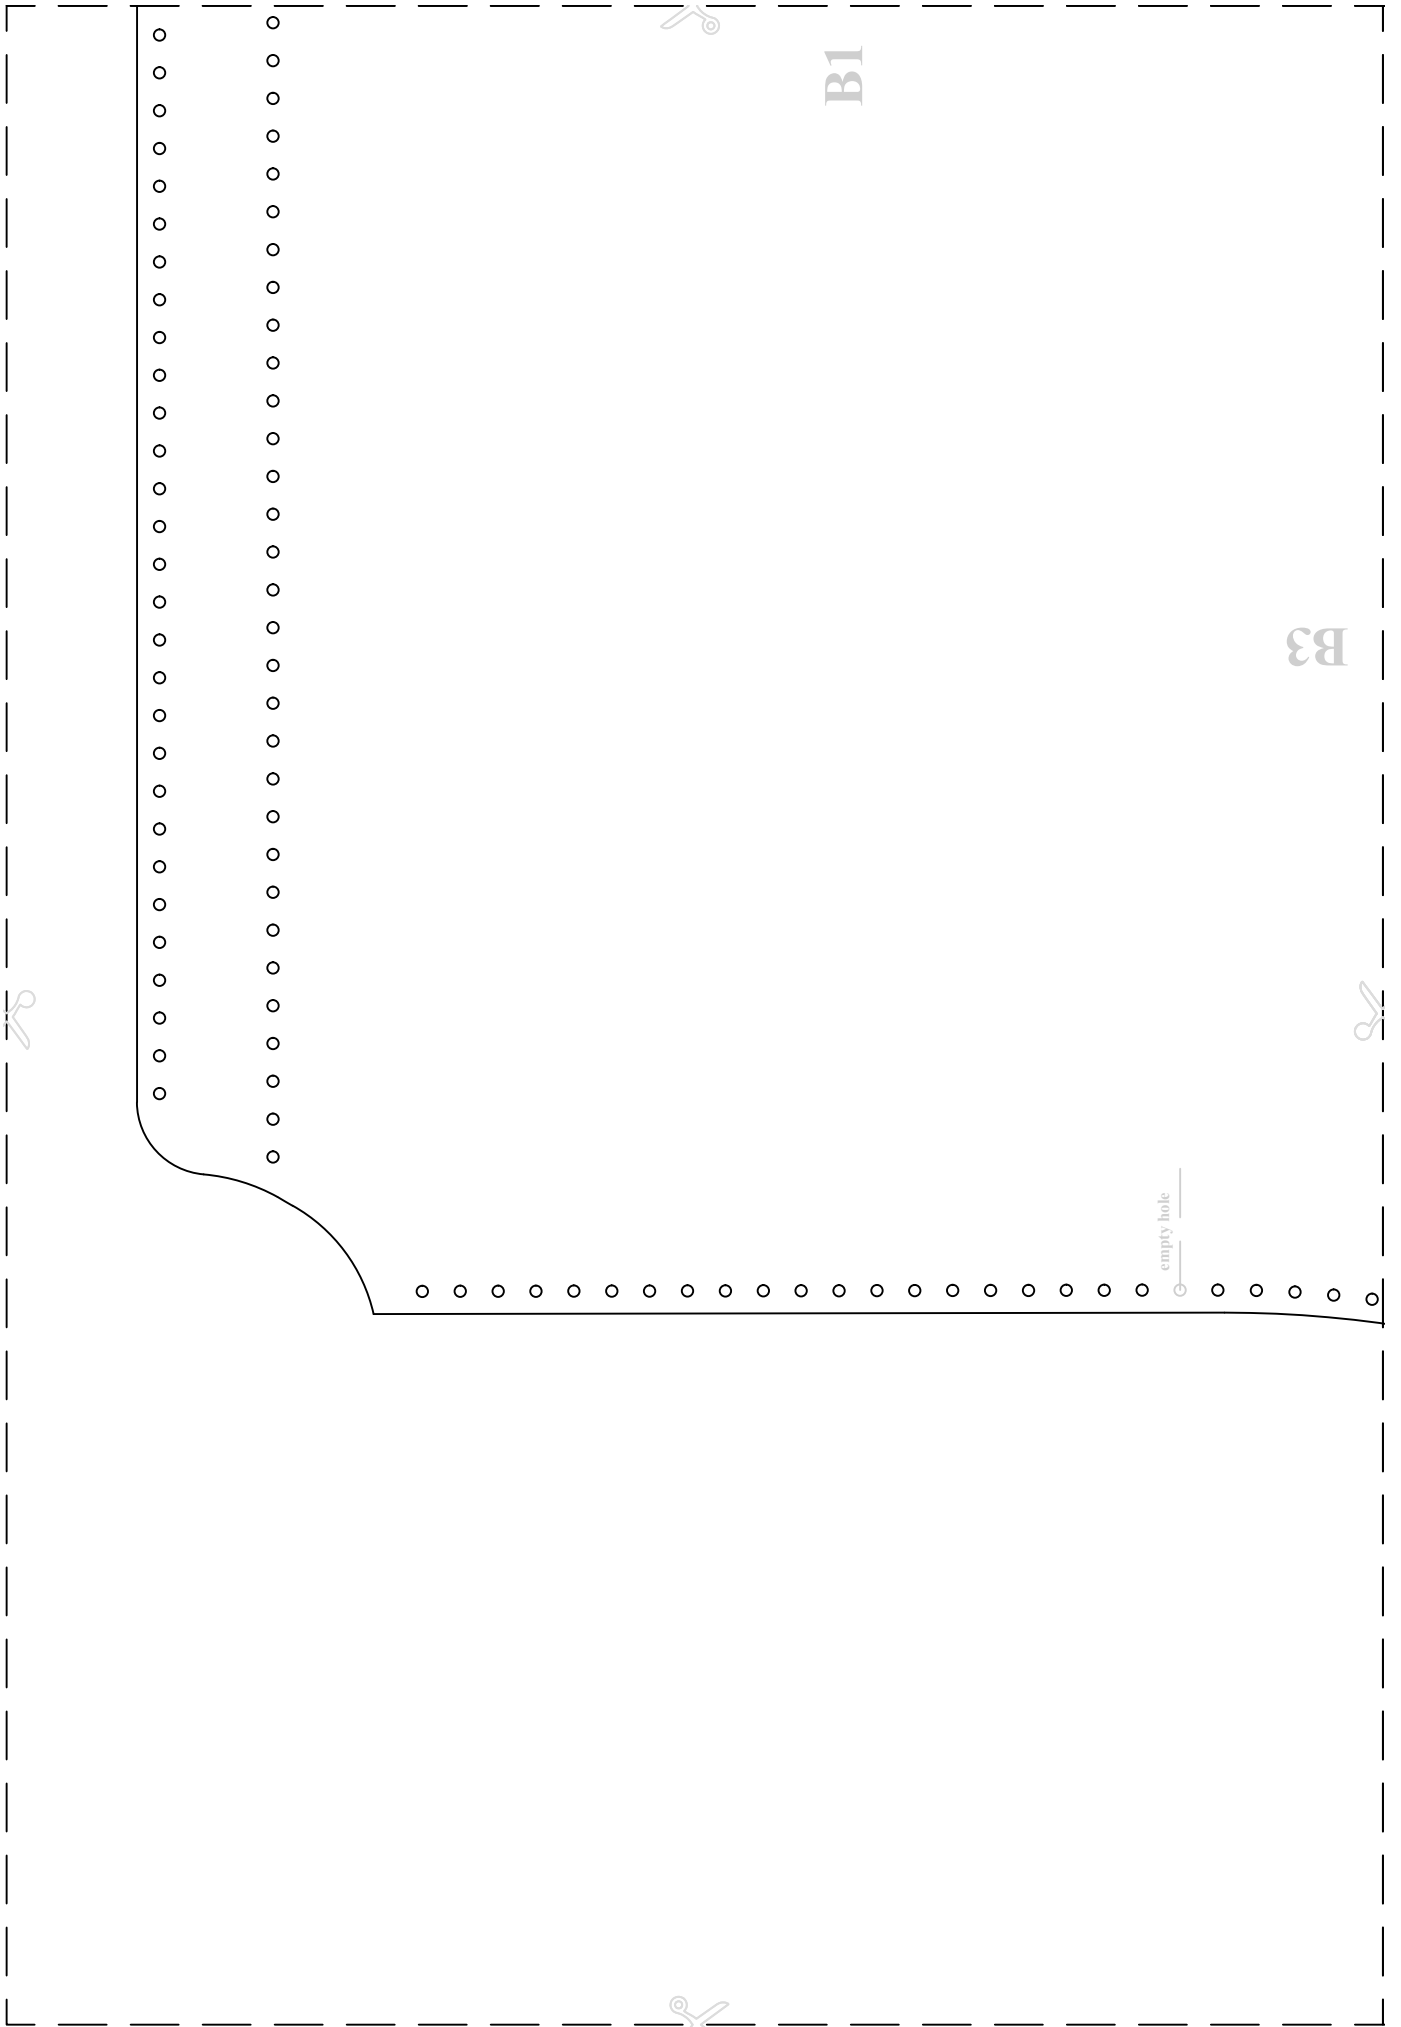

B1


B3

empty hole

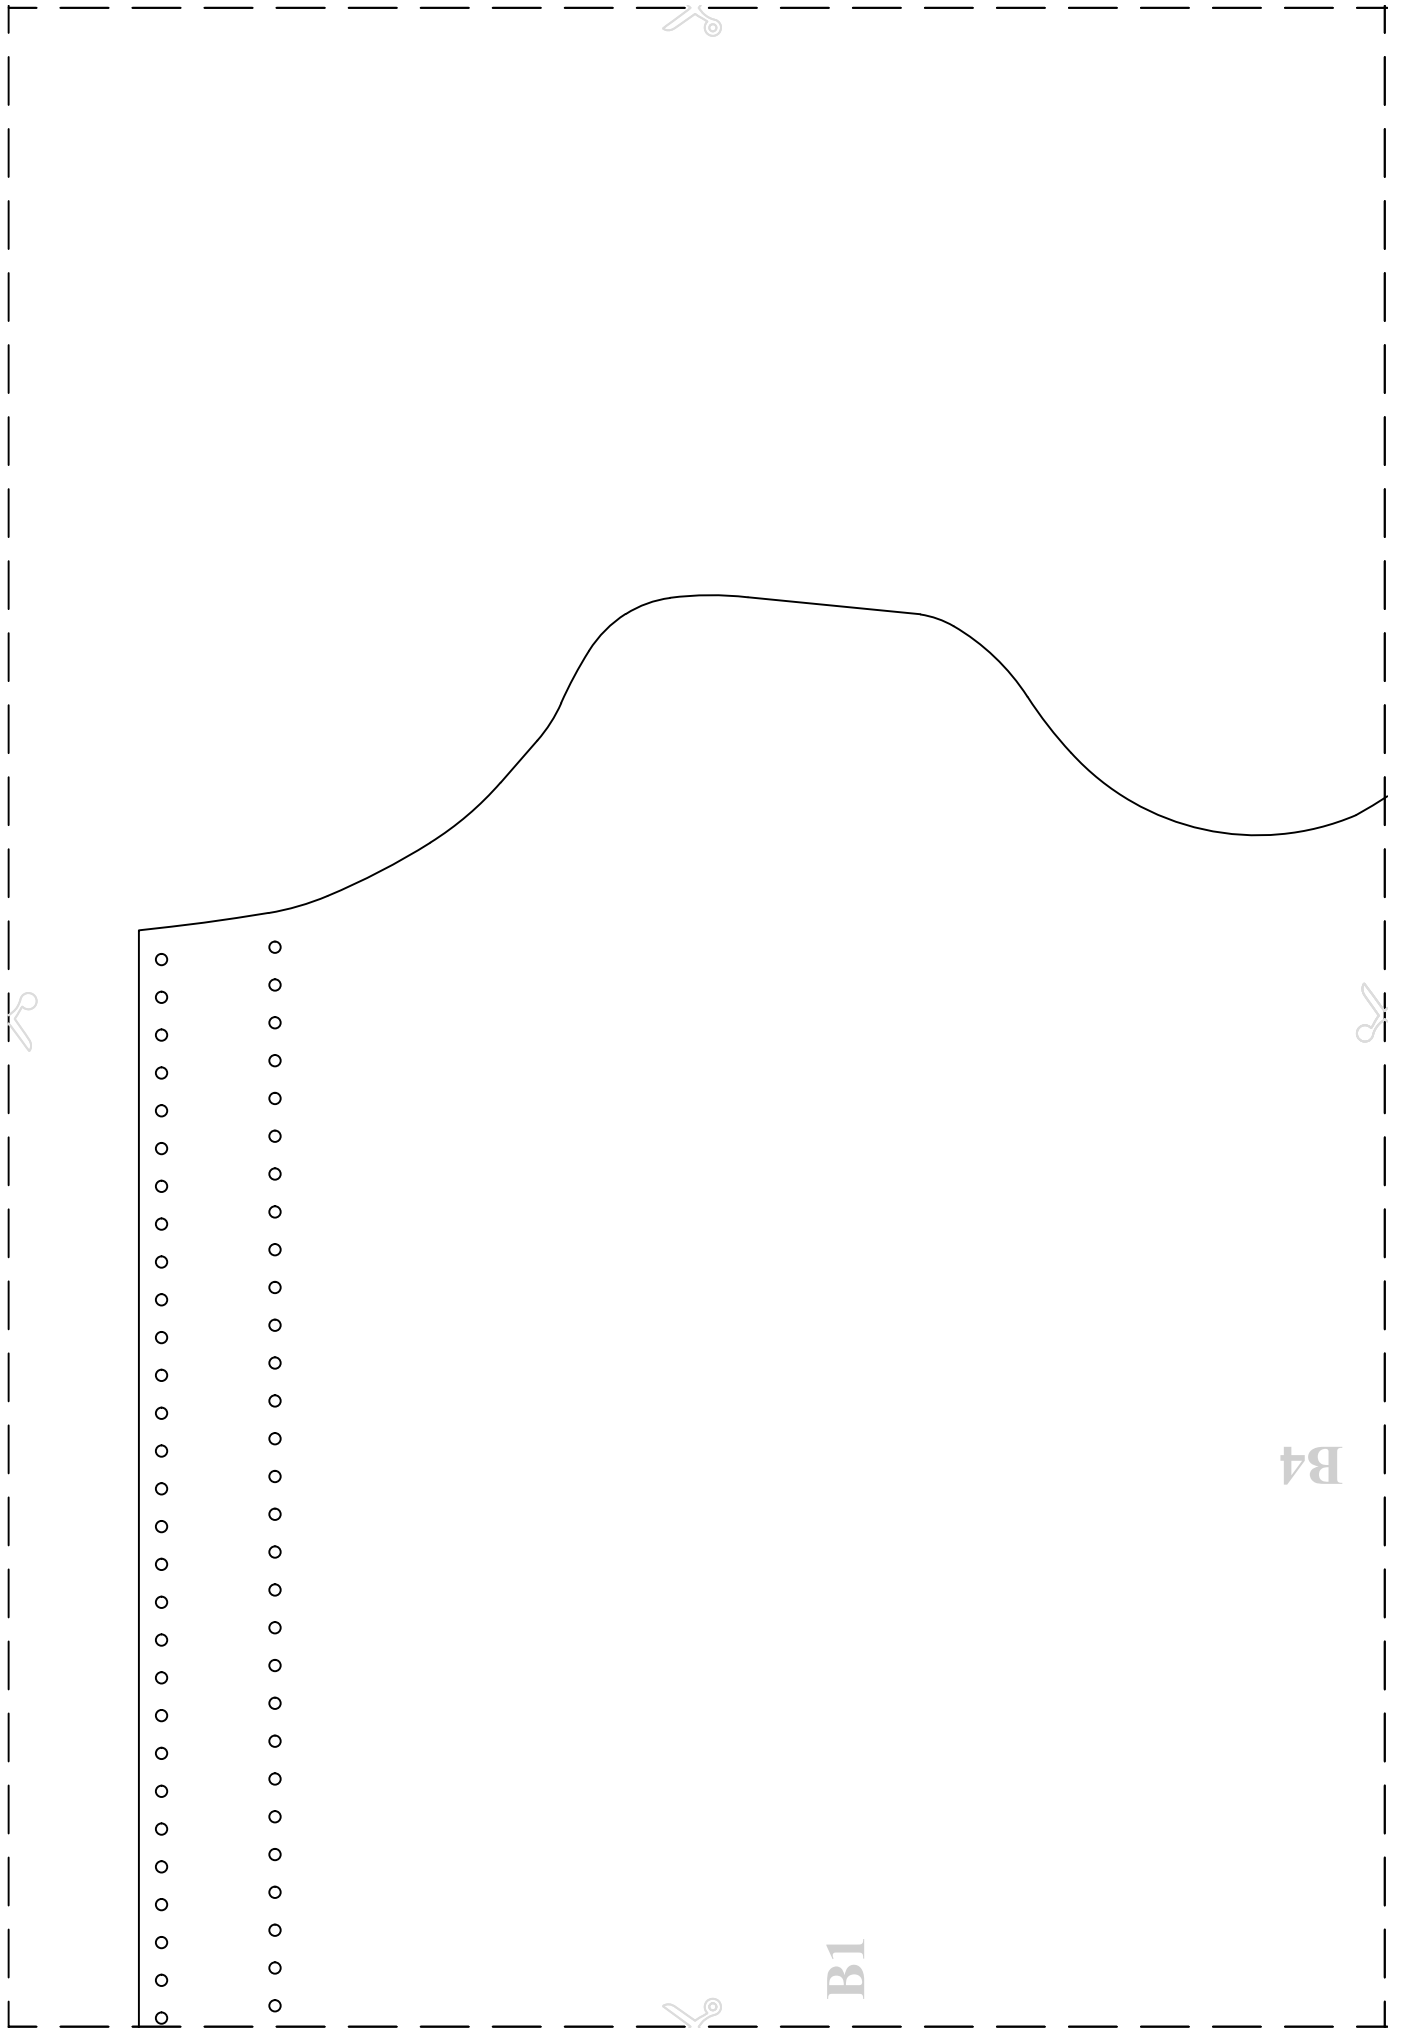


B1

B4

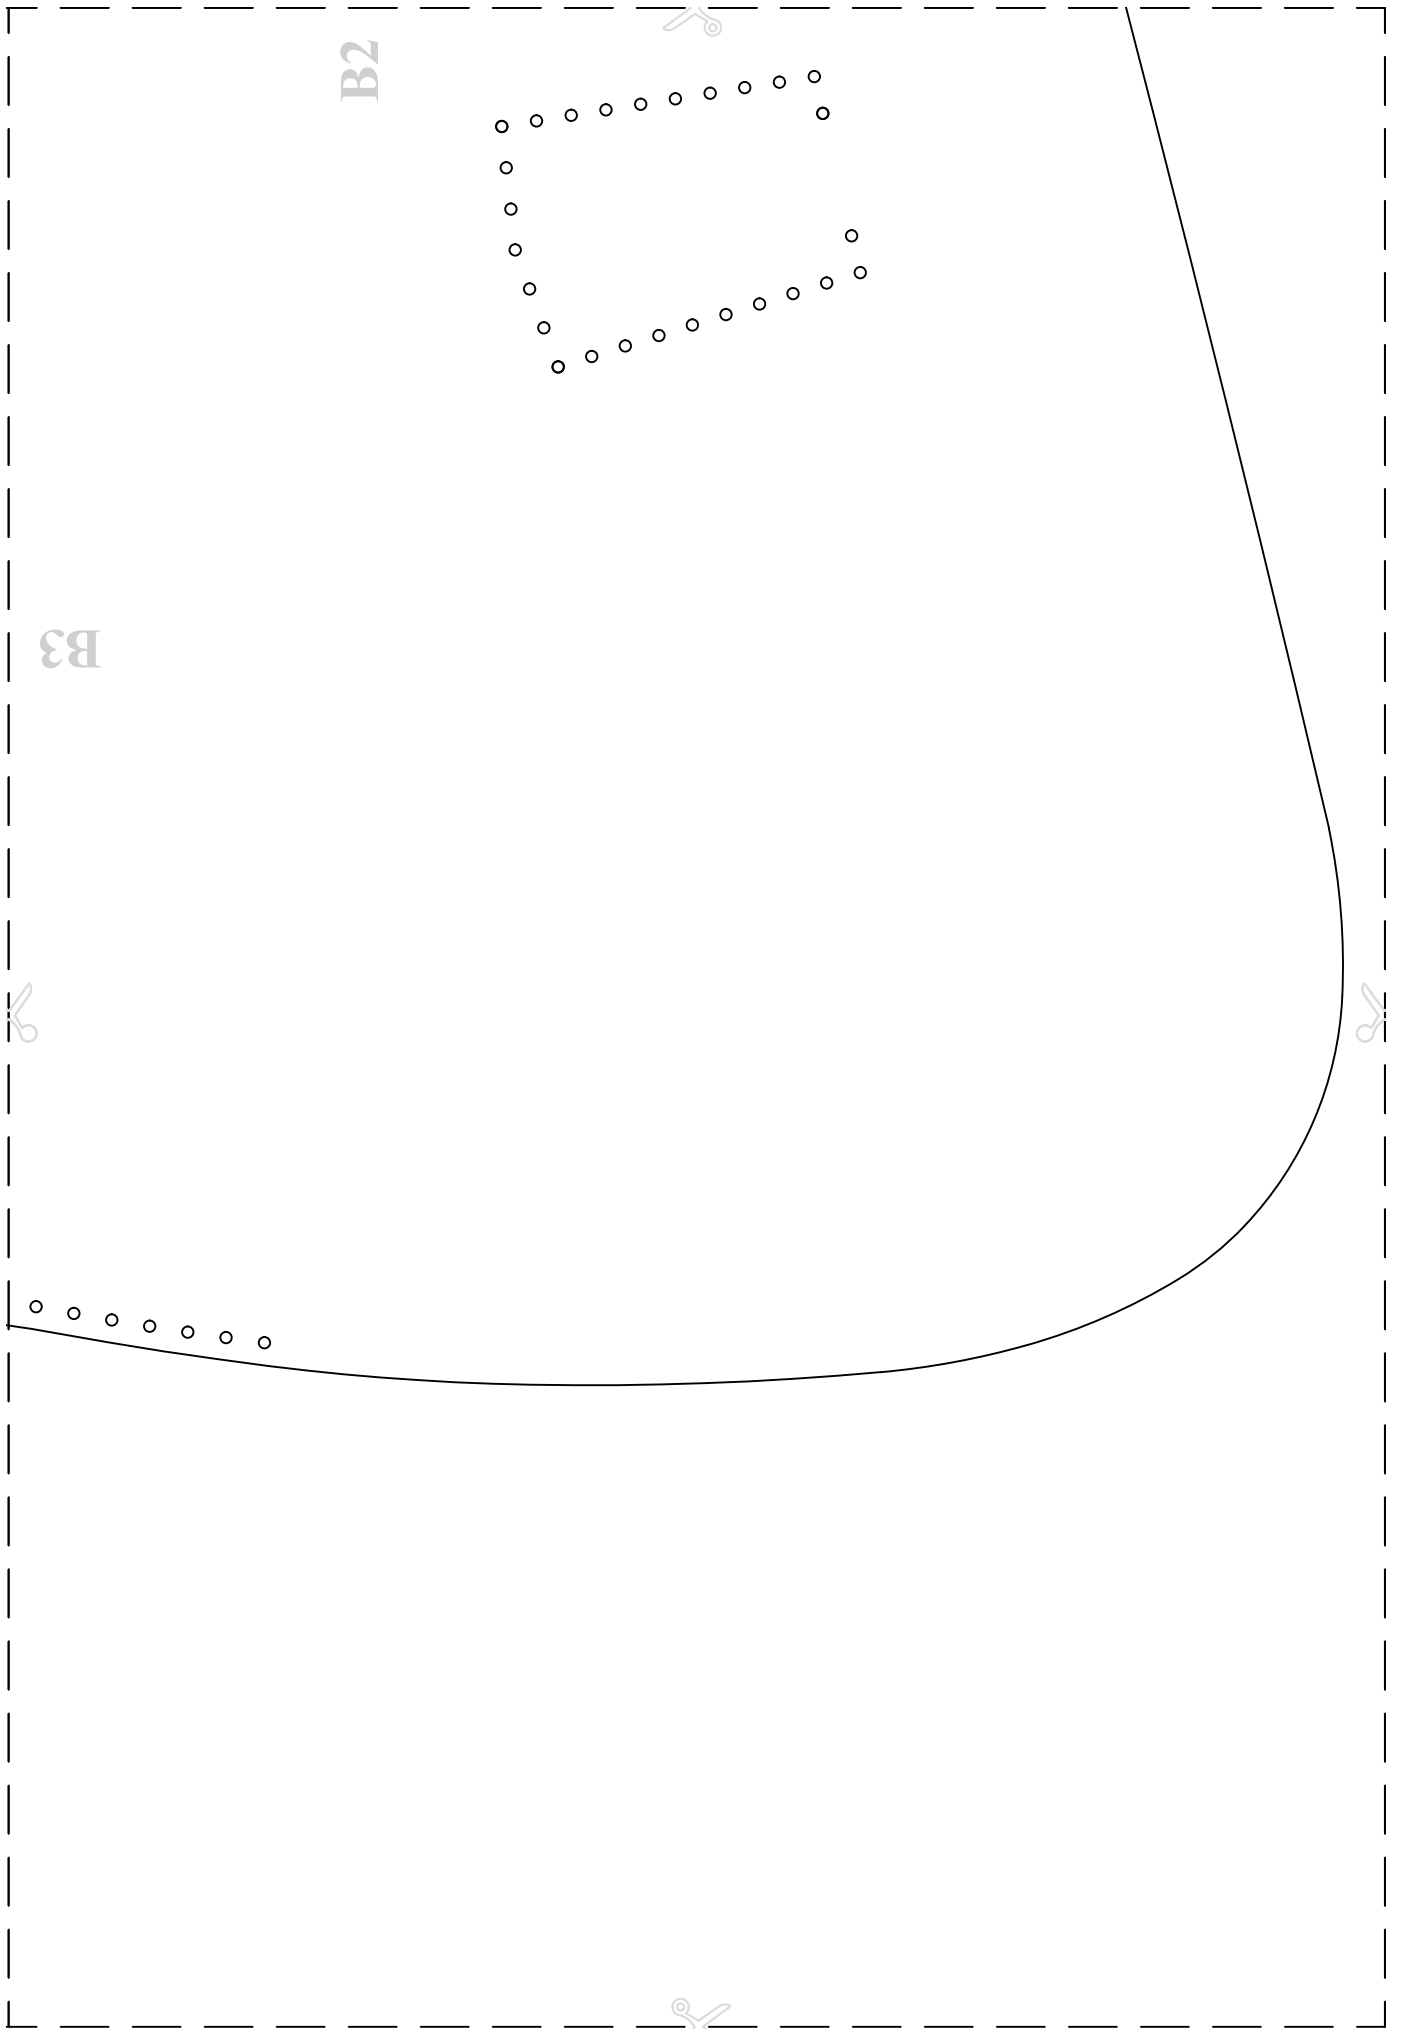


B2

B3

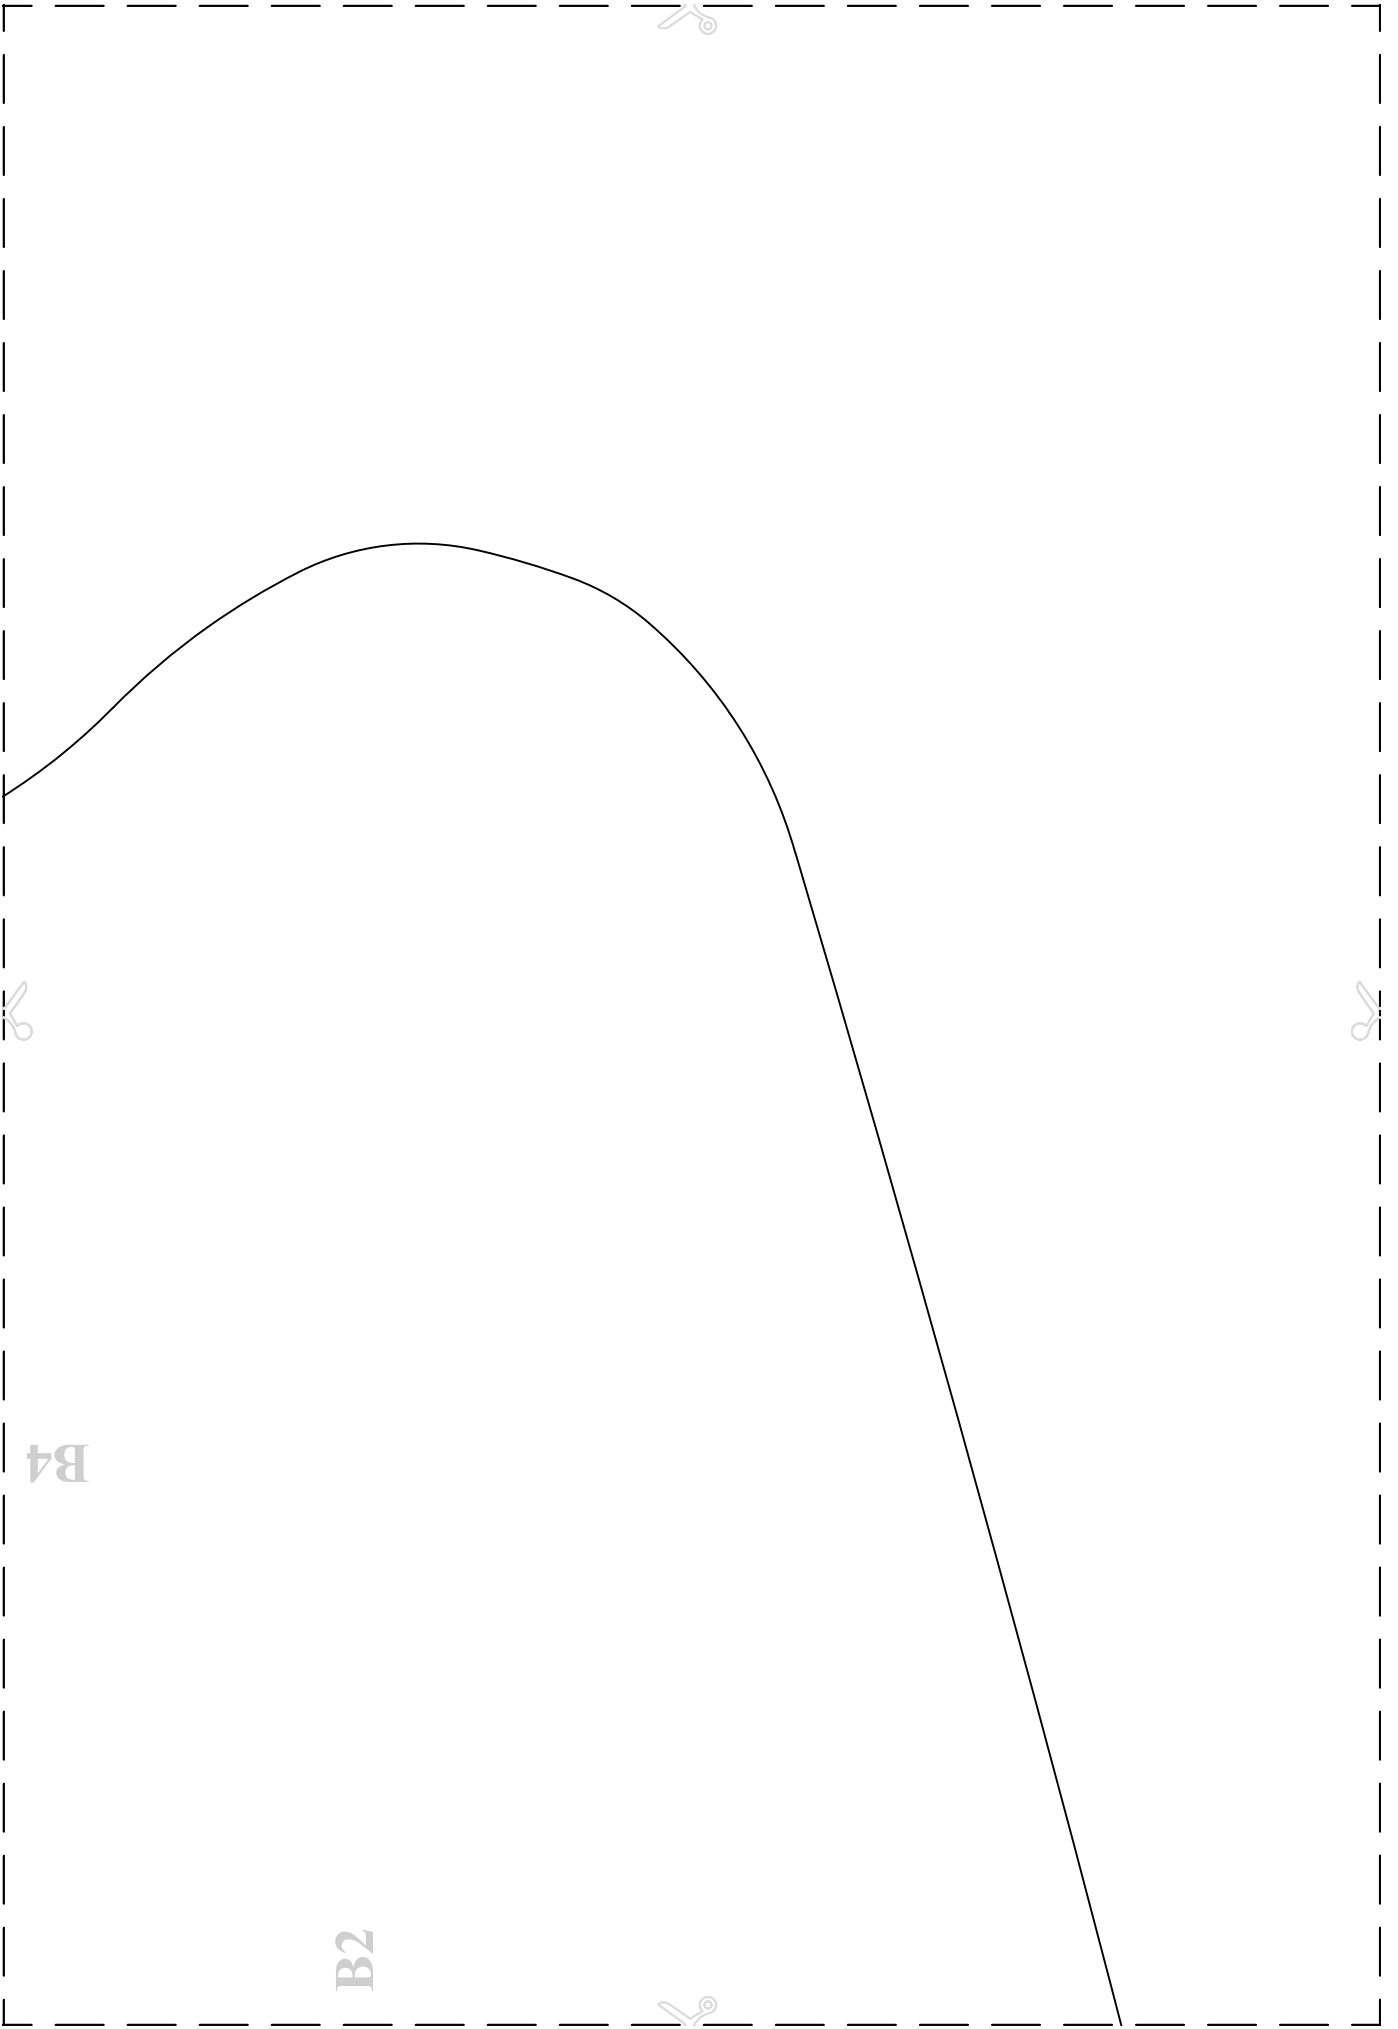



B4



B2

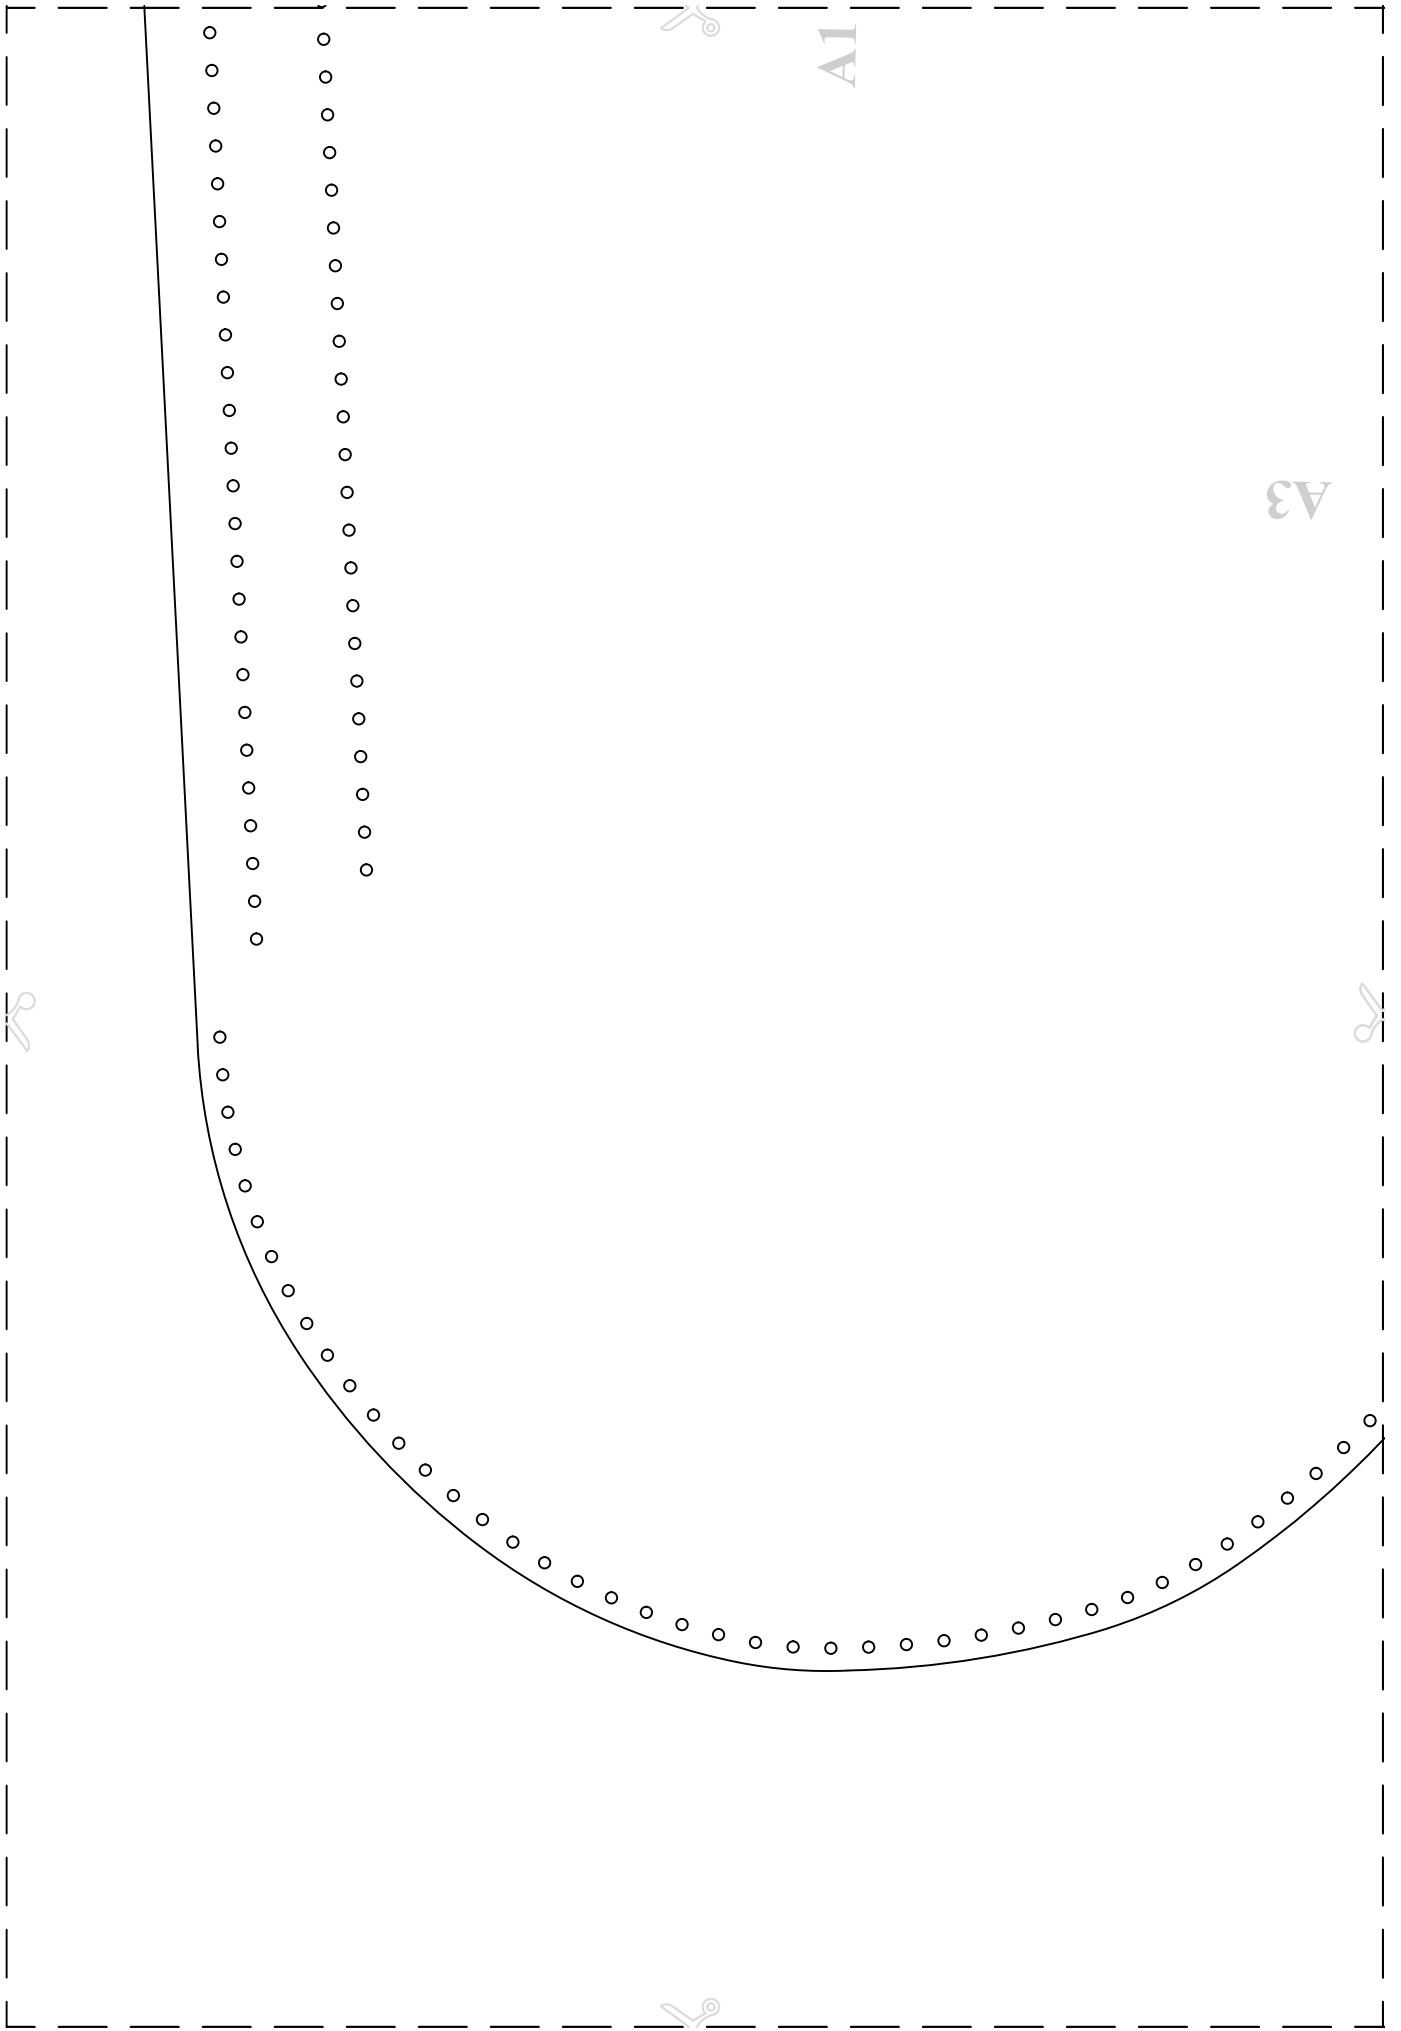

A1


A3

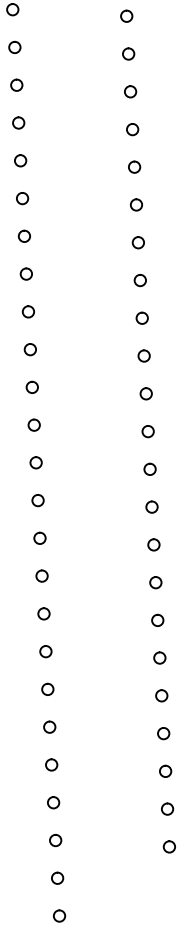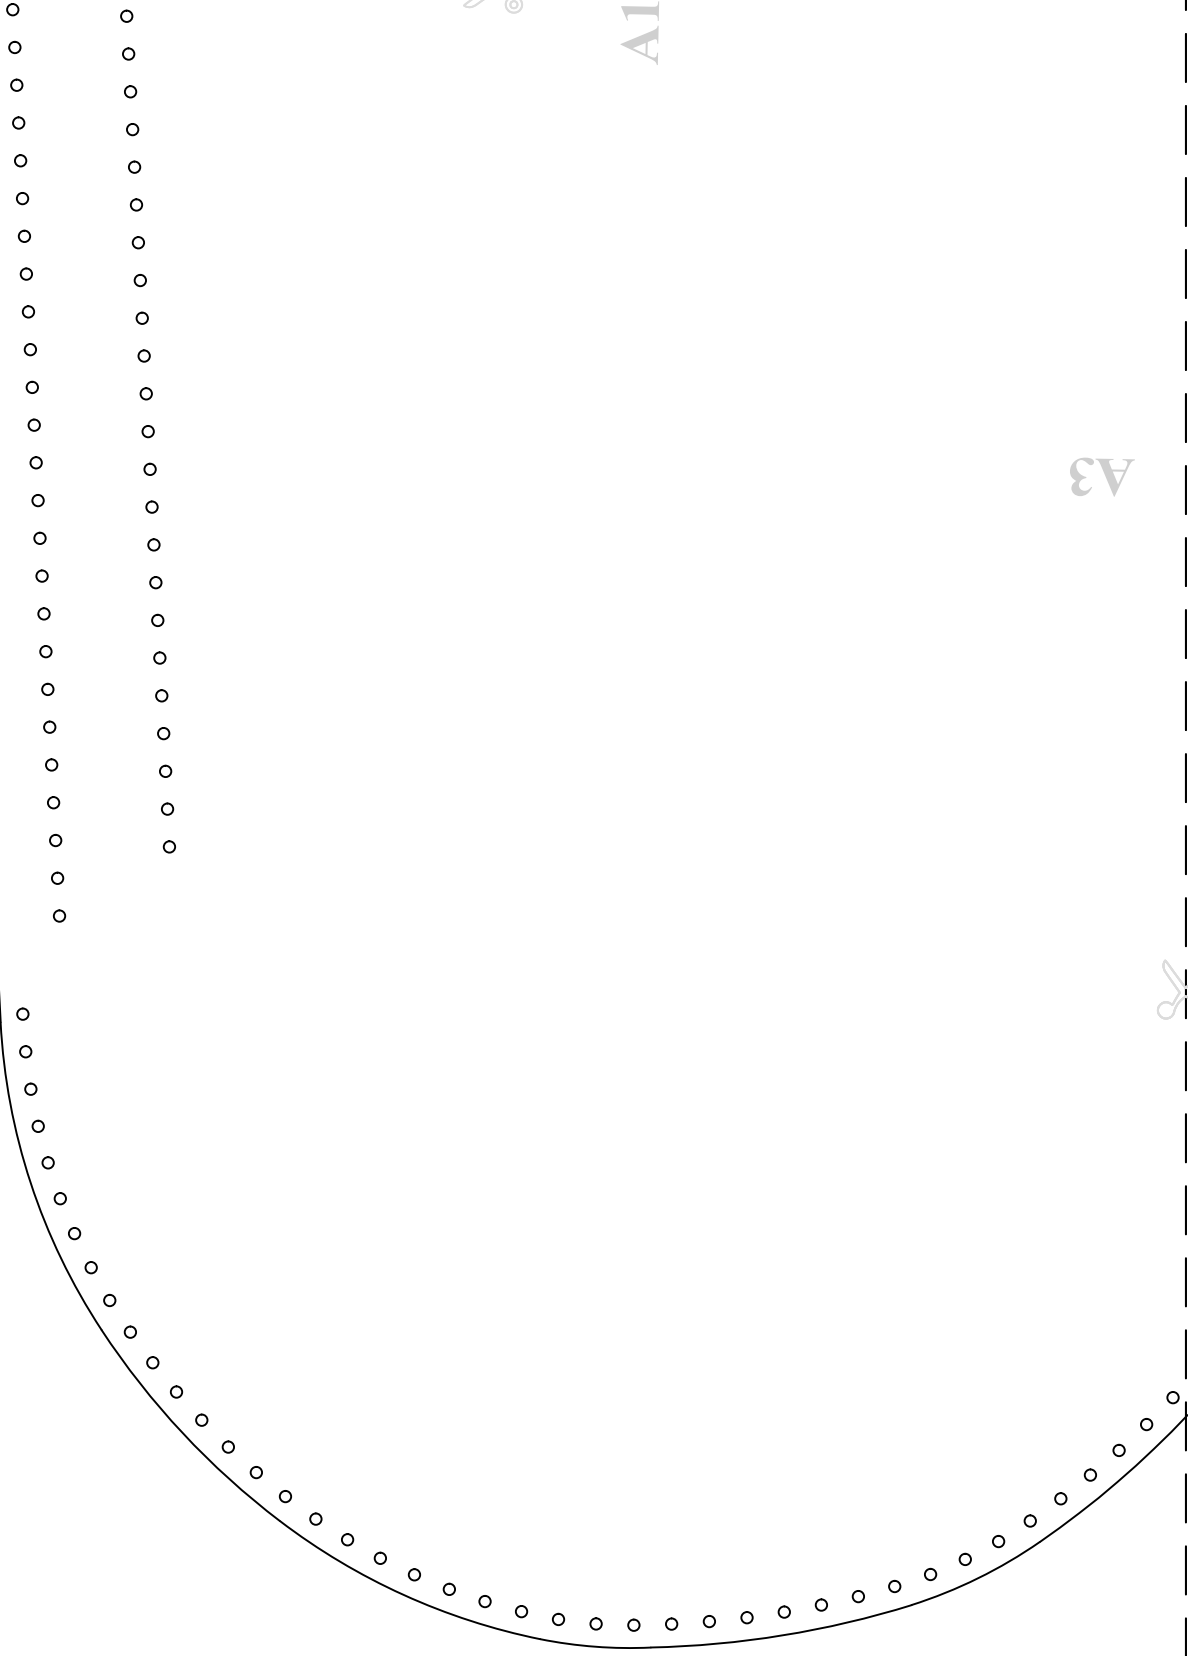

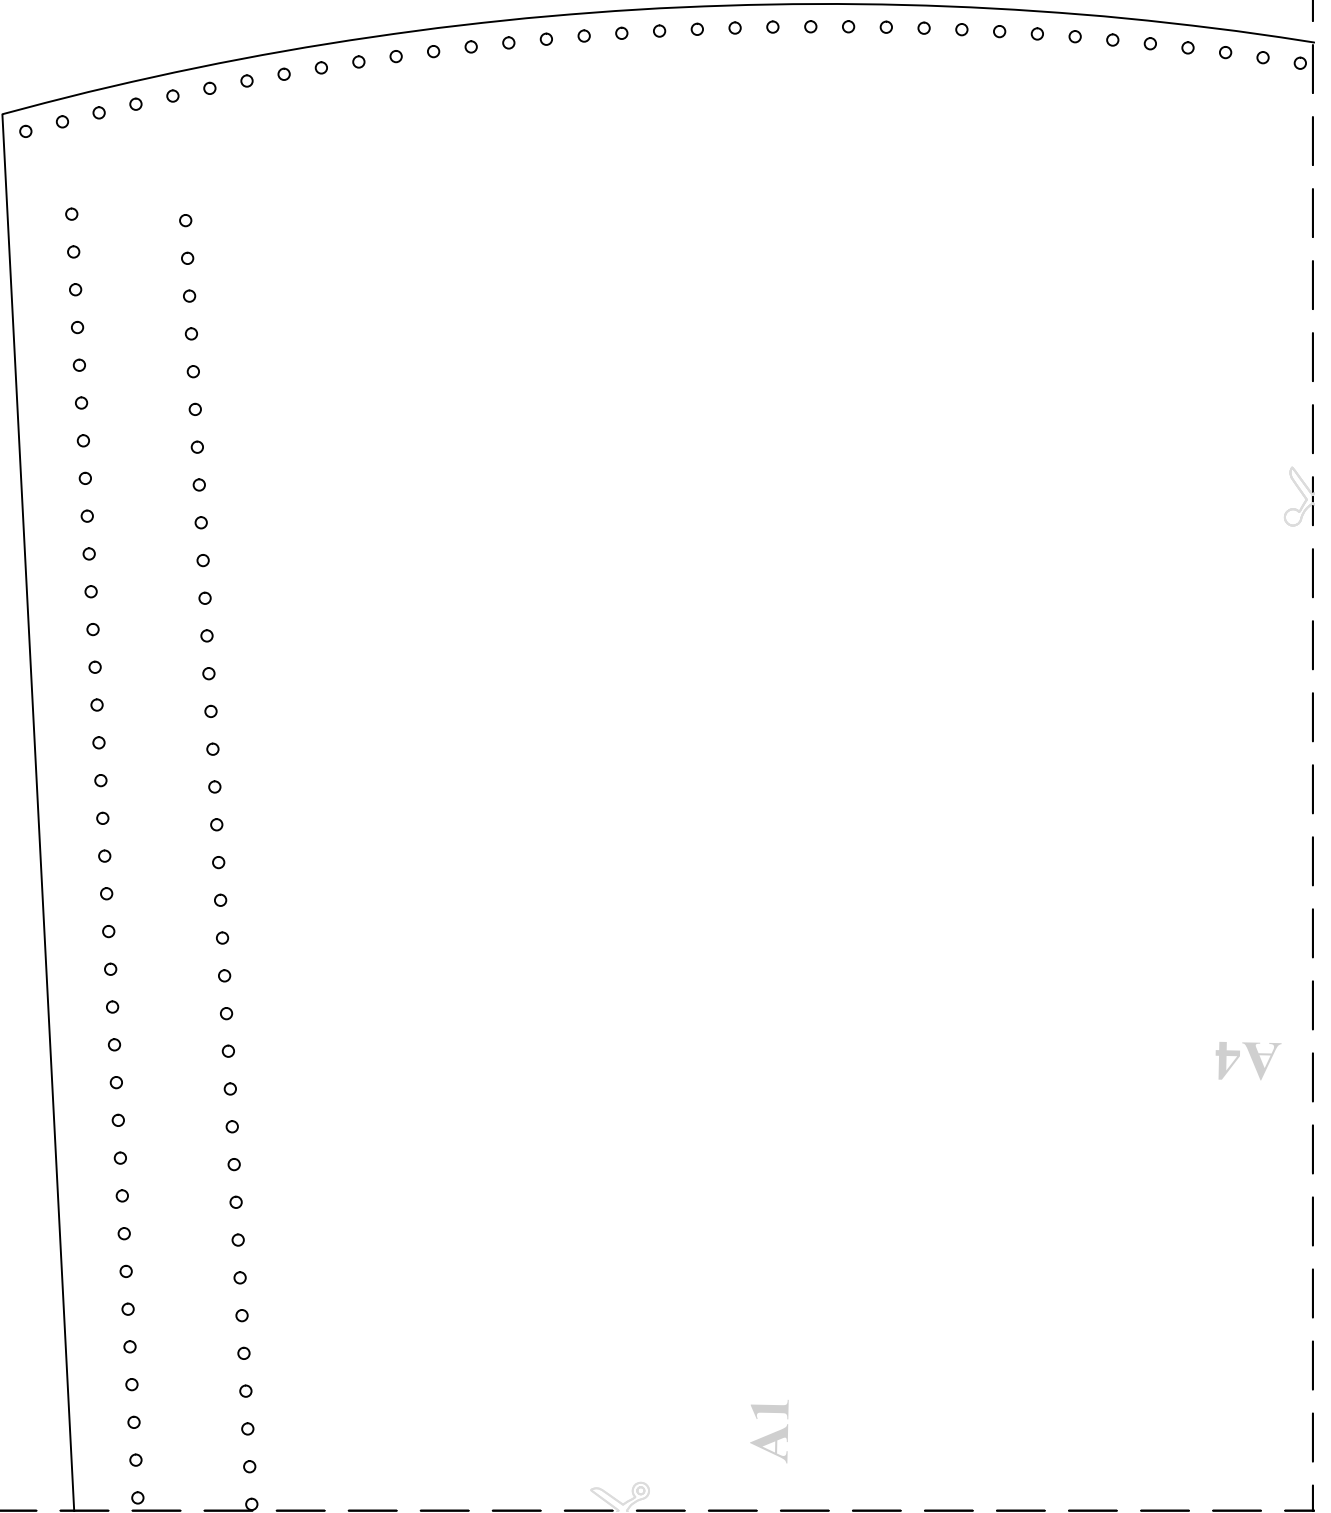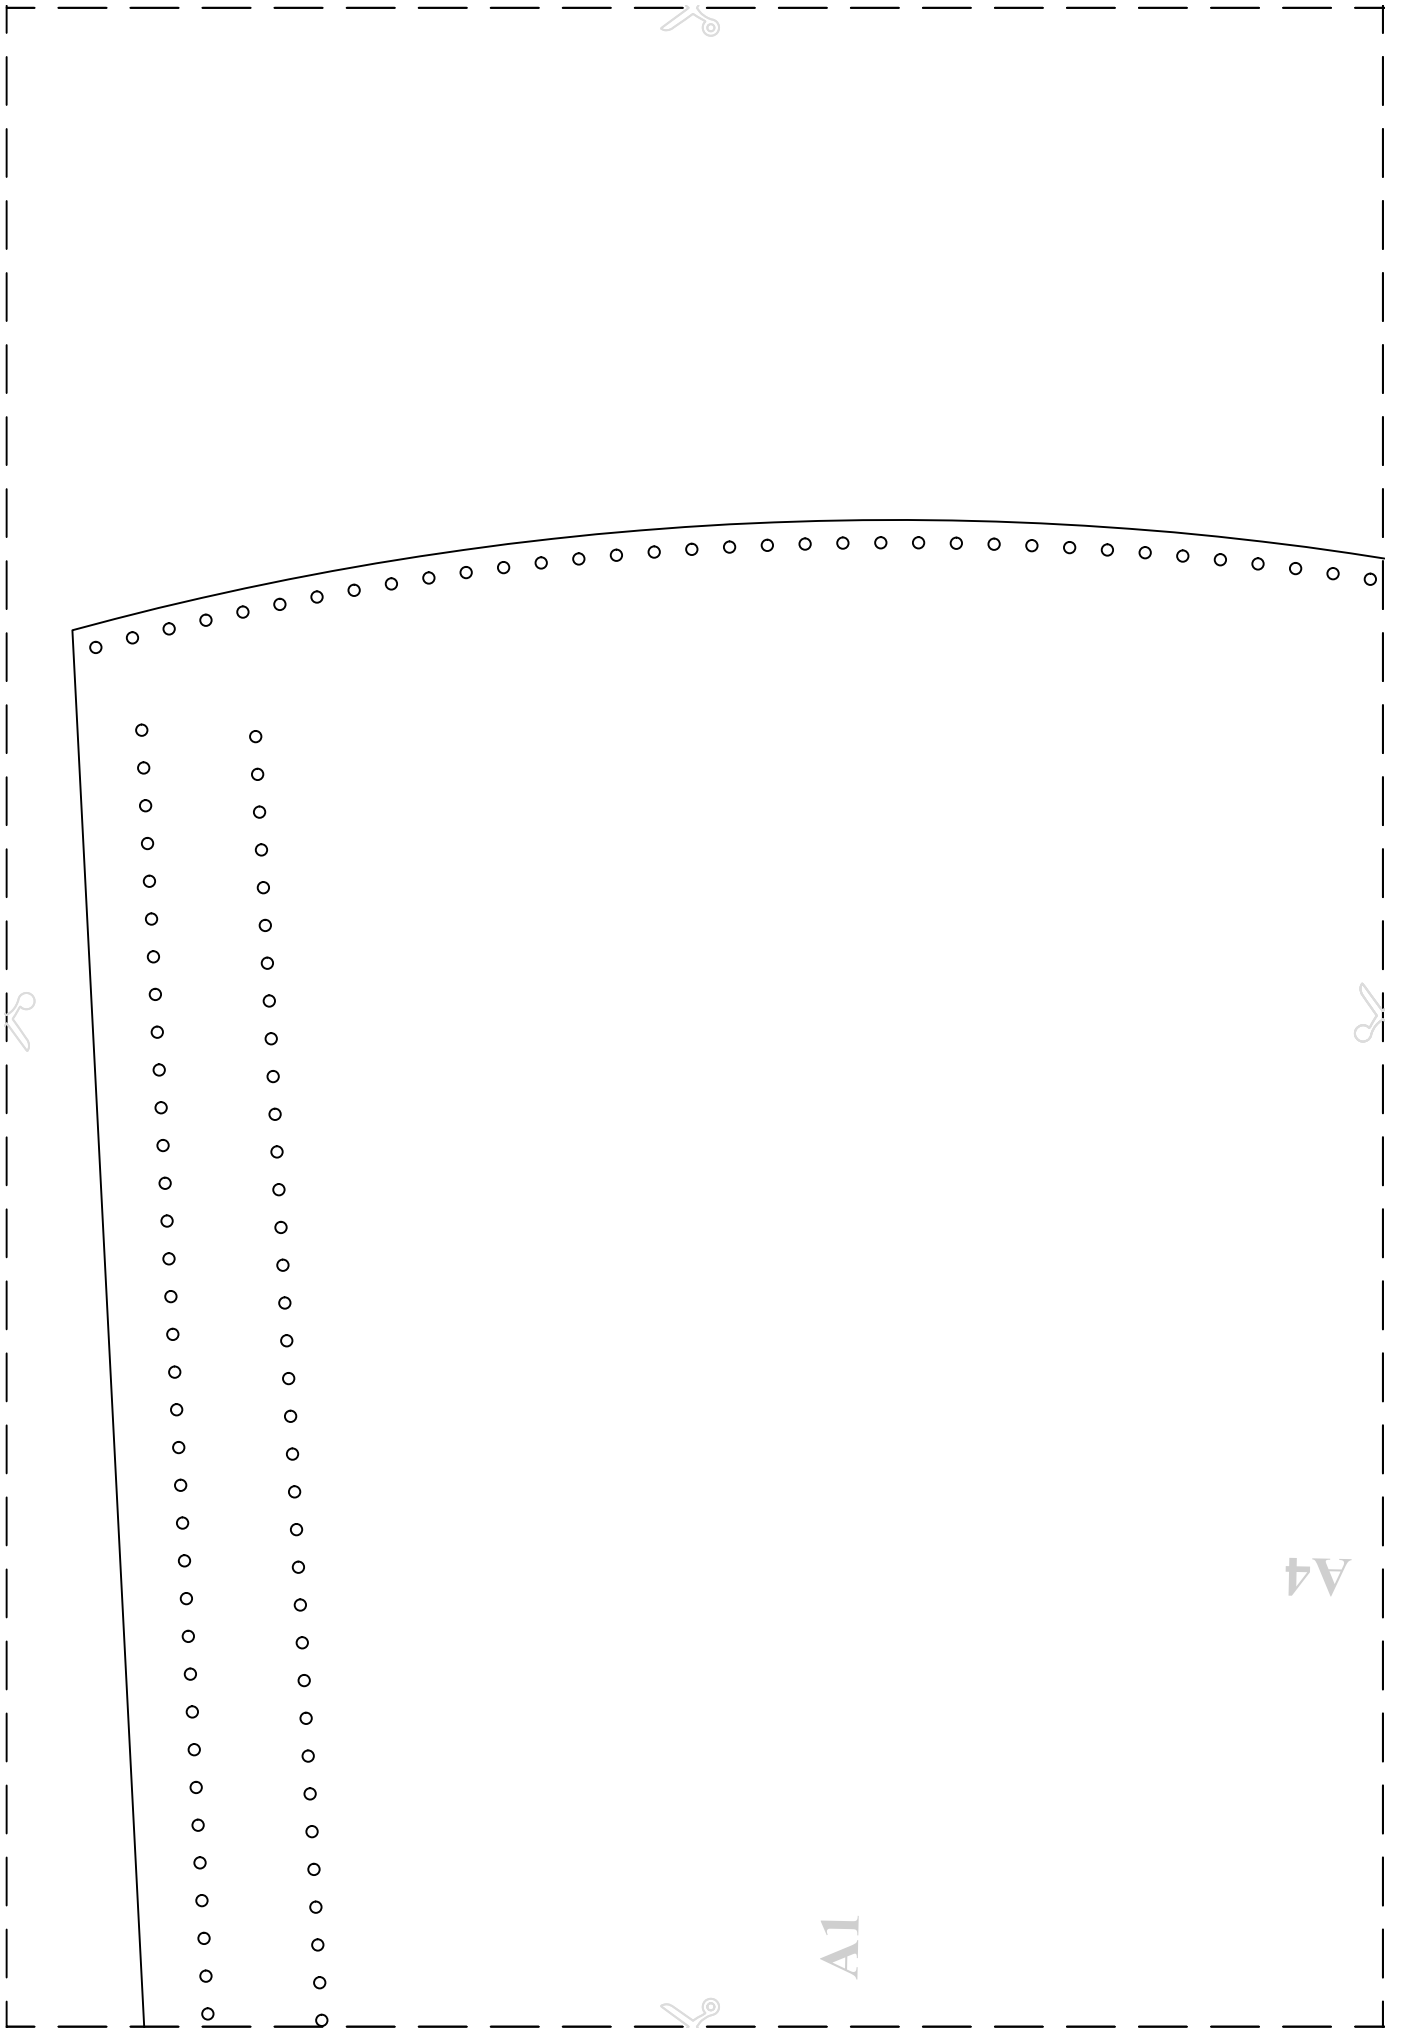


A1

A4

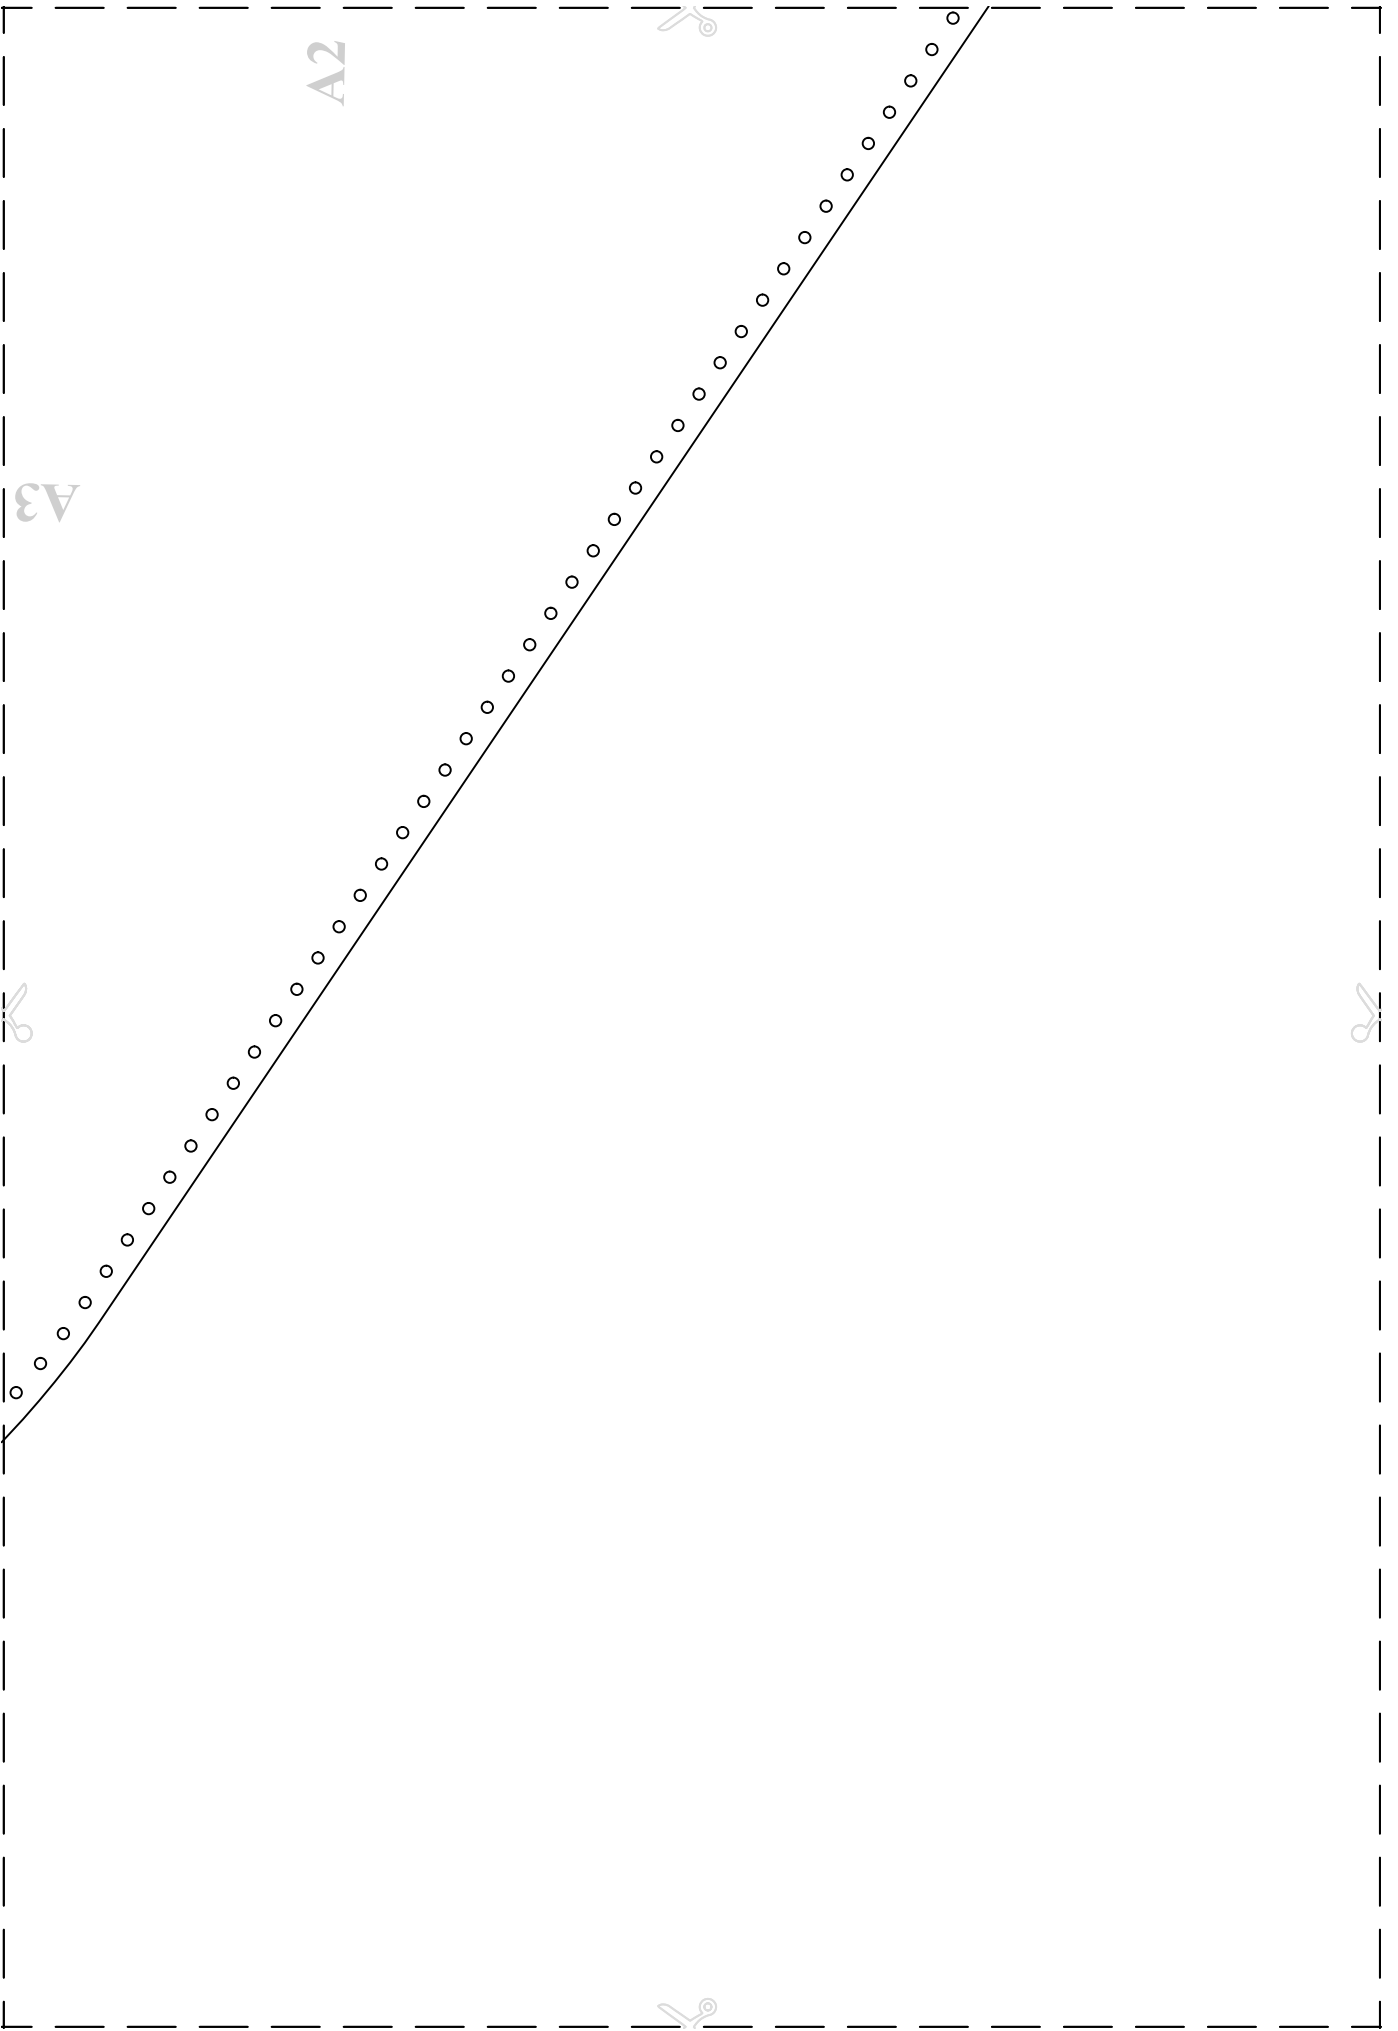

A2

A3

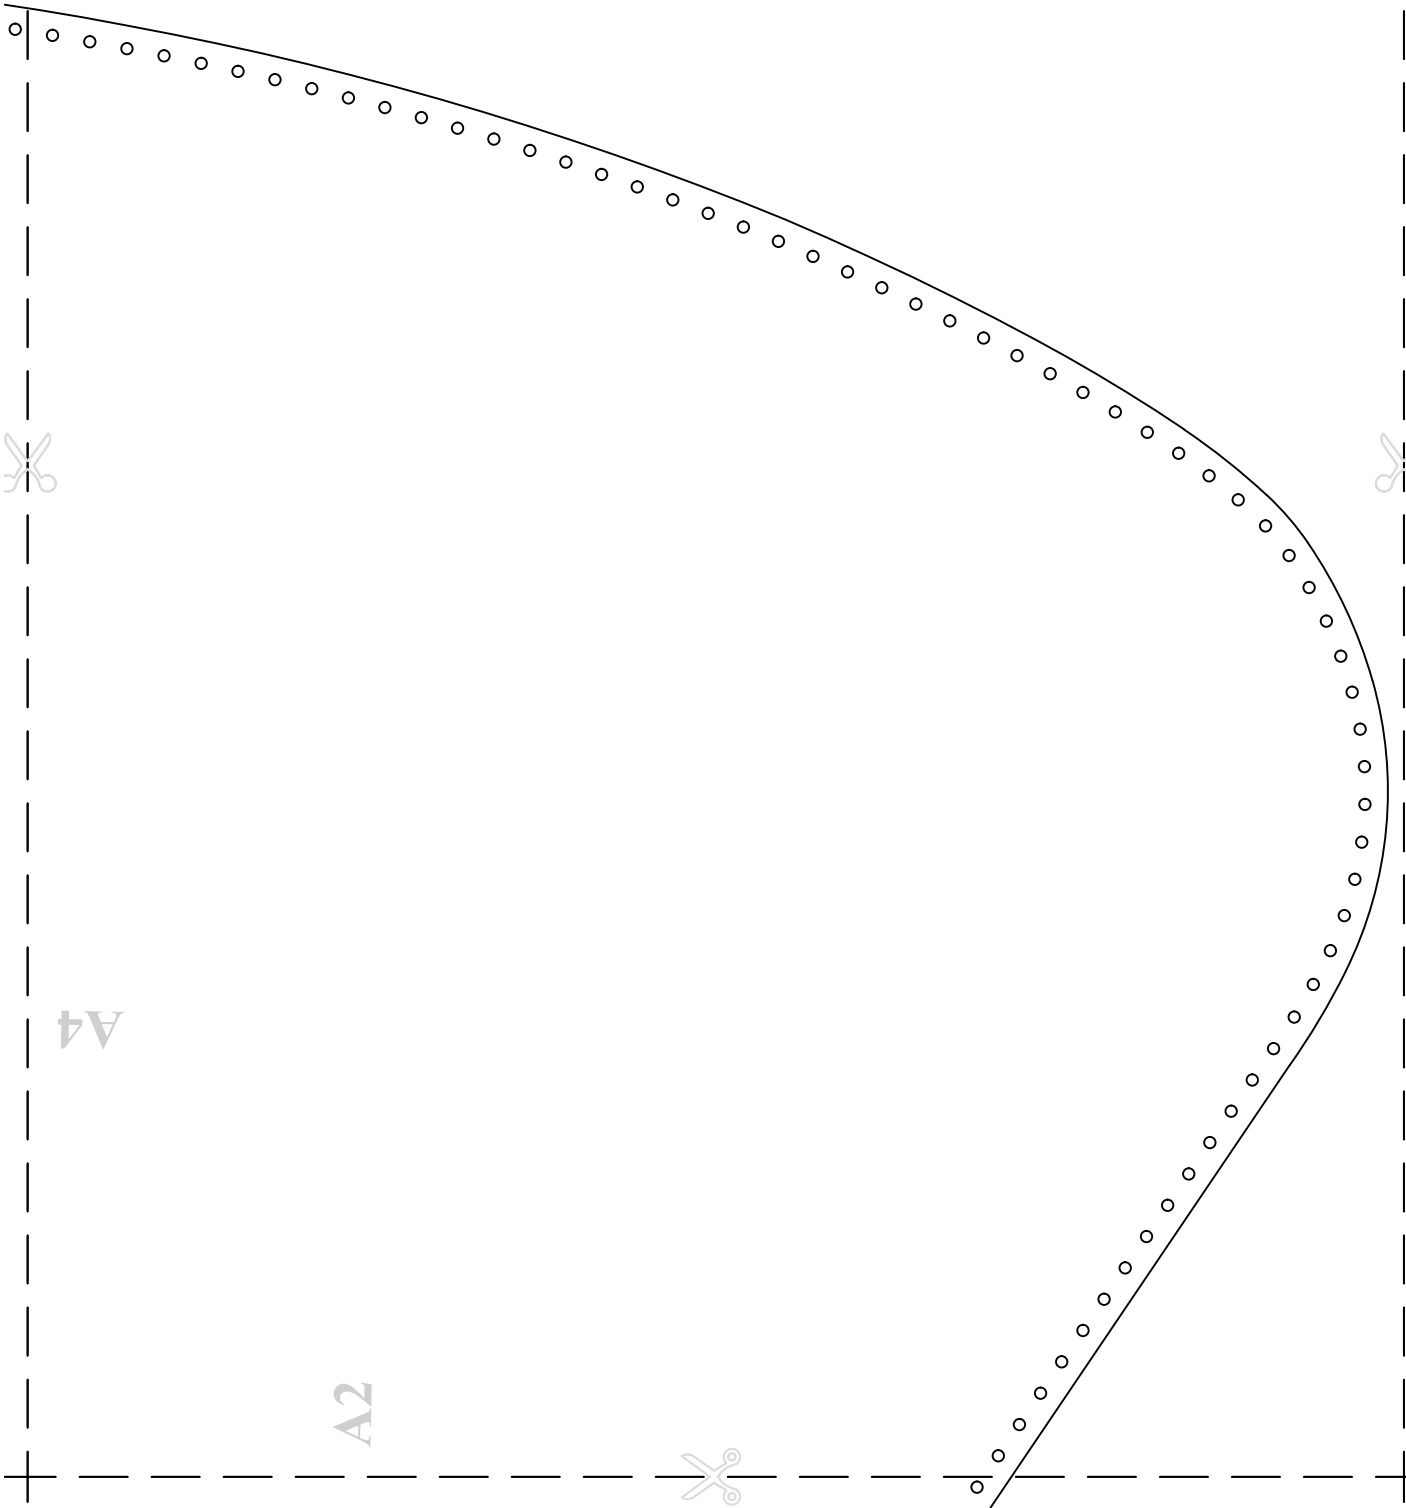


A4

A2


D1



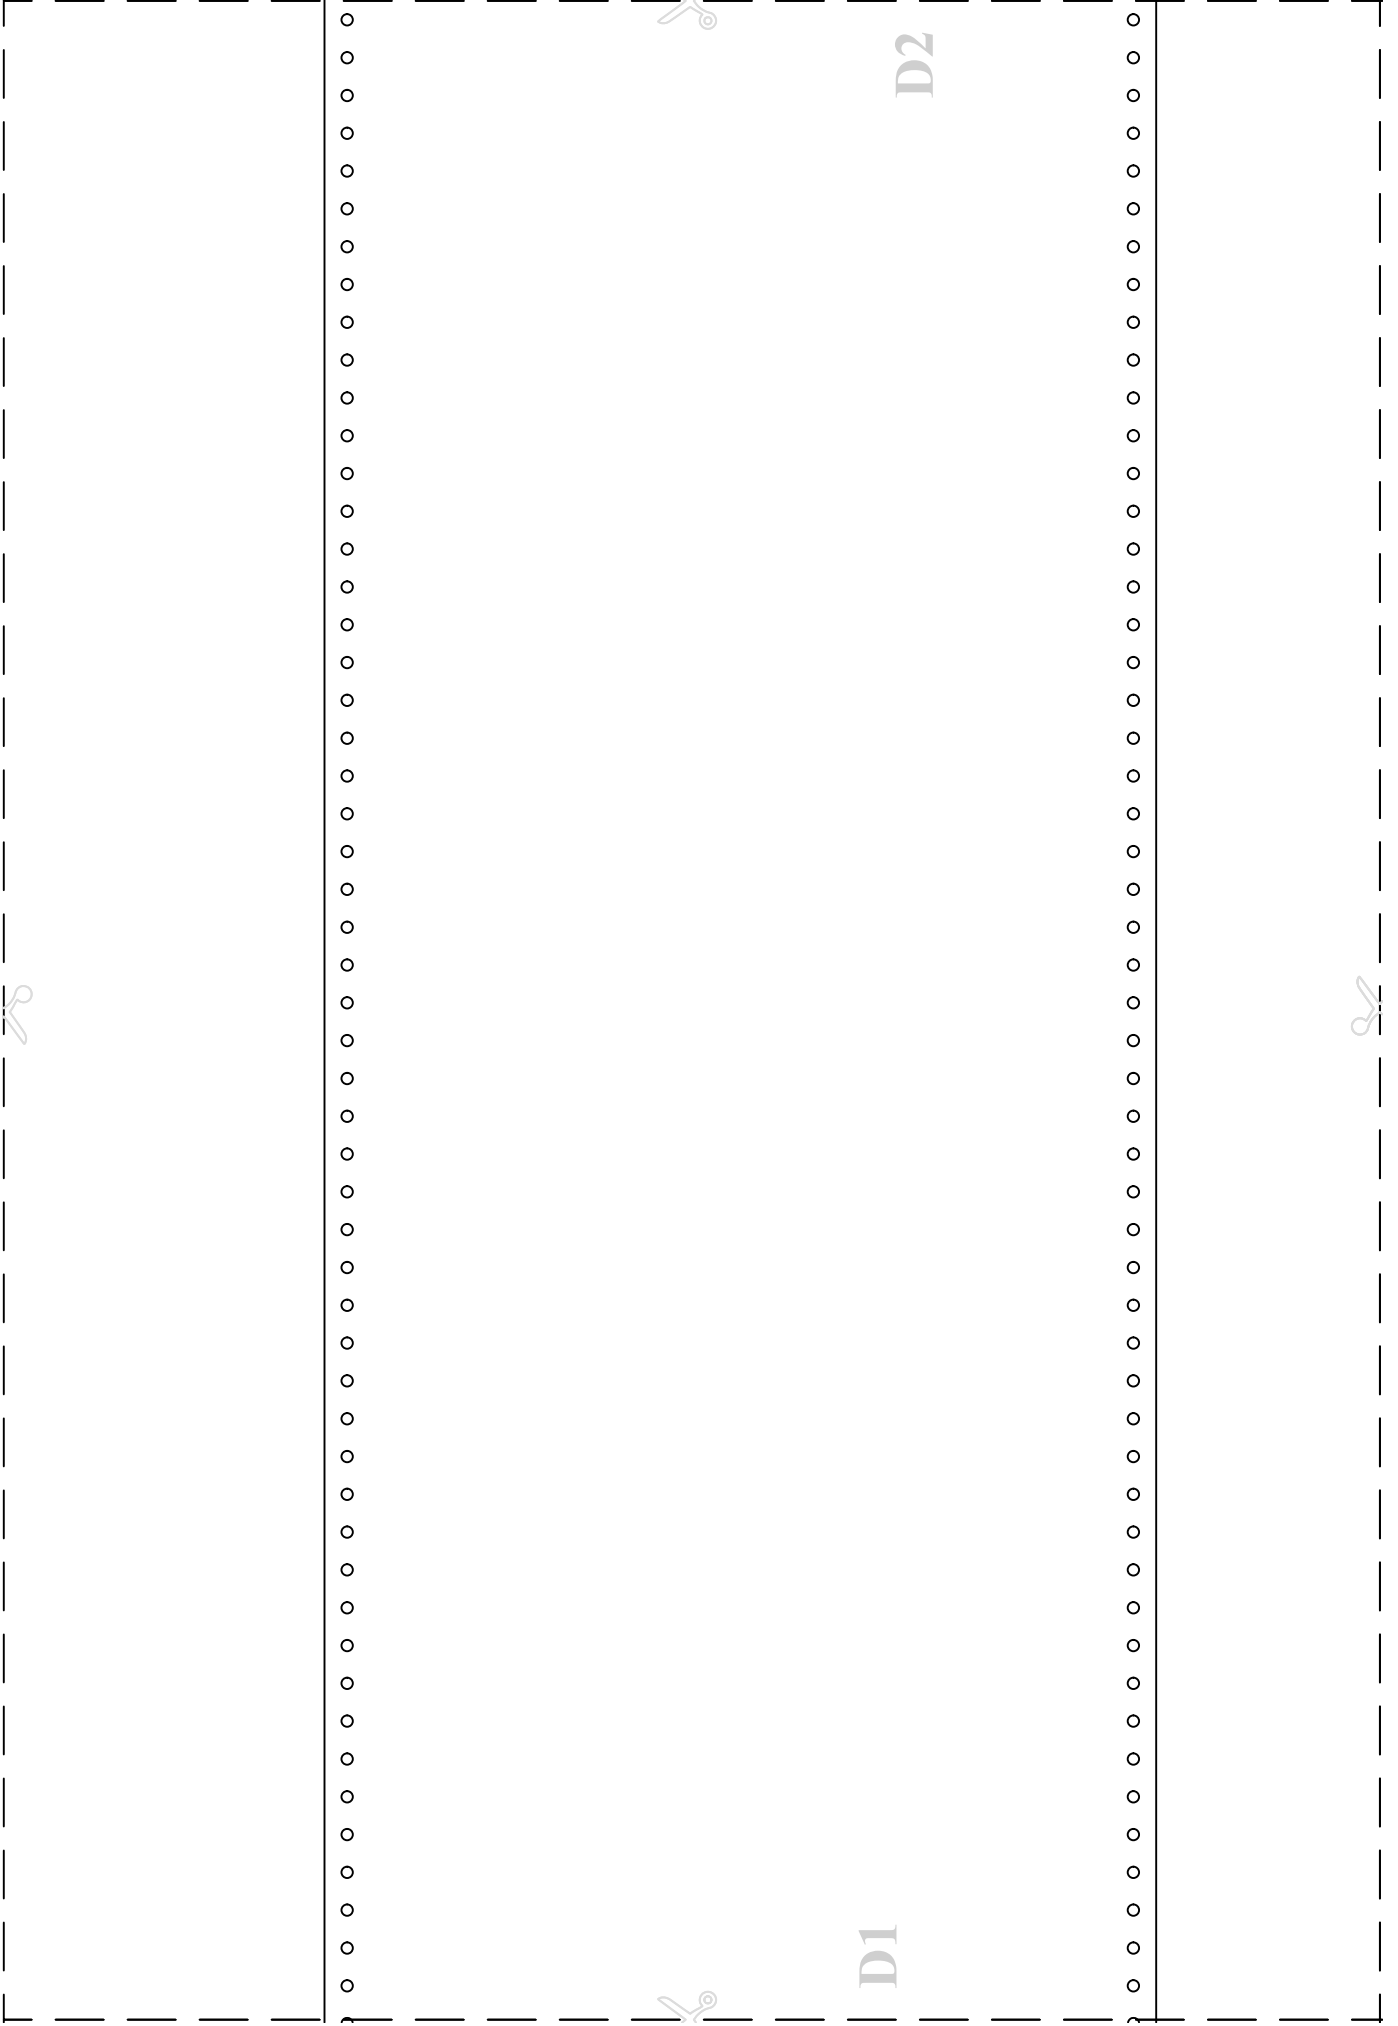


D1

D2




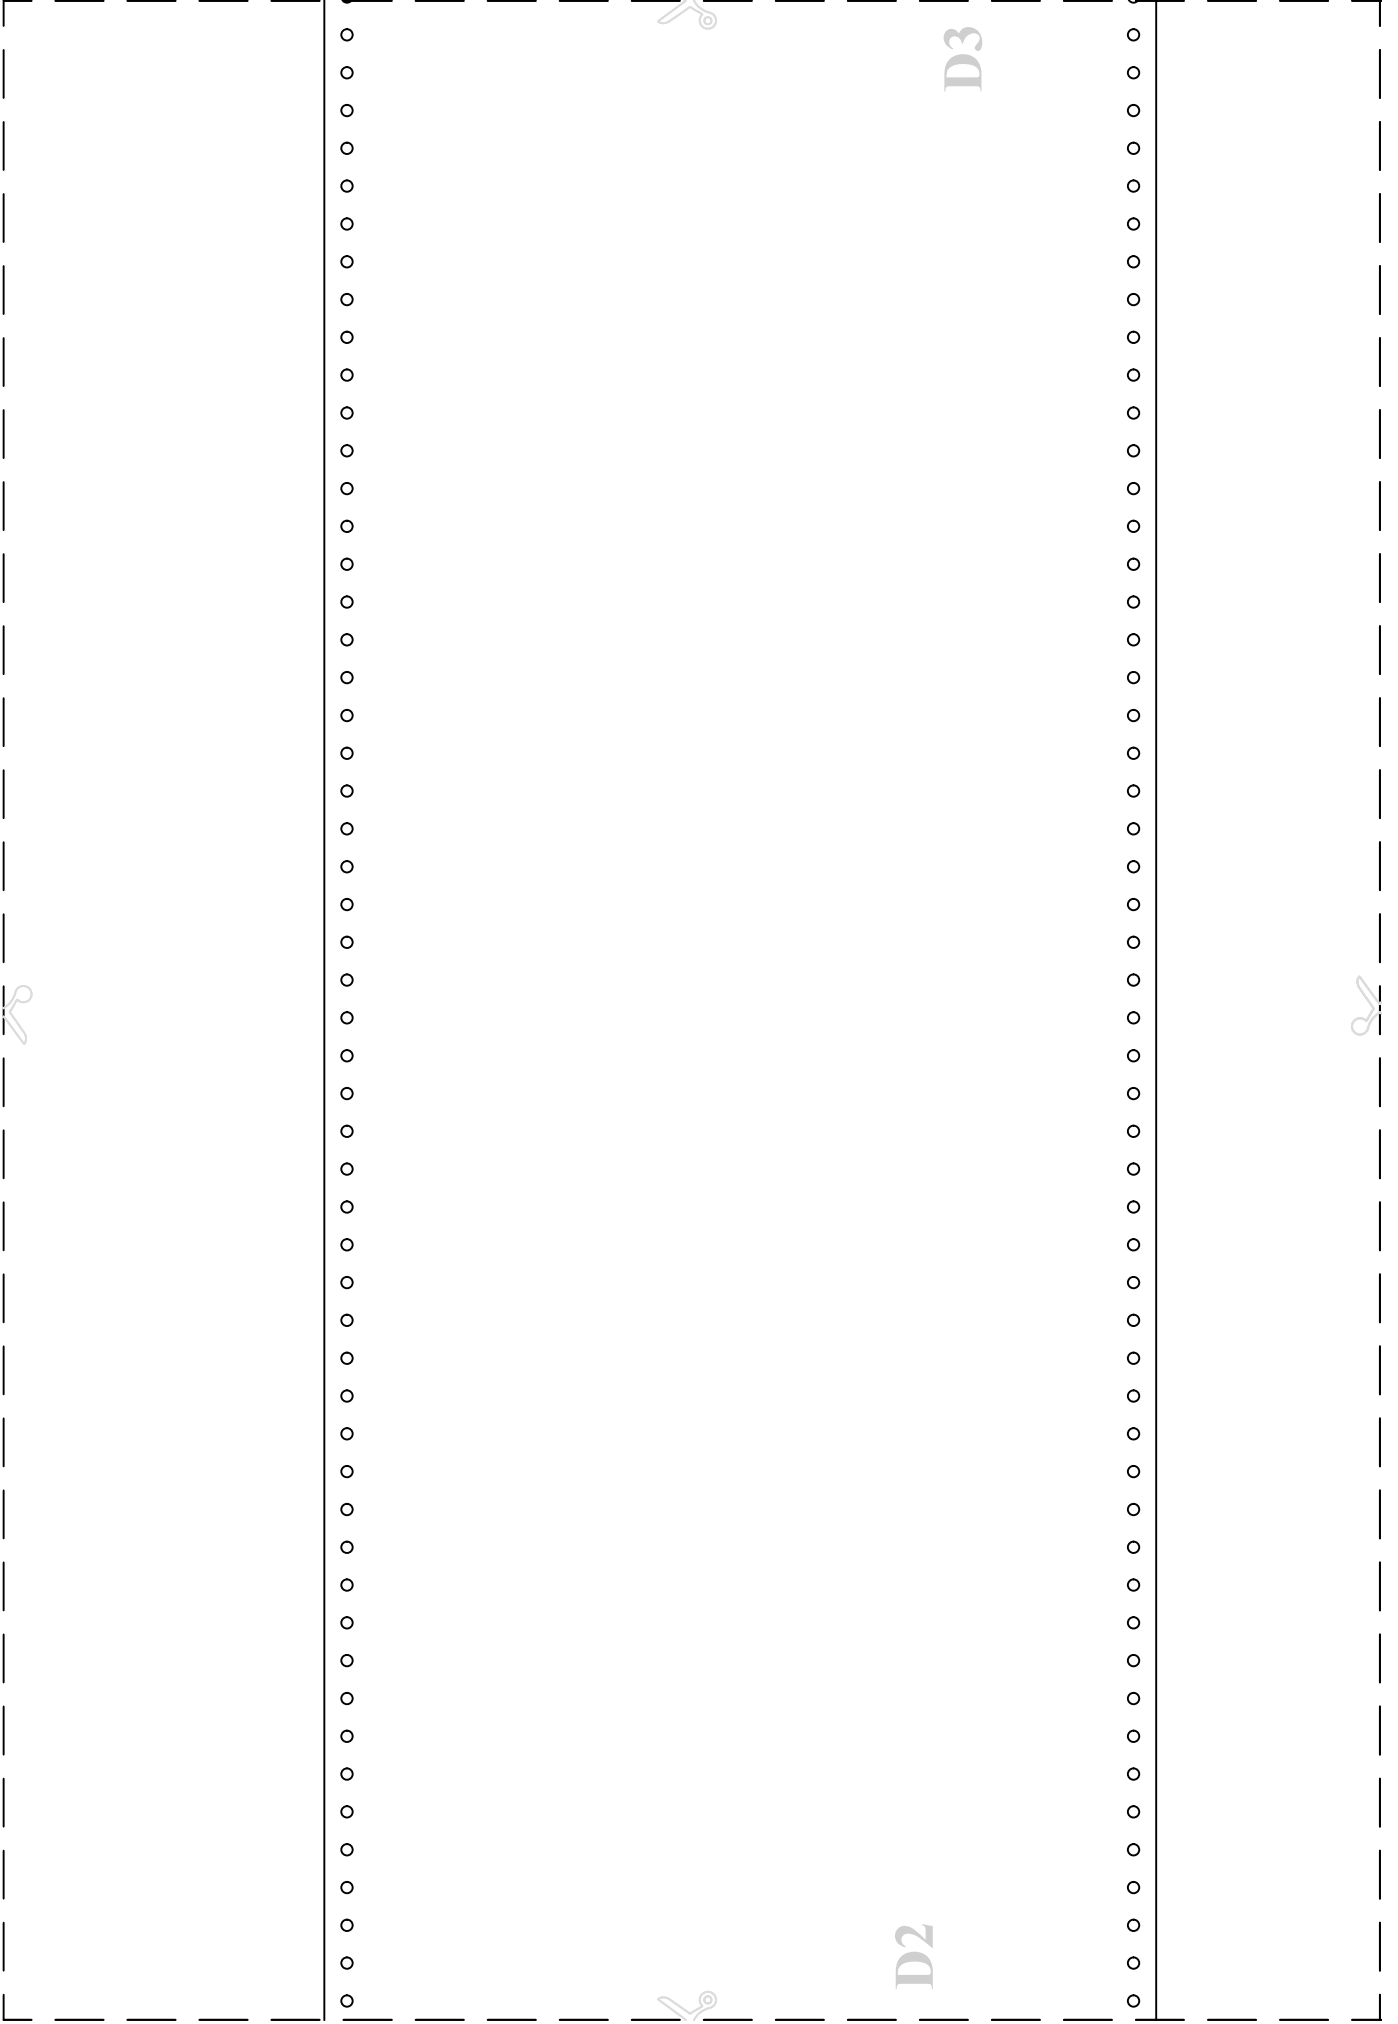



D2

D3

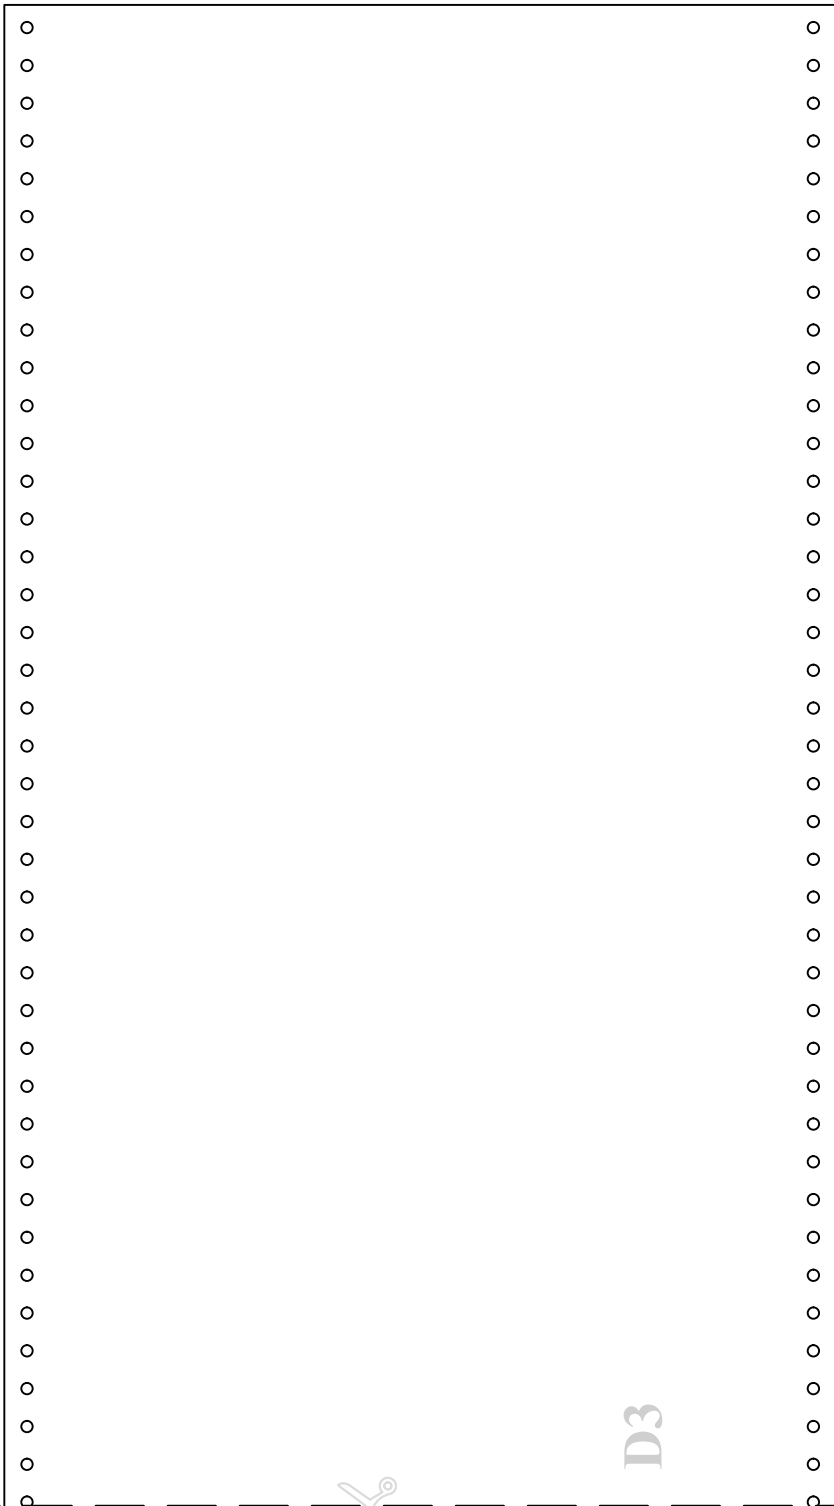

D3

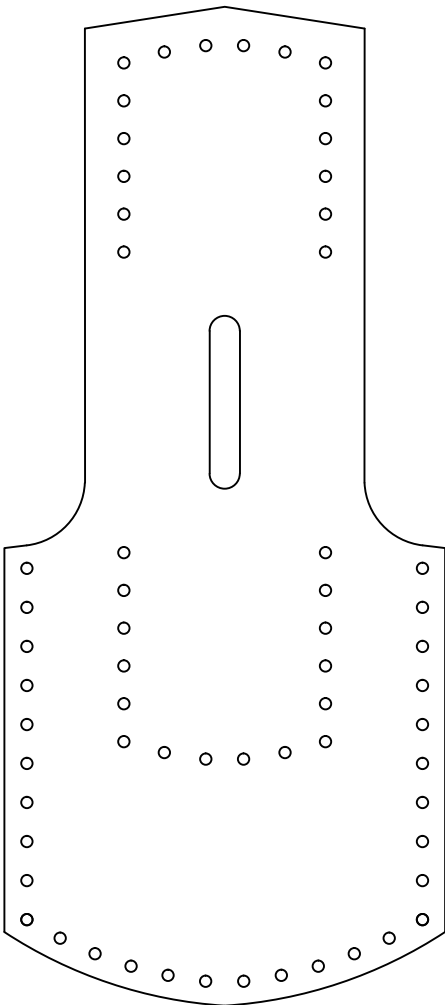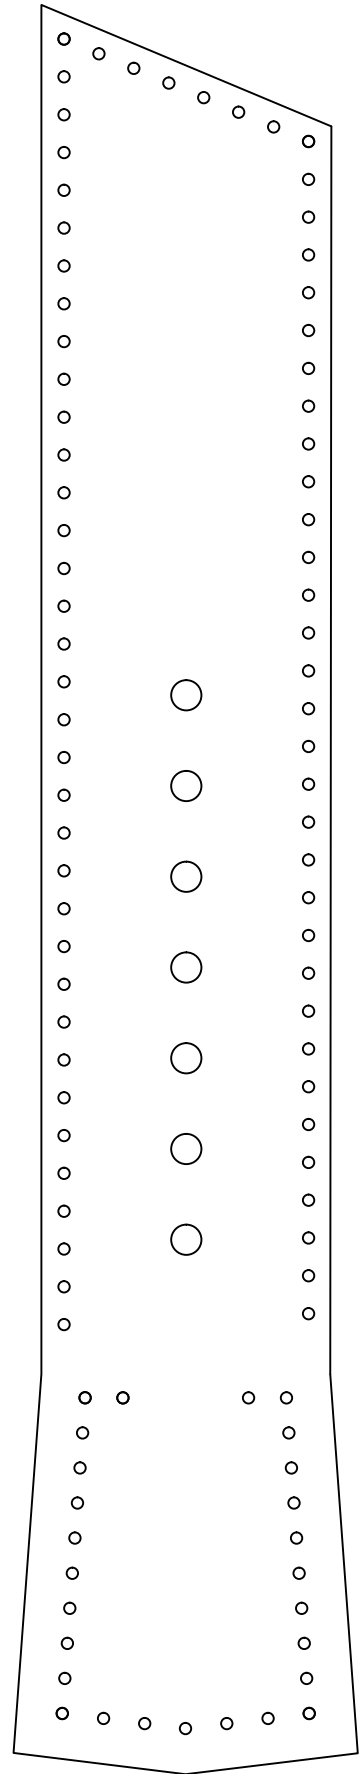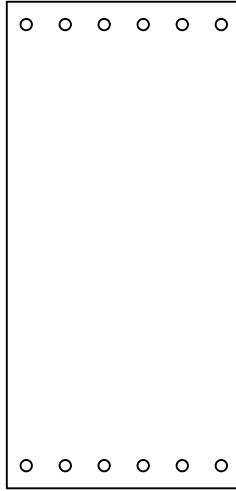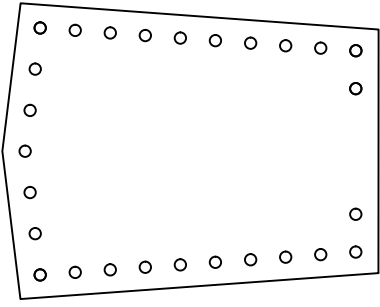


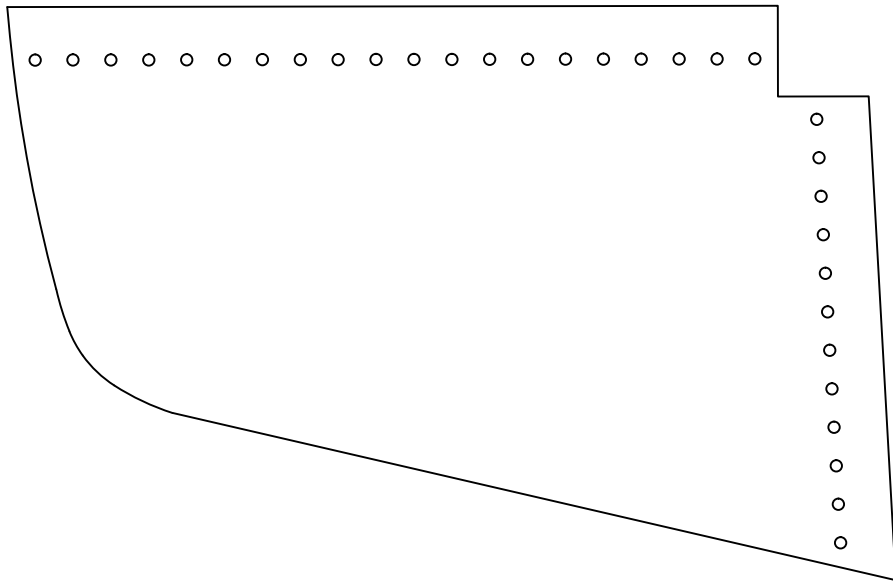




C1


C4

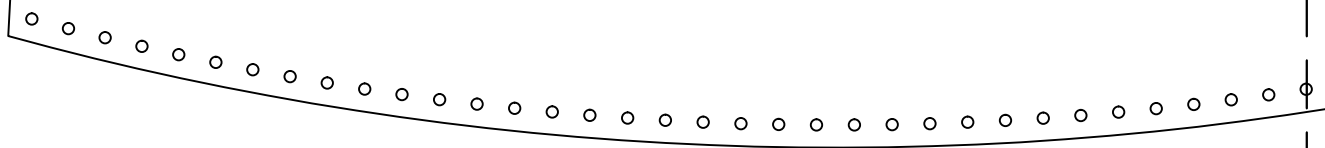

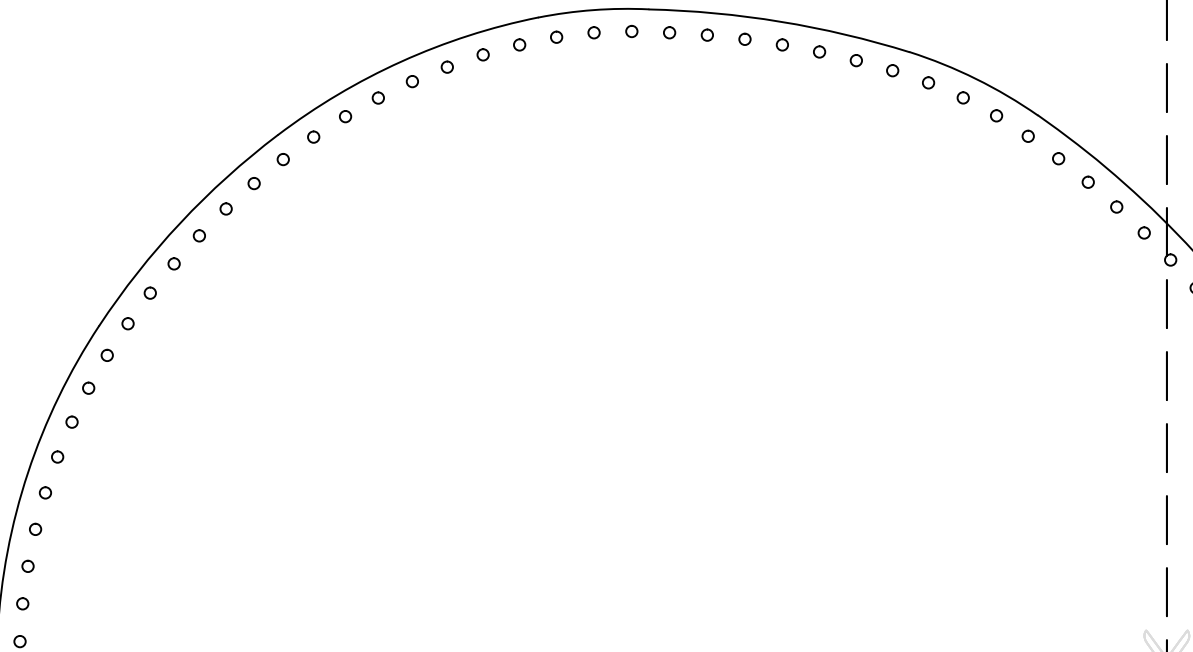

C3

C1

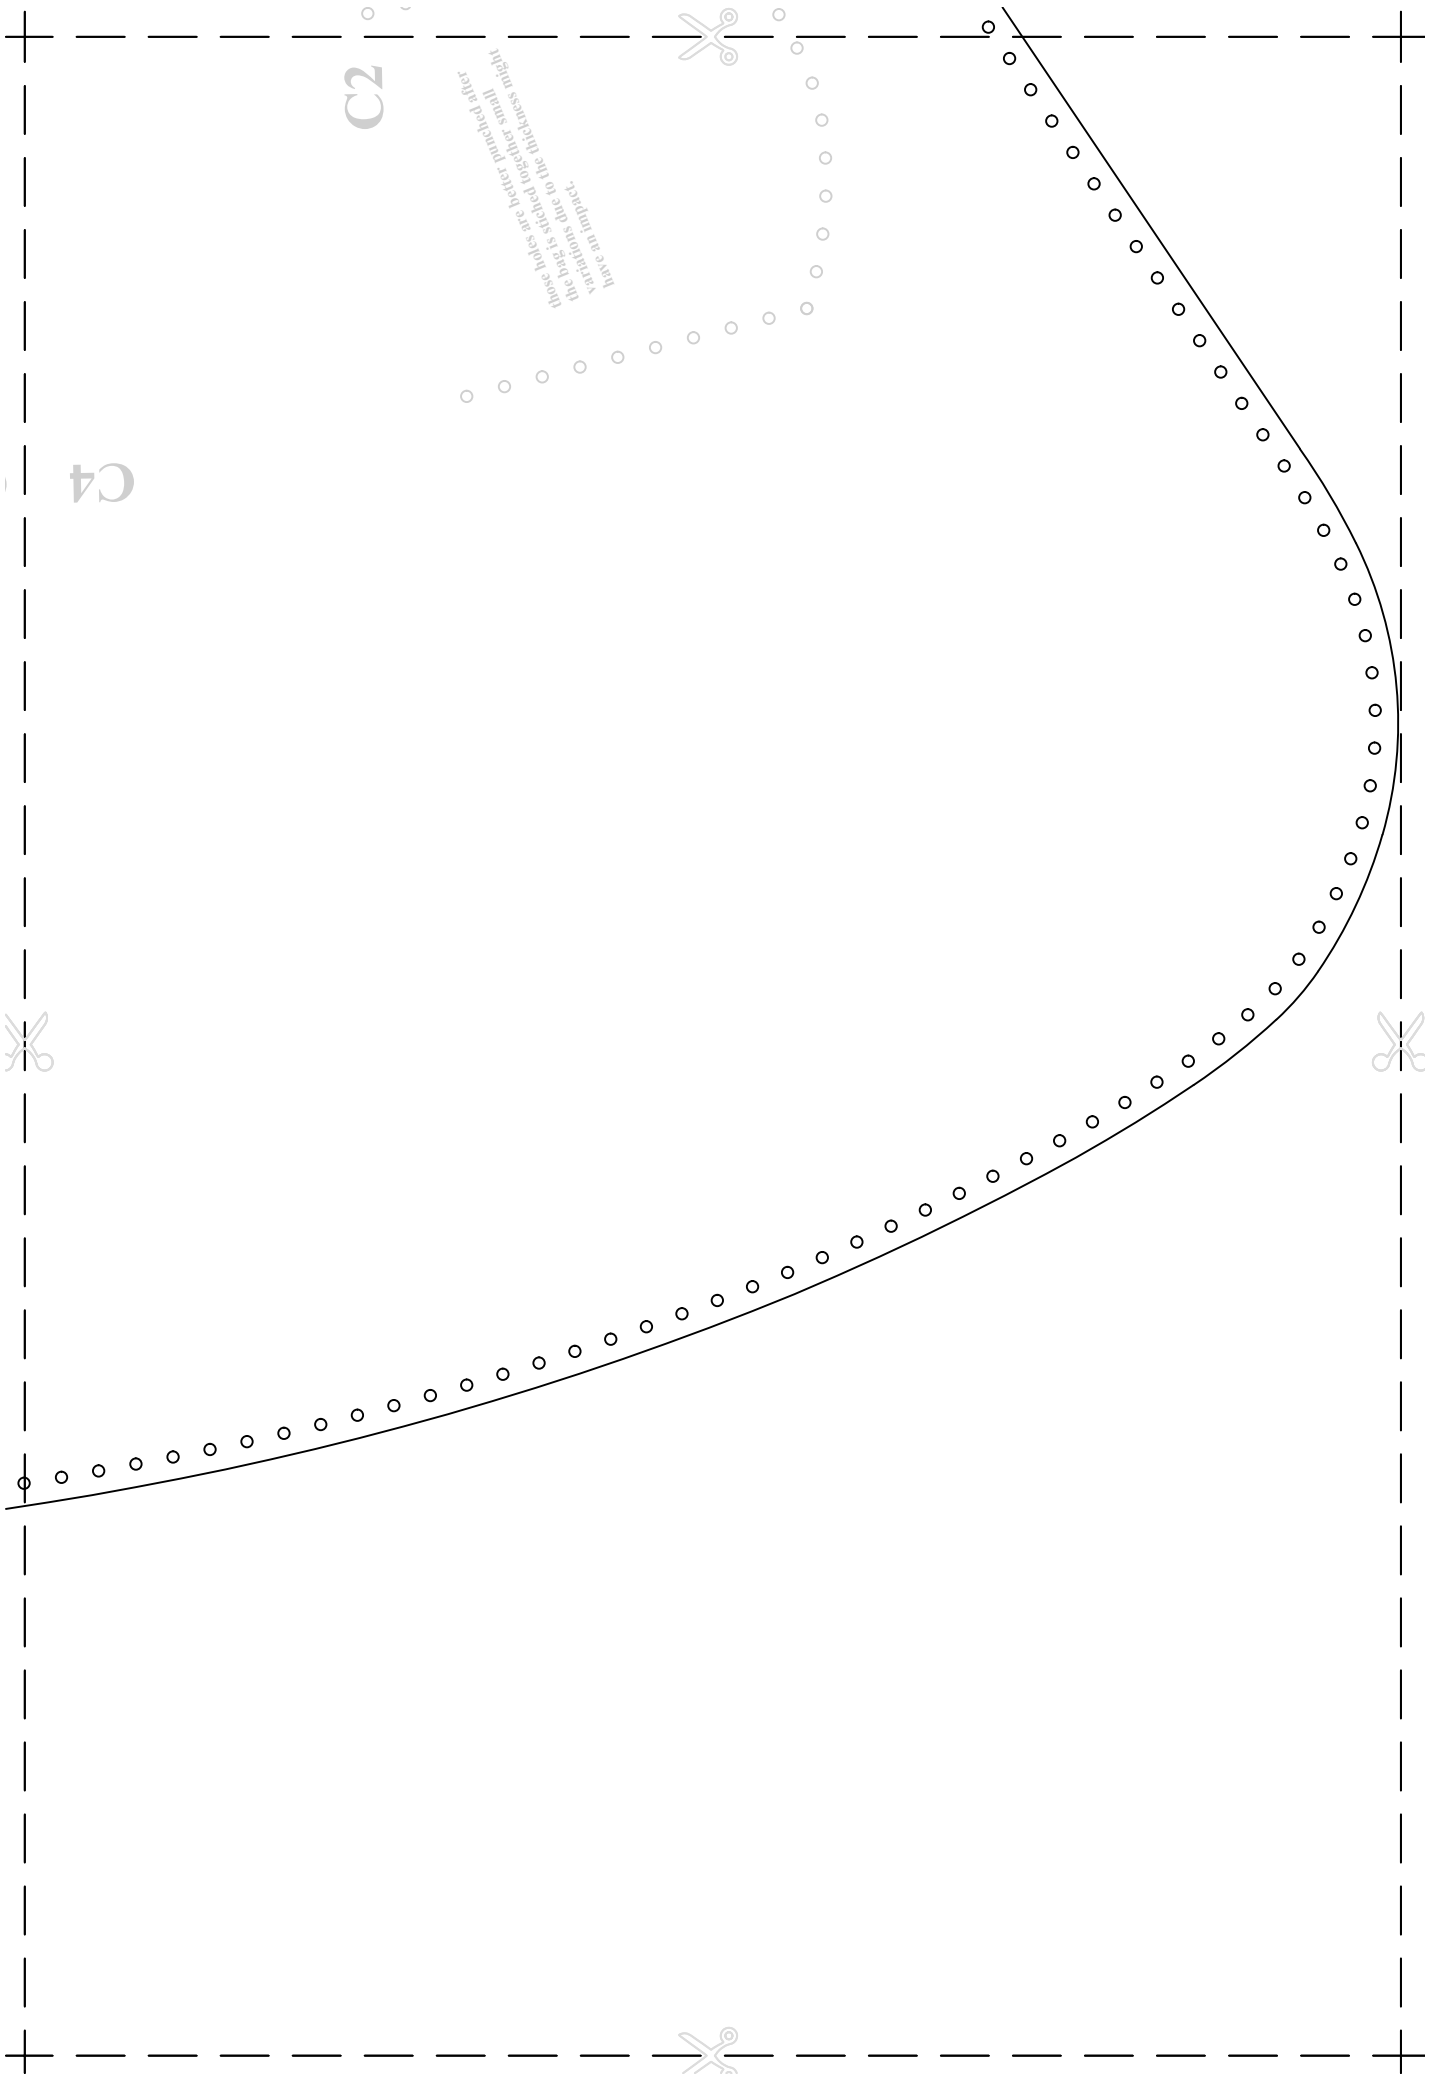


C2

These lines are better matched after variations due to the thickness might have an impact.
The base is selected together small after

C4



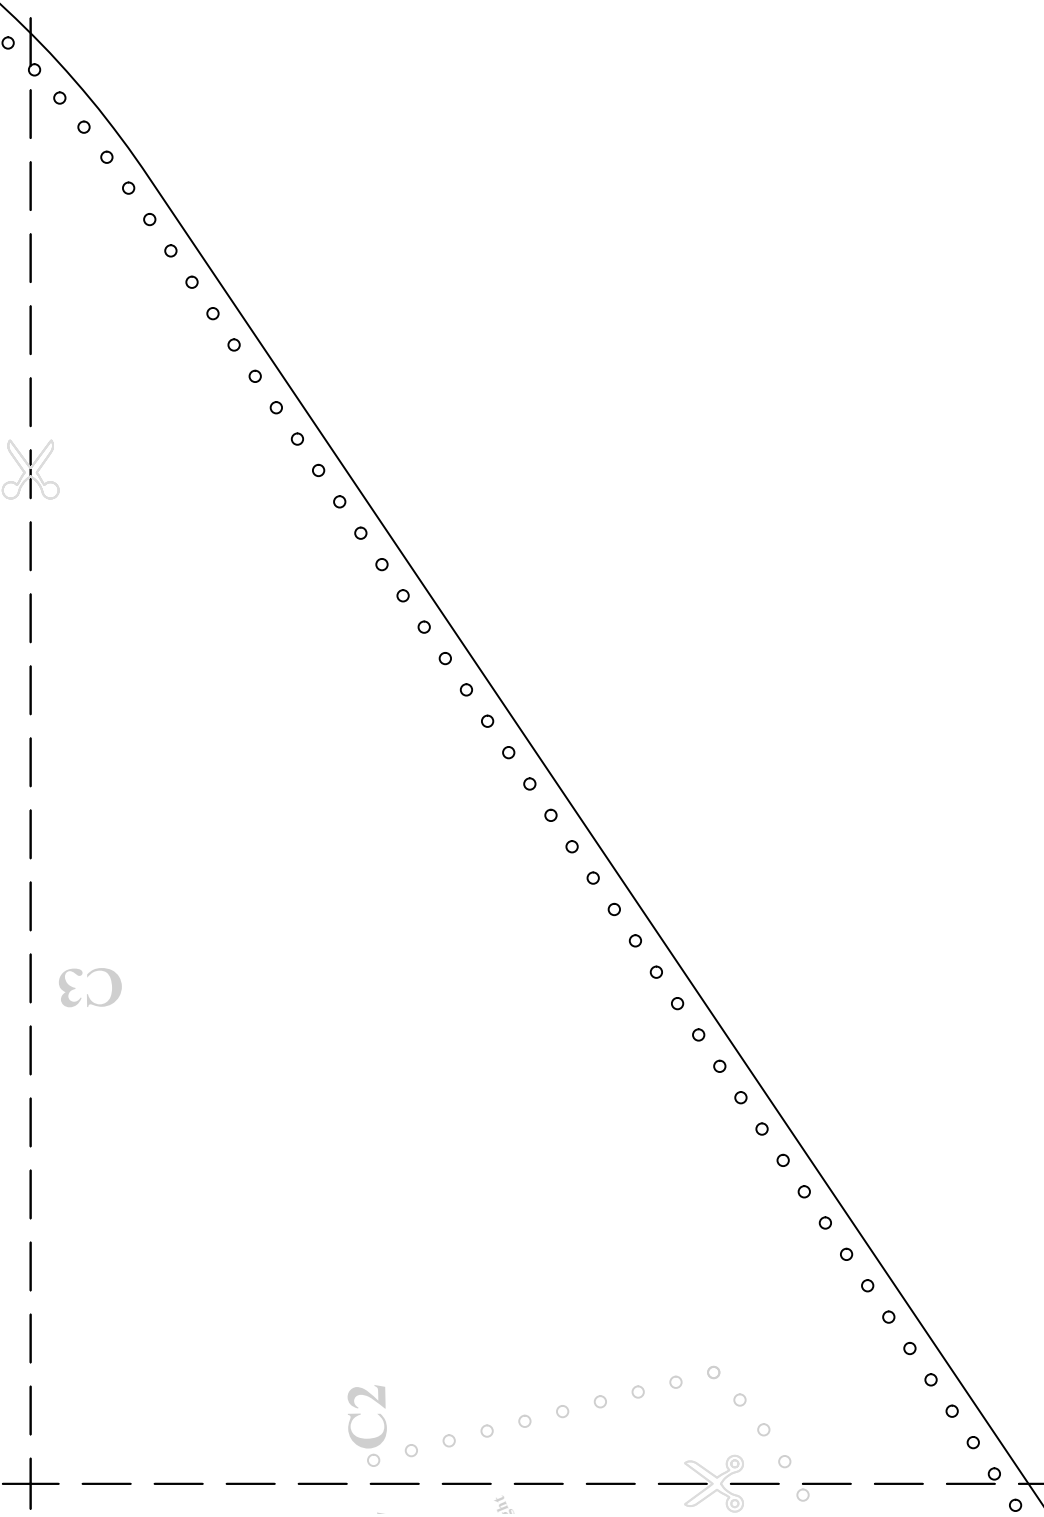

C3

C2

Time

