

MARK TO LINE GUSSET HOLE

○ RIVET

○
BACK STRAP
RIVET

BACK STRAP
RIVET ○

A 1

BAG BACK

○ RIVET

GREY
WOLF
LEATHER



○
RIVET


RIVET
○

A2

RIVET
○

RIVET
○

GREY
WOLFE
LEATHER

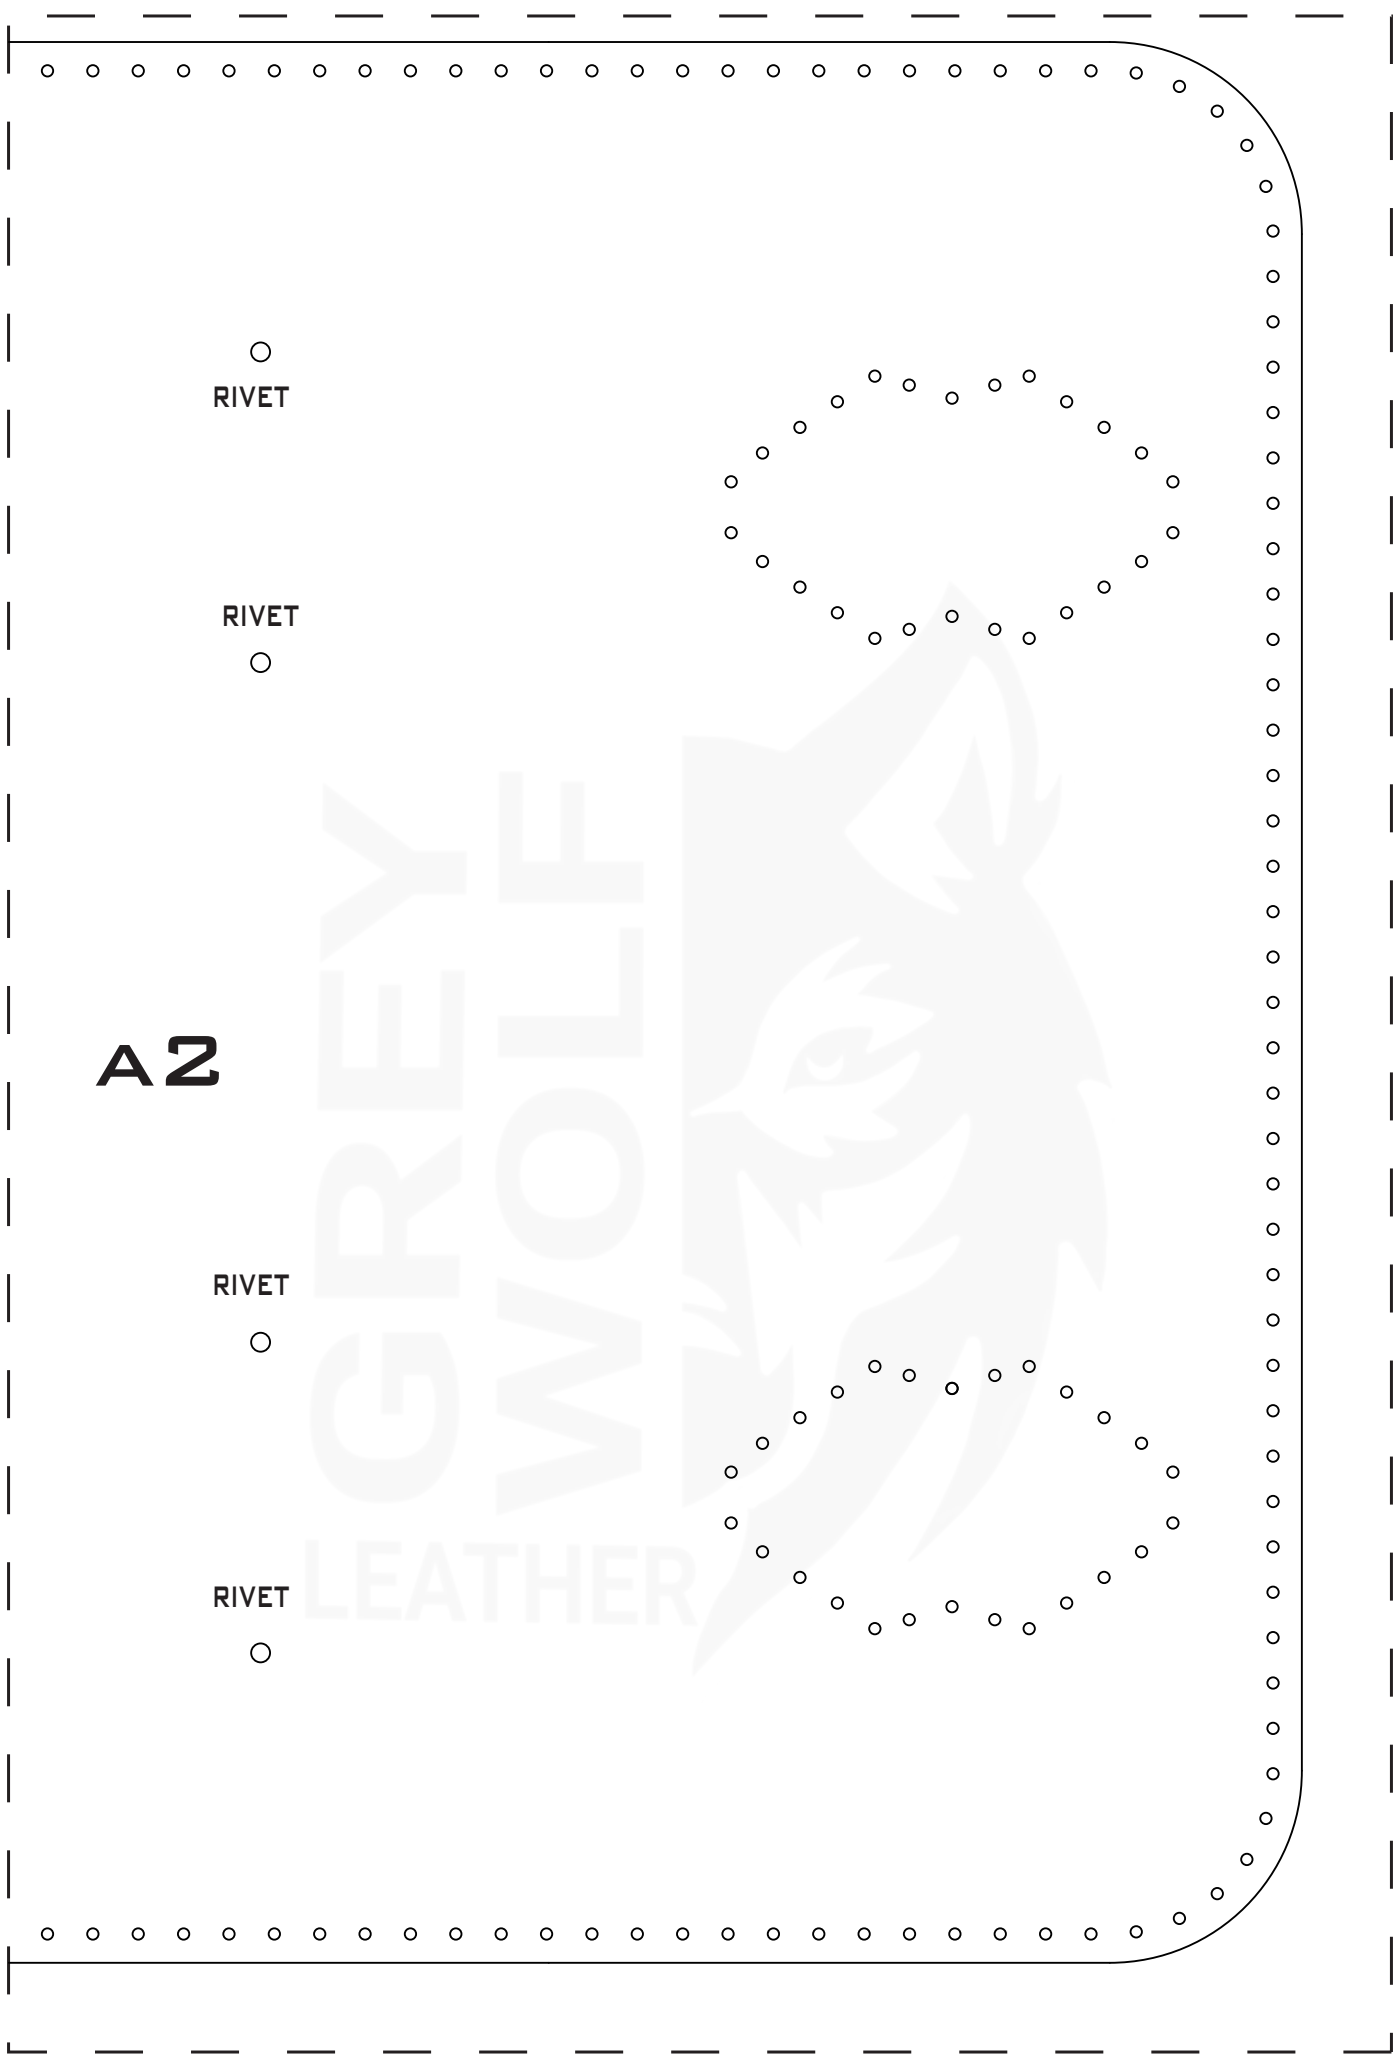


RIVET





GUSSET

B 1



B 2


GREY
WOLF
LEATHER

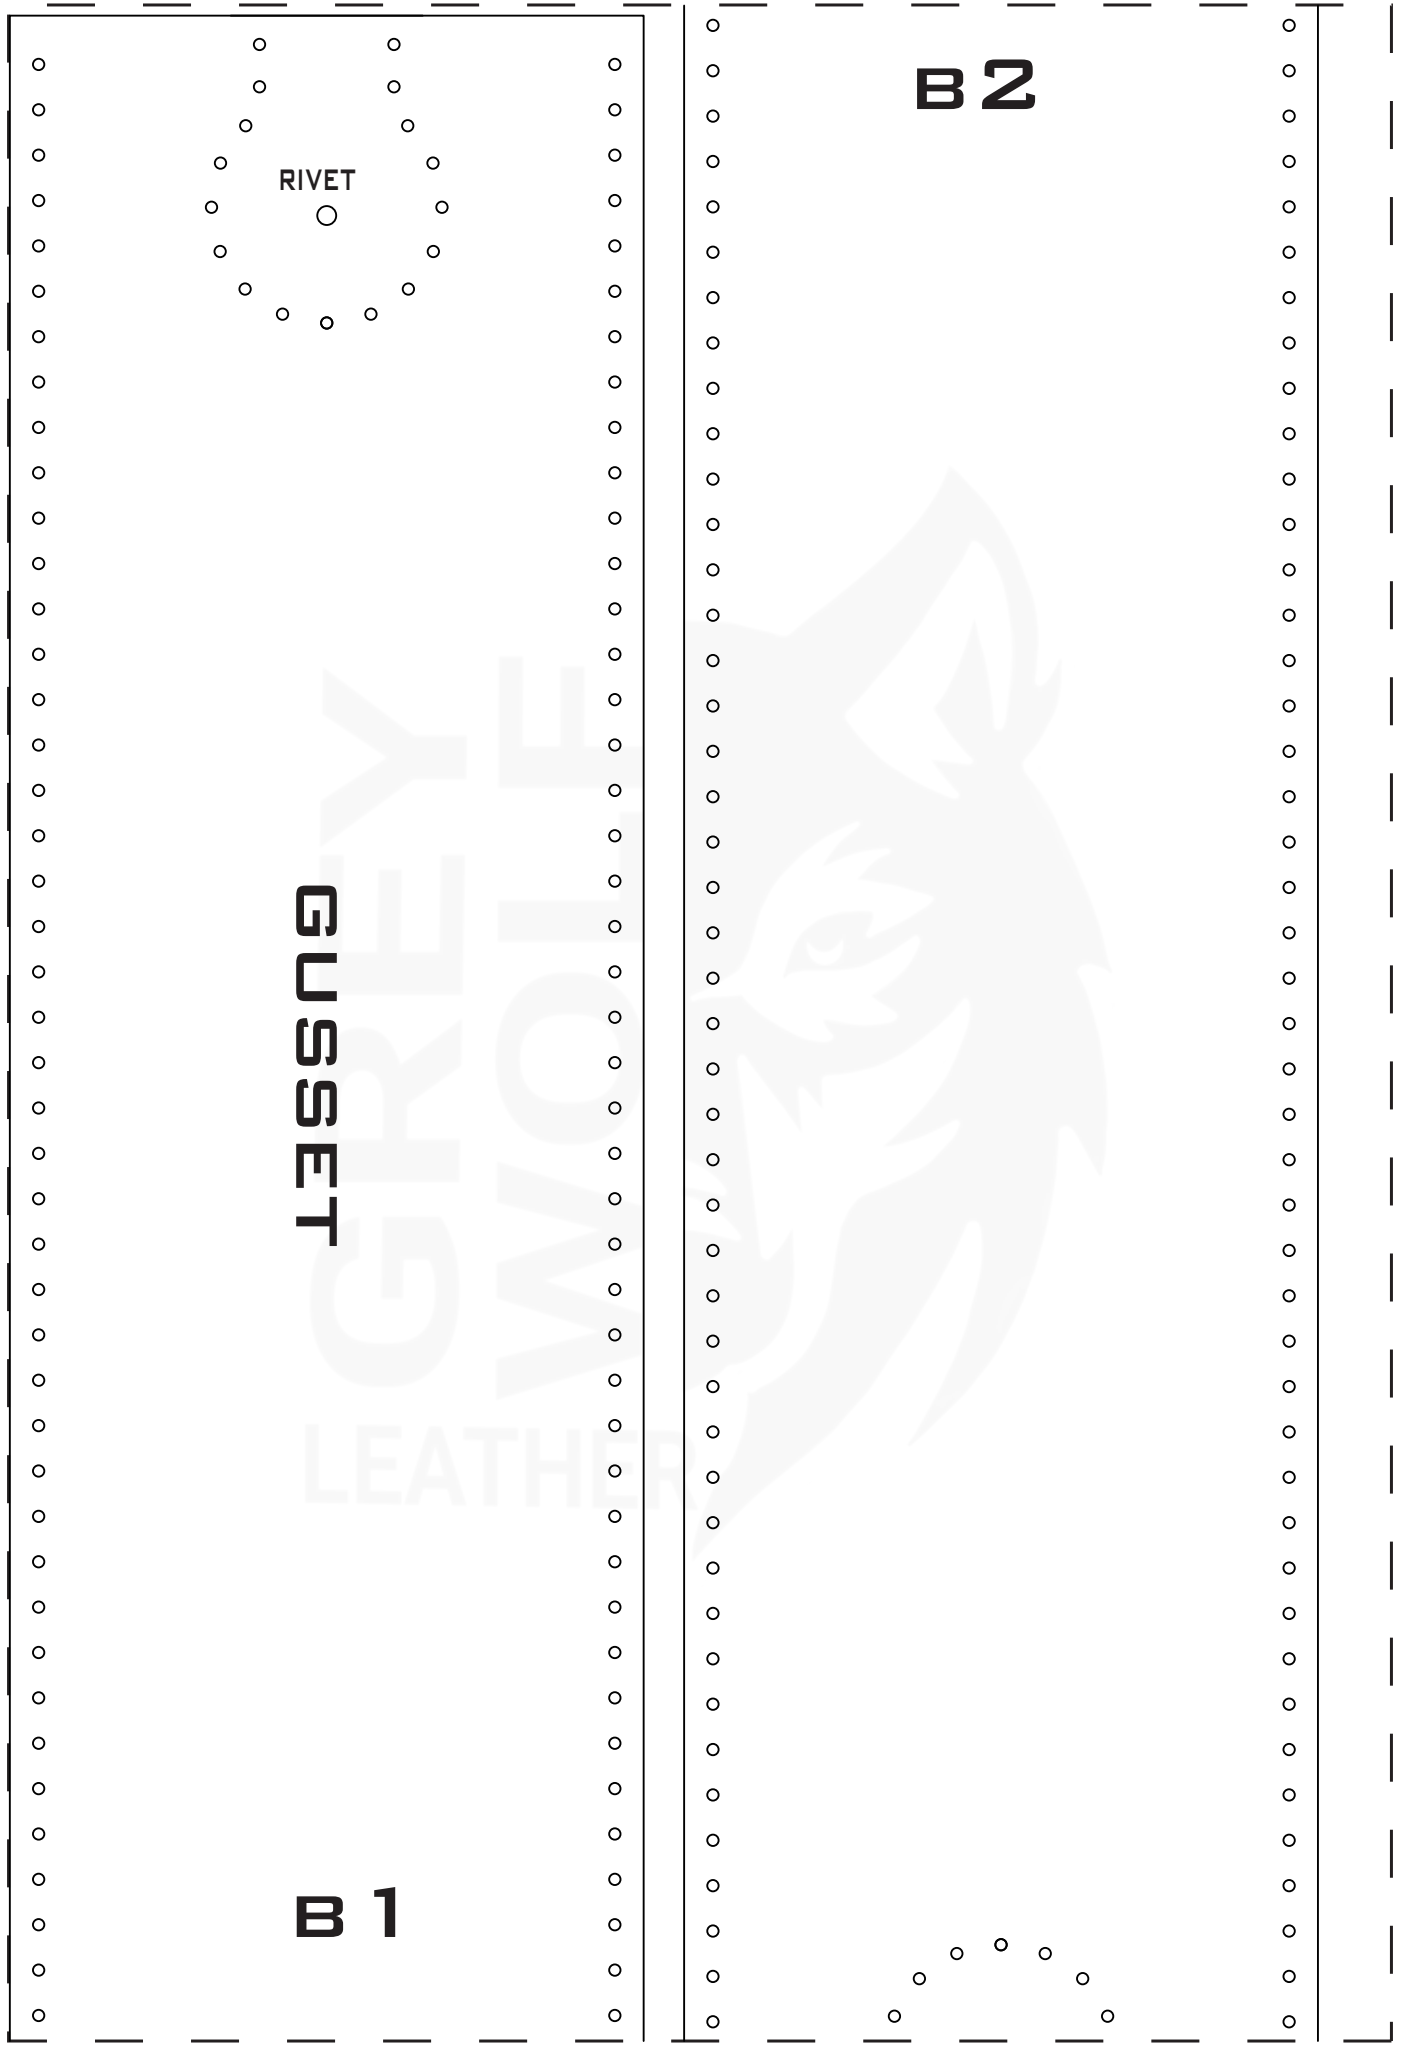

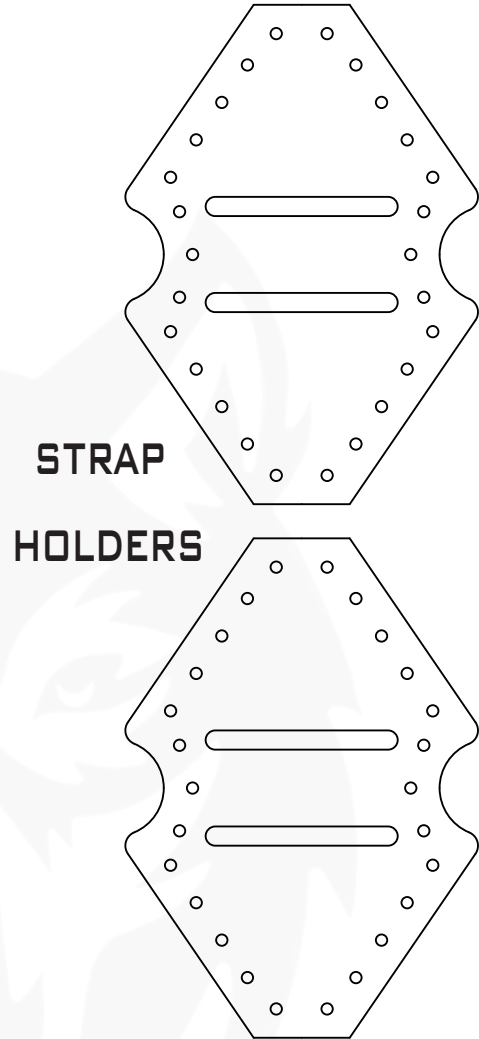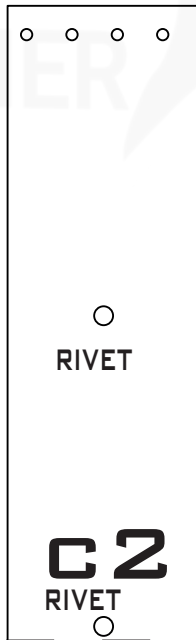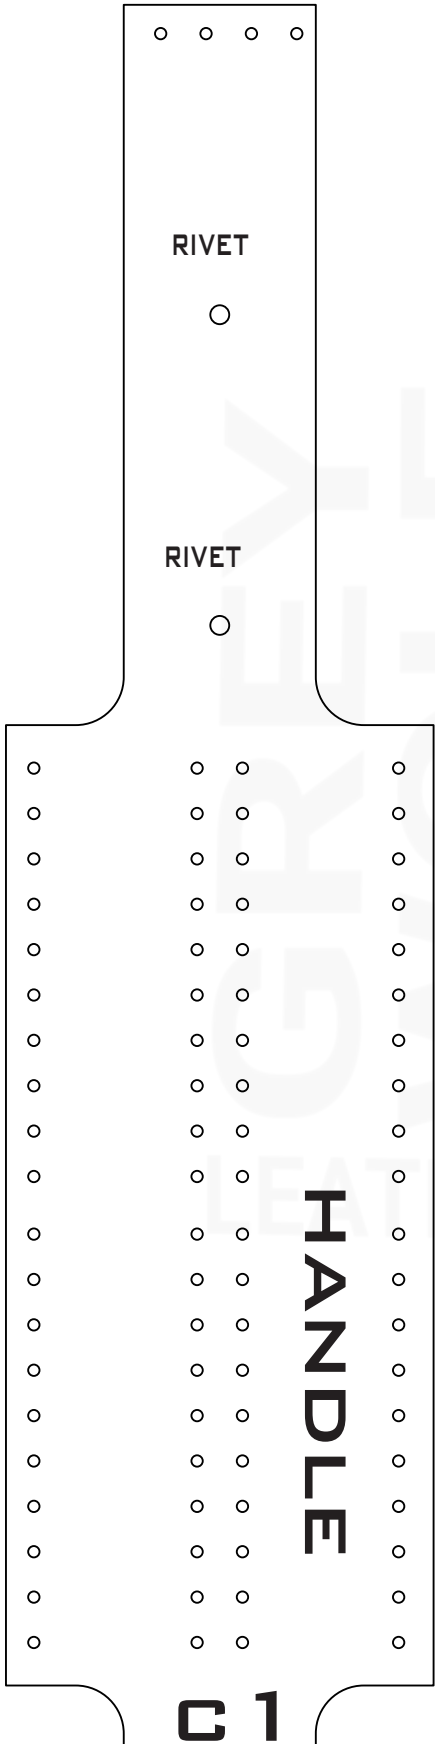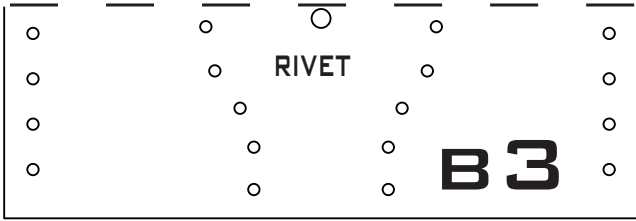

BACK POCKET

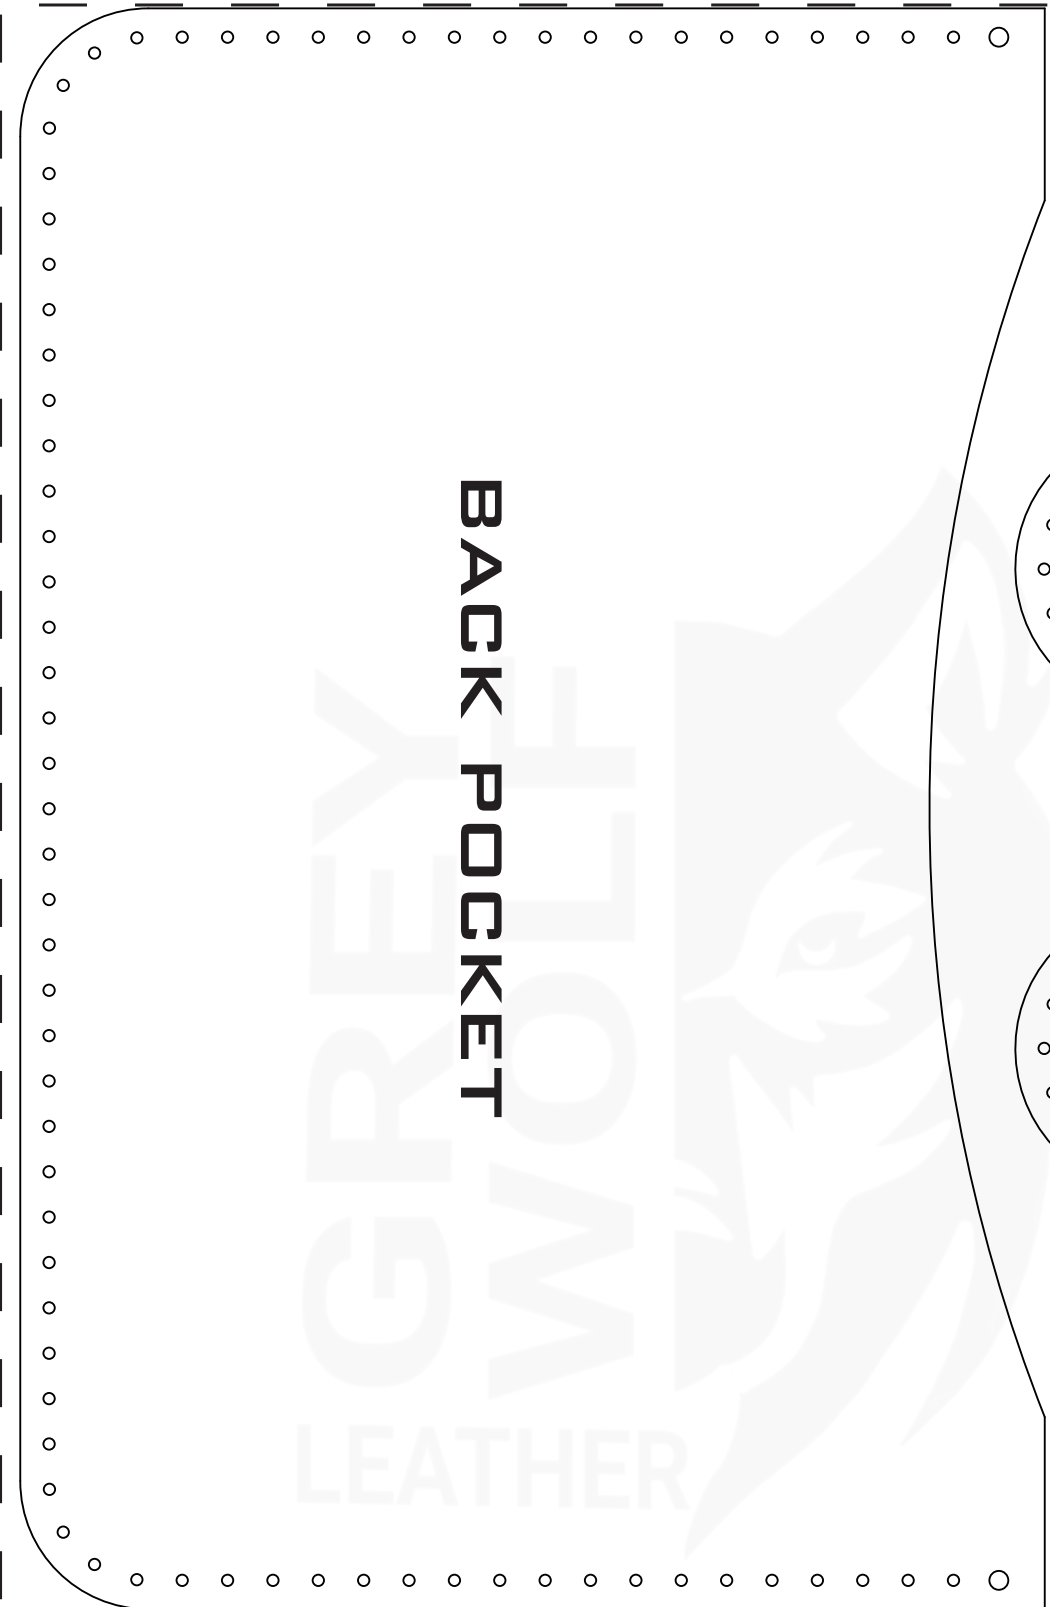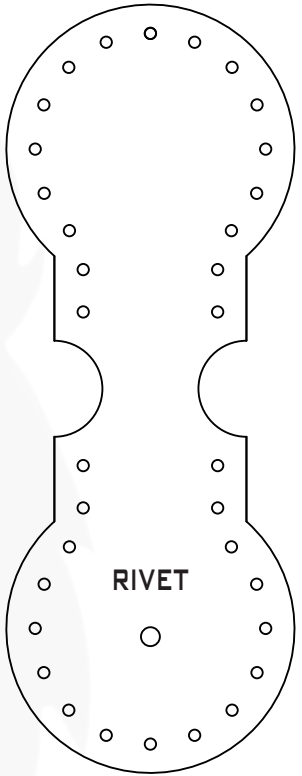

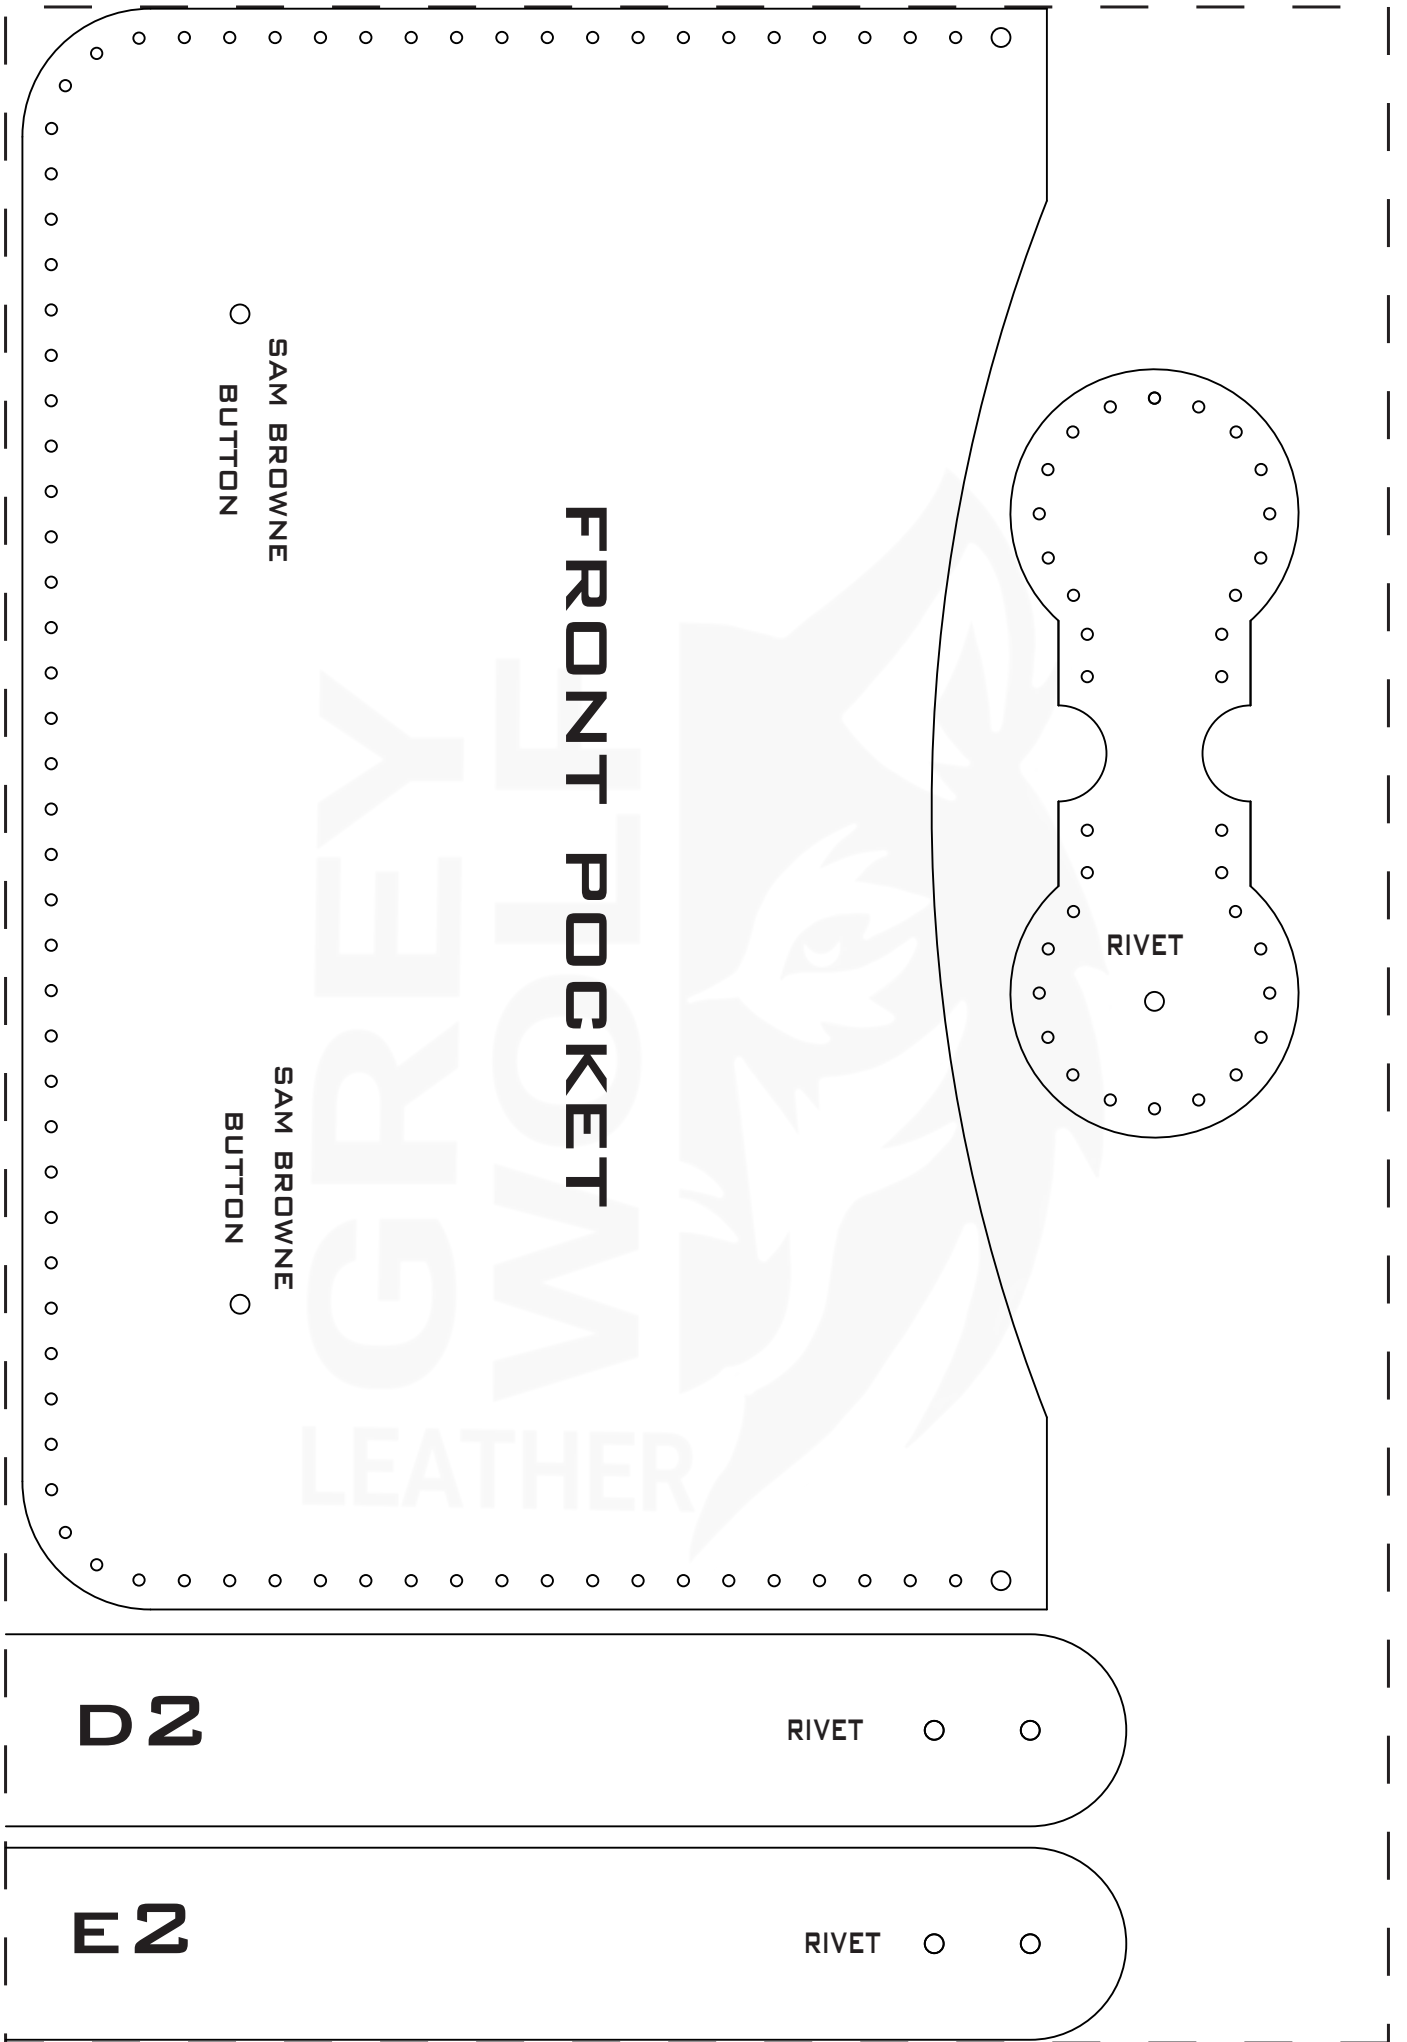

FRONT POCKET

○ SAM BROWNE
BUTTON

SAM BROWNE
BUTTON ○

RIVET

D2

RIVET ○ ○

E2

RIVET ○ ○



GREY
WOLFE
LEATHER

FRONT

BAG

7.2 INCHES

182.88 MILLIMETERS


CALIBRATION PAGE

1. OPEN IN ADOBE ACROBAT
2. PRINT TO "ACTUAL SIZE" IN PRINTER OPTIONS
3. PRINT CALIBRATION PAGE TO VERIFY PROPERLY SET UP PRIOR TO PRINTING THE PATTERN.


10.6 INCHES

269.24 MILLIMETERS

2"

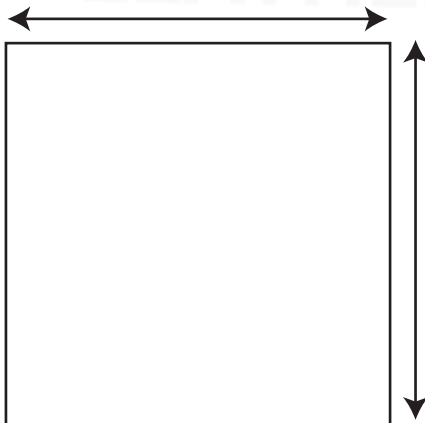

50.8MM

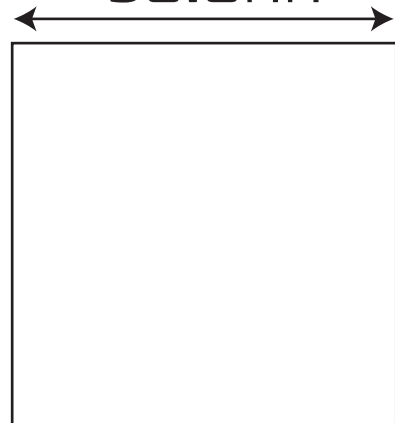

50.8MM

