



- 1. File > Print
- 2. Click on "Page Setup" button make sure your paper size is set to the paper size that you will print and Scale at 100%
- 3. In "Pages Sizing & Handling" click on "Size" button and select "Actual size"

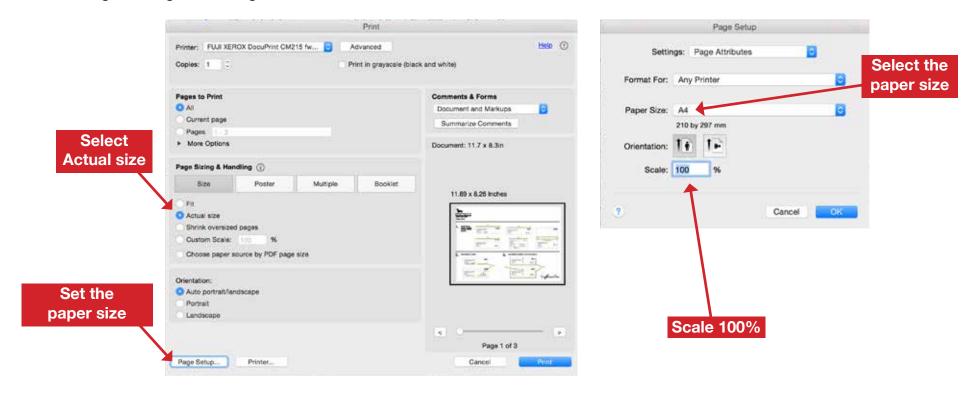



## **IMPORTANT NOTE:**

- ADOBE ACROBAT READER (FREE SOFTWARE) is recommended to open and print the patterns

link for free download <a href="https://get.adobe.com/reader">https://get.adobe.com/reader</a>

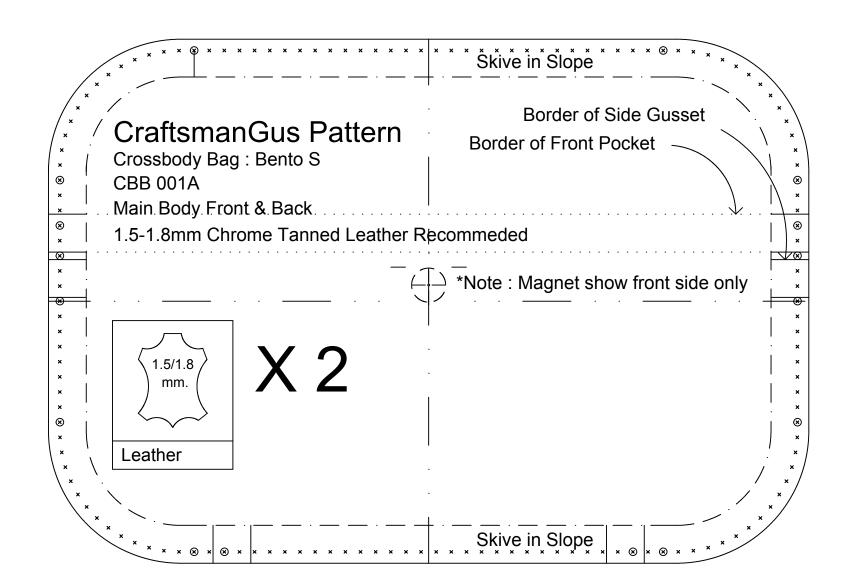

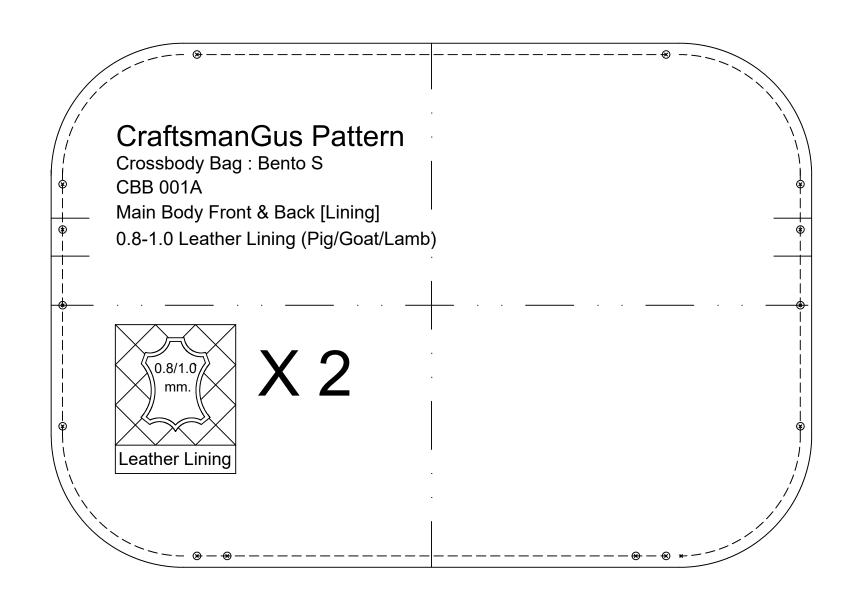




CraftsmanGus Pattern Crossbody Bag: Bento S


CBB 001A


D-Ring Holder





1.0mm Chrome Tanned Leather Recommeded (For Edge Paint)

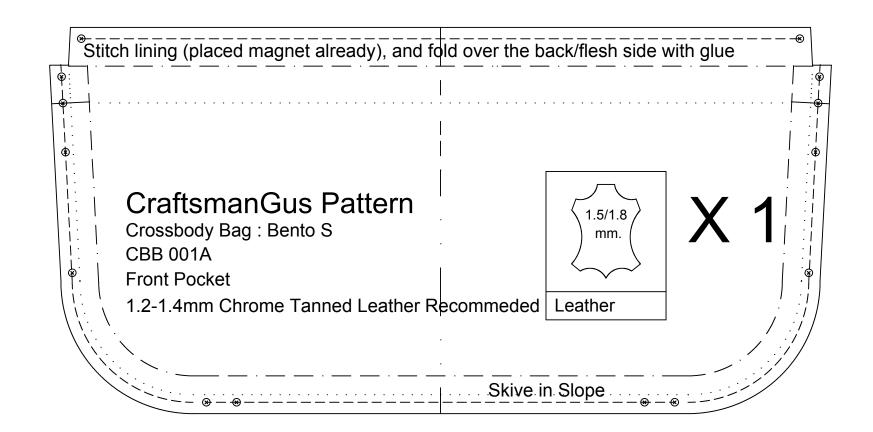





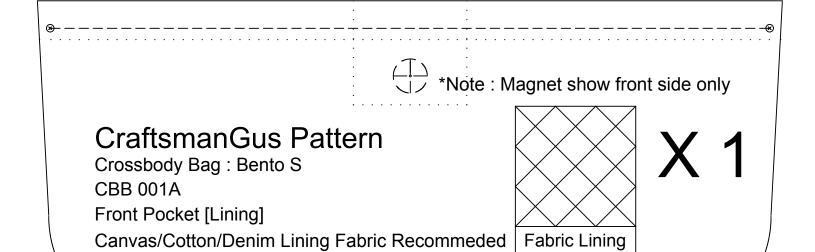



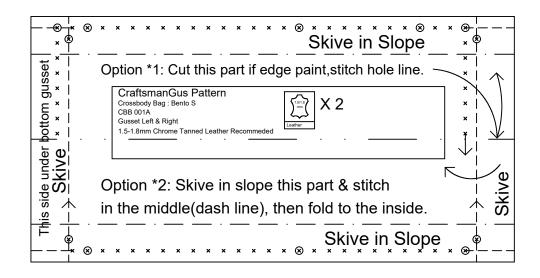

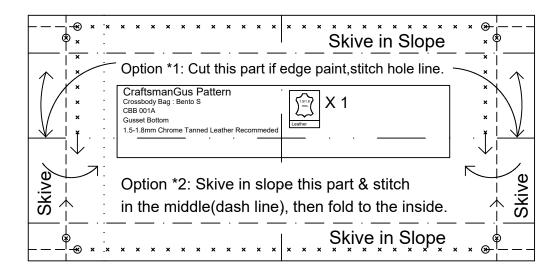







CraftsmanGus Pattern  Crossbody Bag: Bento S  CBB 001A	· · · · · · · · · · · · · · · · · · ·	× × × × × × × × × × × × × × × × × × ×	Skive in S
CBB 001A  Gusset Top (Zipper Part)  1.5-1.8mm Chrome Tanned Leather Recommeded  Top (Zipper Part)  Top (Zipper Part)		* * * * * * * * * * * * * * * * * * *	
Gusset Top (Zipper Part) [Lining]  0.8-1.0 Leather Lining (Pig/Goat/Lamb)	2		Skive in S
CraftsmanGus Pattern Crossbody Bag : Bento S CBB 001A	0.8/1.0 mm.		
Gusset Bottom [Lining] 0.8-1.0 Leather Lining (Pig/Goat/Lamb)	Leather Lining		
*Note: If use "Stitch and fold over method ne	eed to trim a bit ( no need to stite	ch through lining layer) on these side. ~	









Tile to page 6

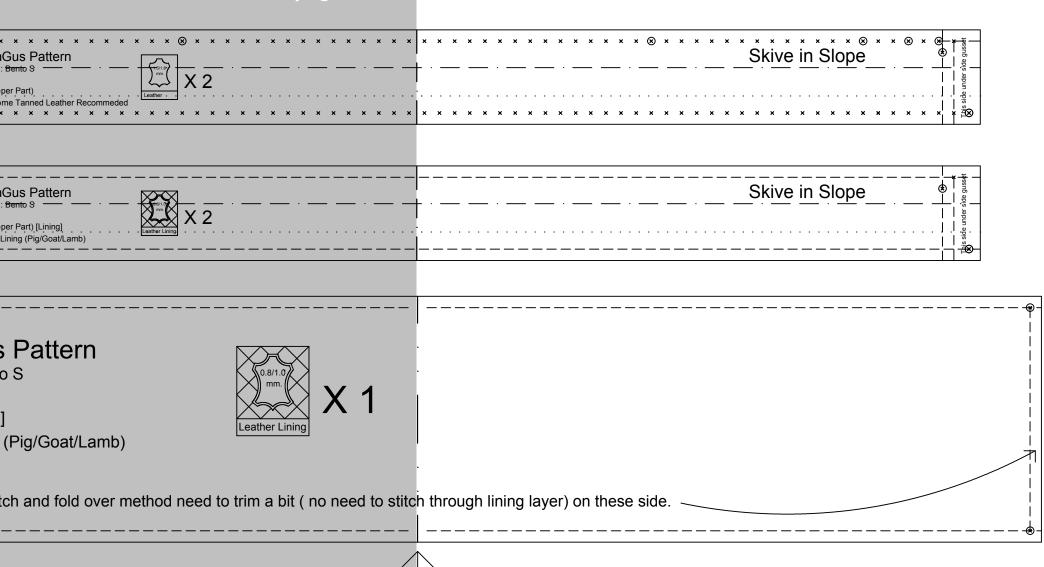



Piping seams should end here	CraftsmanGus : Pattern	
can make longer and cut the excess after.	Crossbody Bag : Bento S	

## Connect



## Connect

