
OWL CHARM



Assembly instructions

Difficulty level: Beginner
Completion Time: 1 - 4 hours

NECESSARY TOOLS

B&W Printer



Scissors or a cutter



Hole Puncher (We recommend 1.8 - 2 mm sized holes for this build)



Scraps of leather. (We recommend 5-6oz leather for this build)




Thread and needles (We recommend 1.2 mm waxed thread for this build)




PRINTING THE PATTERN

Set up your paper size to A4 and choose actual size in the printer settings

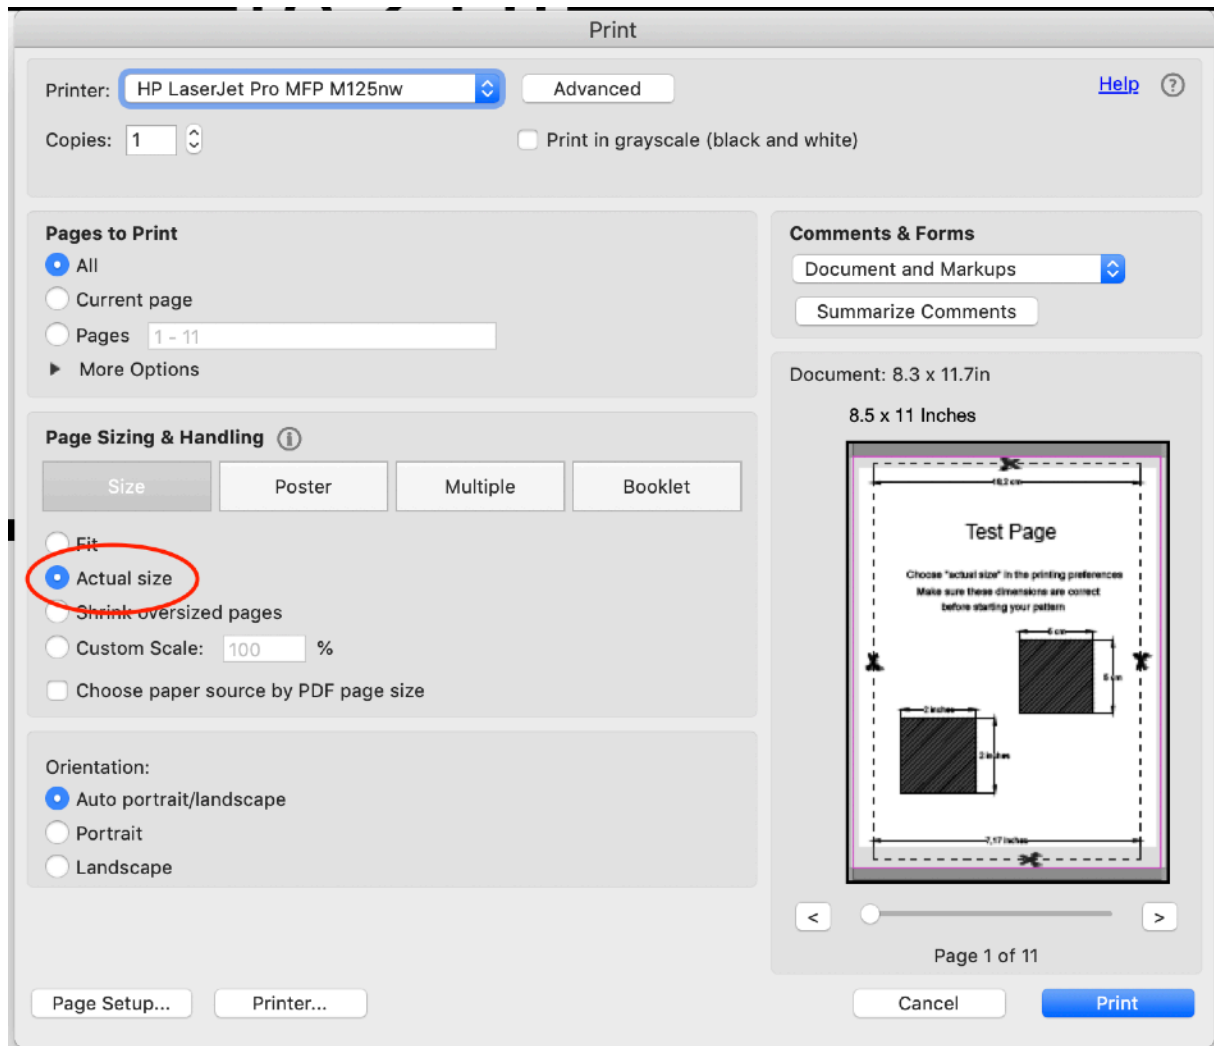

Alternatively you can use "letter" format which is approximately the same size and will not impact the size of the product significantly

Use all the patterns at the end of this document and print using the instructions provided. Cut all the leather and once you are done you should have all the pieces shown here

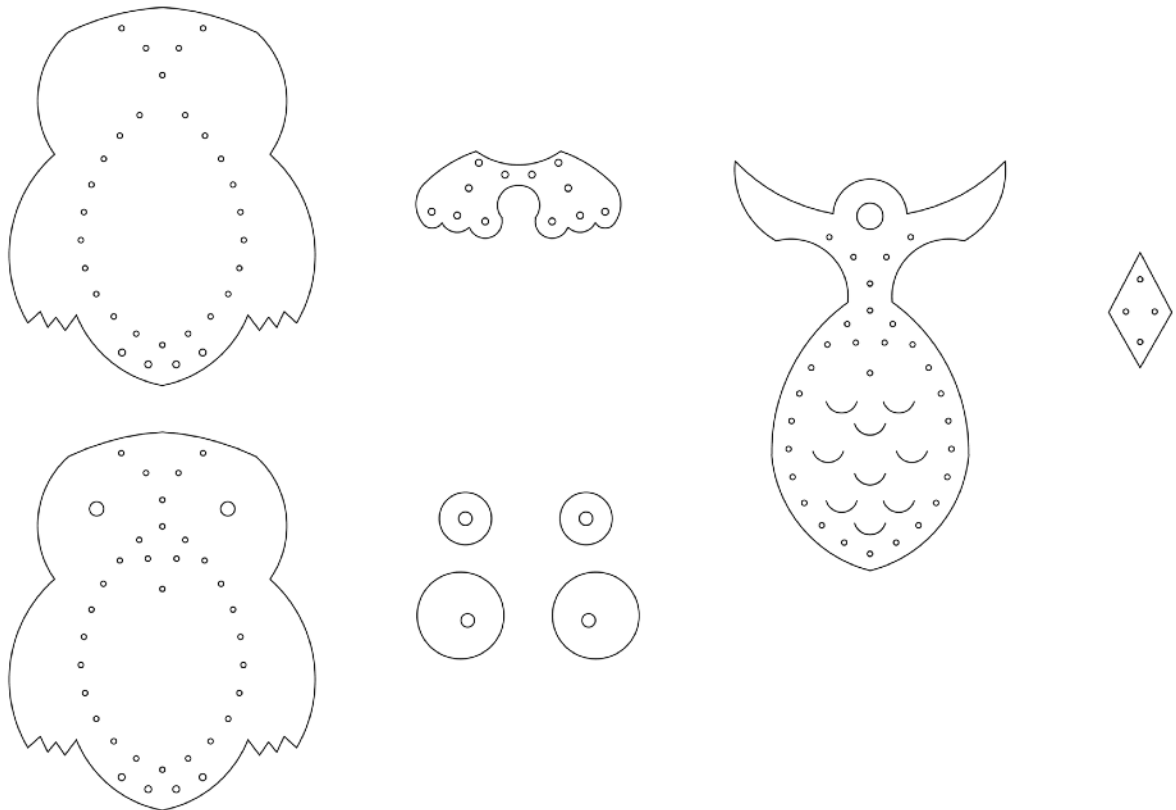


I recommend an exacto knife for the small details and a round corner leather puncher set off eBay or Amazon like these



All the pieces have letters to show the order in which they need to be stacked on top of each other

You can also use this reference picture to get the order right

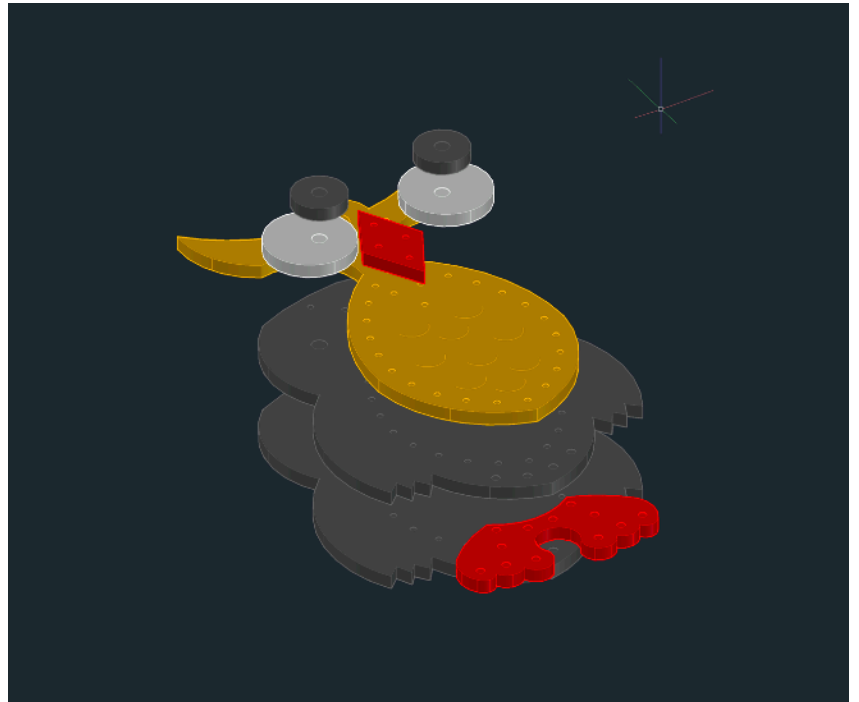

Use different colours, make this your own charm, attach it to your keys, to your bag or make this an unexpected small gift for a friend, they will love it!

Stuck and need help? go ahead and send us a message, someone is always around to give you a hand

Thank you for constructing your mask with our patterns

To further help all our clients we created this FaceBook group for everyone to share ideas and stay up to date with the latest patterns available.

Please follow the link below to join.

<https://www.facebook.com/groups/1434028716724087/>



Best Regards

Tony

✂️
18,2 cm

Test Page

Select A4 in the paper size printing menu
Choose "actual size" in the printing preferences
Make sure these dimensions are correct
before starting your pattern

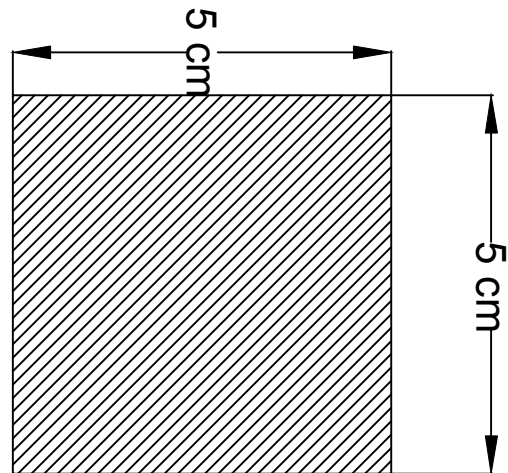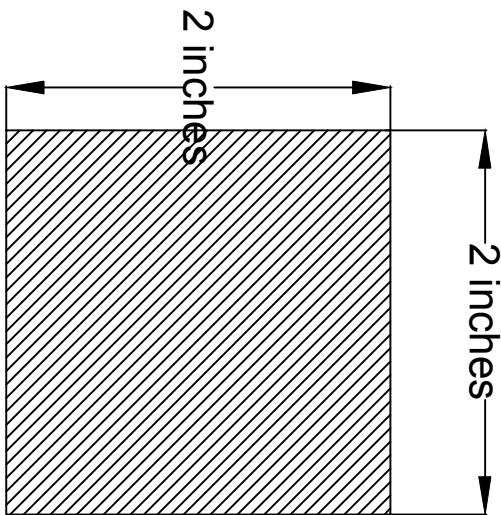

7,17 inches



DIESELPUNK.RO

