



A08 orienting line



Note: Adjust the place you


Locker adjust line

BDQ-29 S  
A0

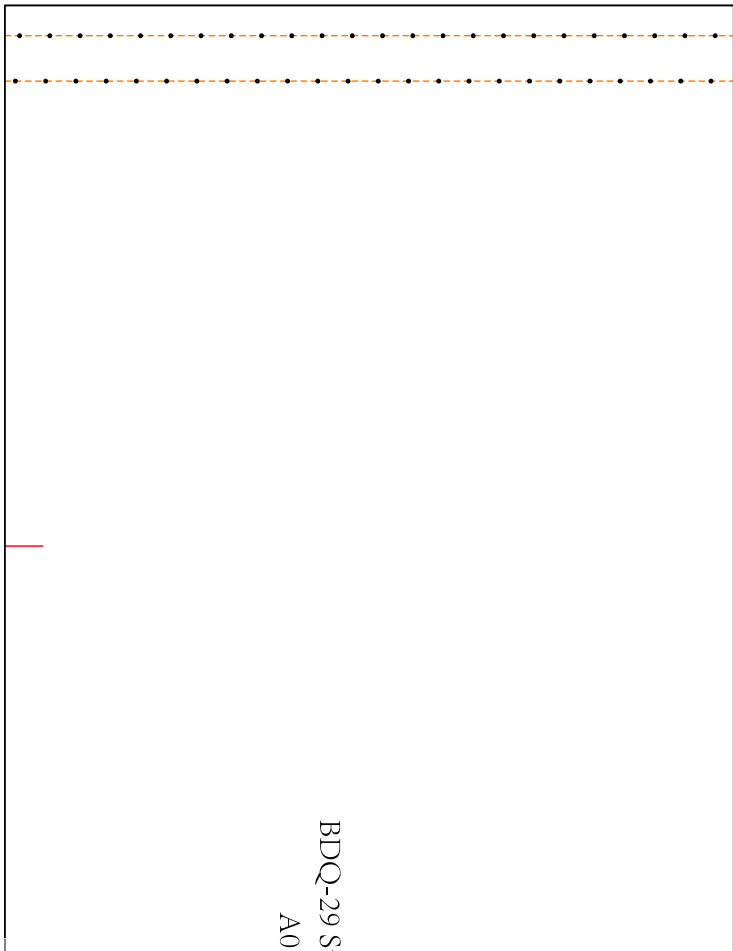

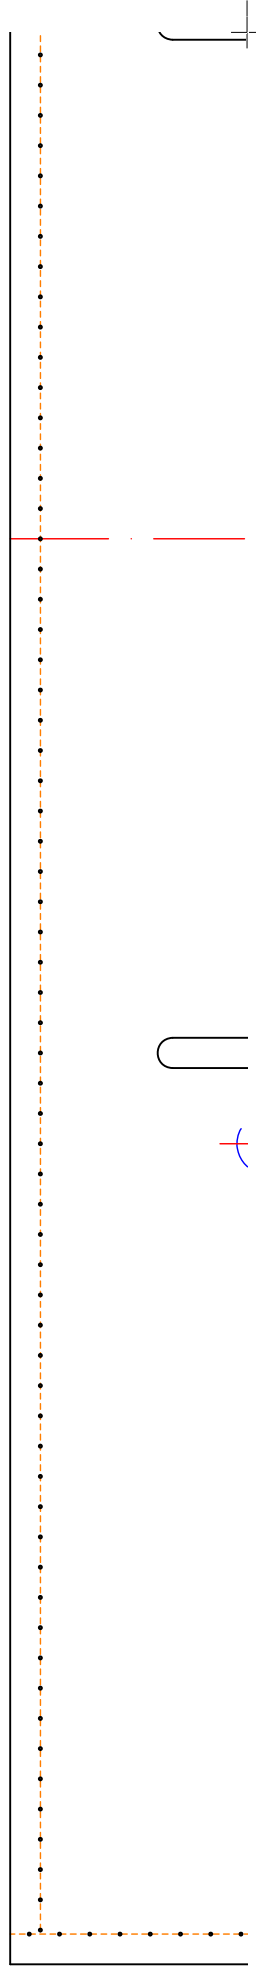

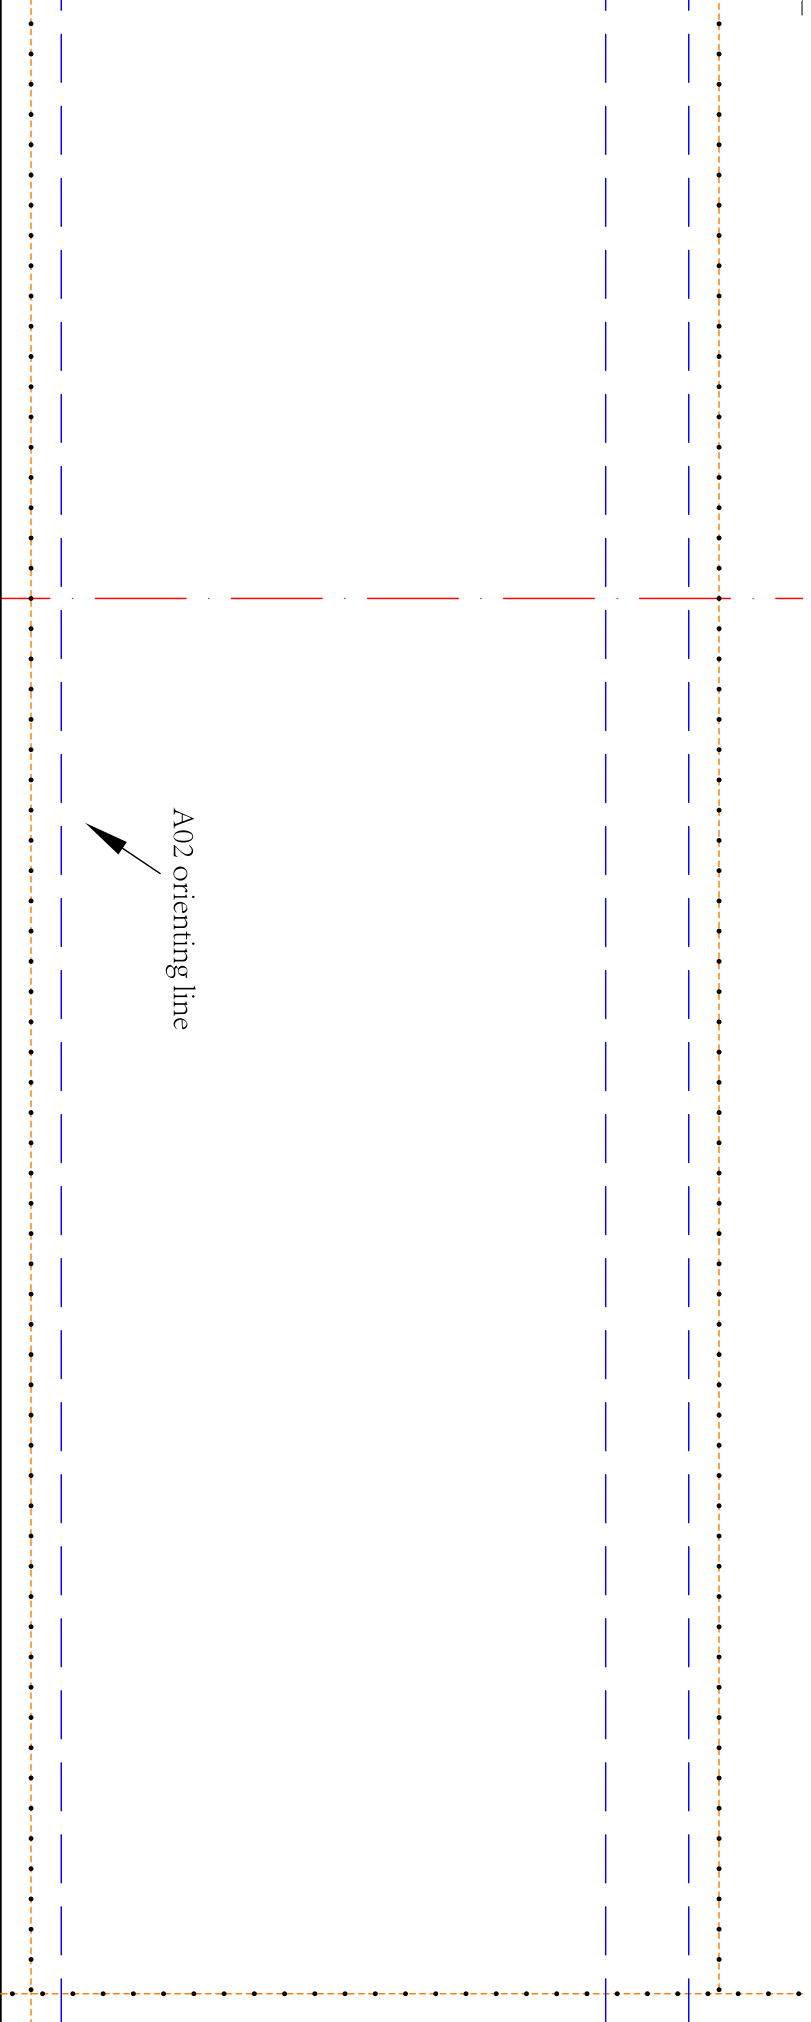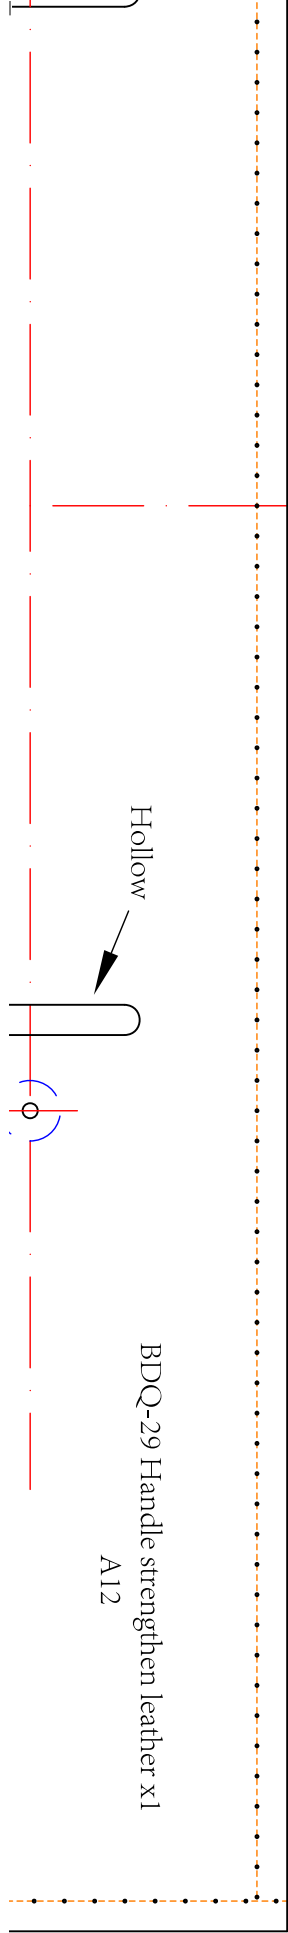

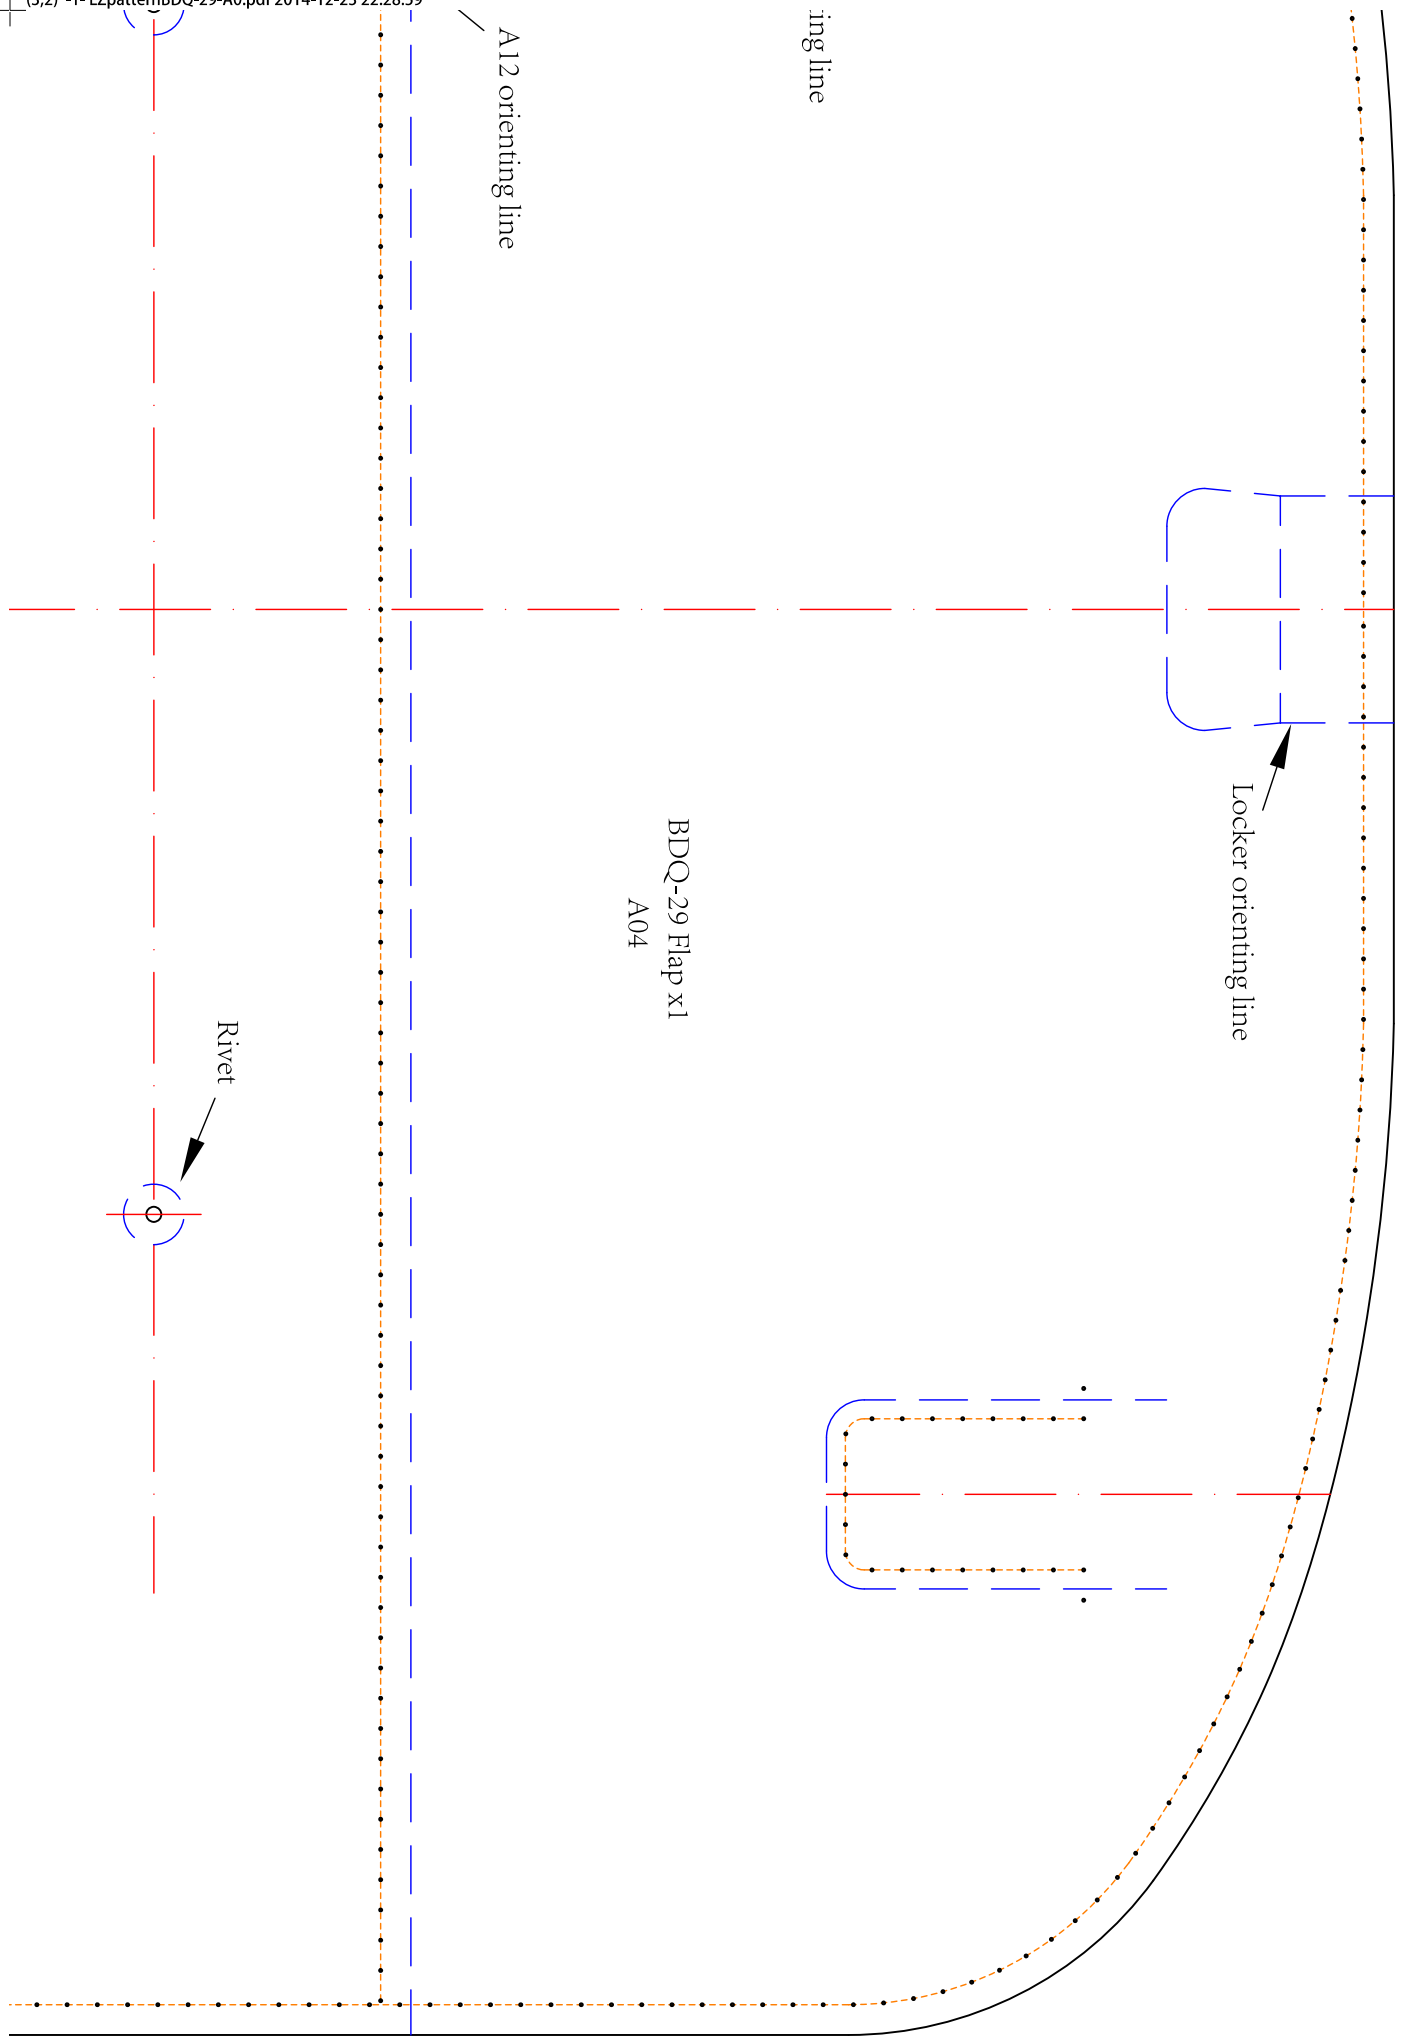

A12 orienting line

ing line


BDQ-29 Flap x1  
A04

Locker orienting line





Rivet




need

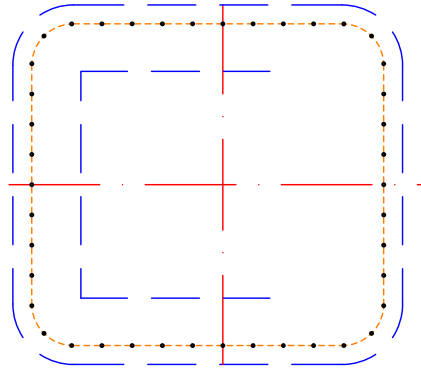


A10 orienting line

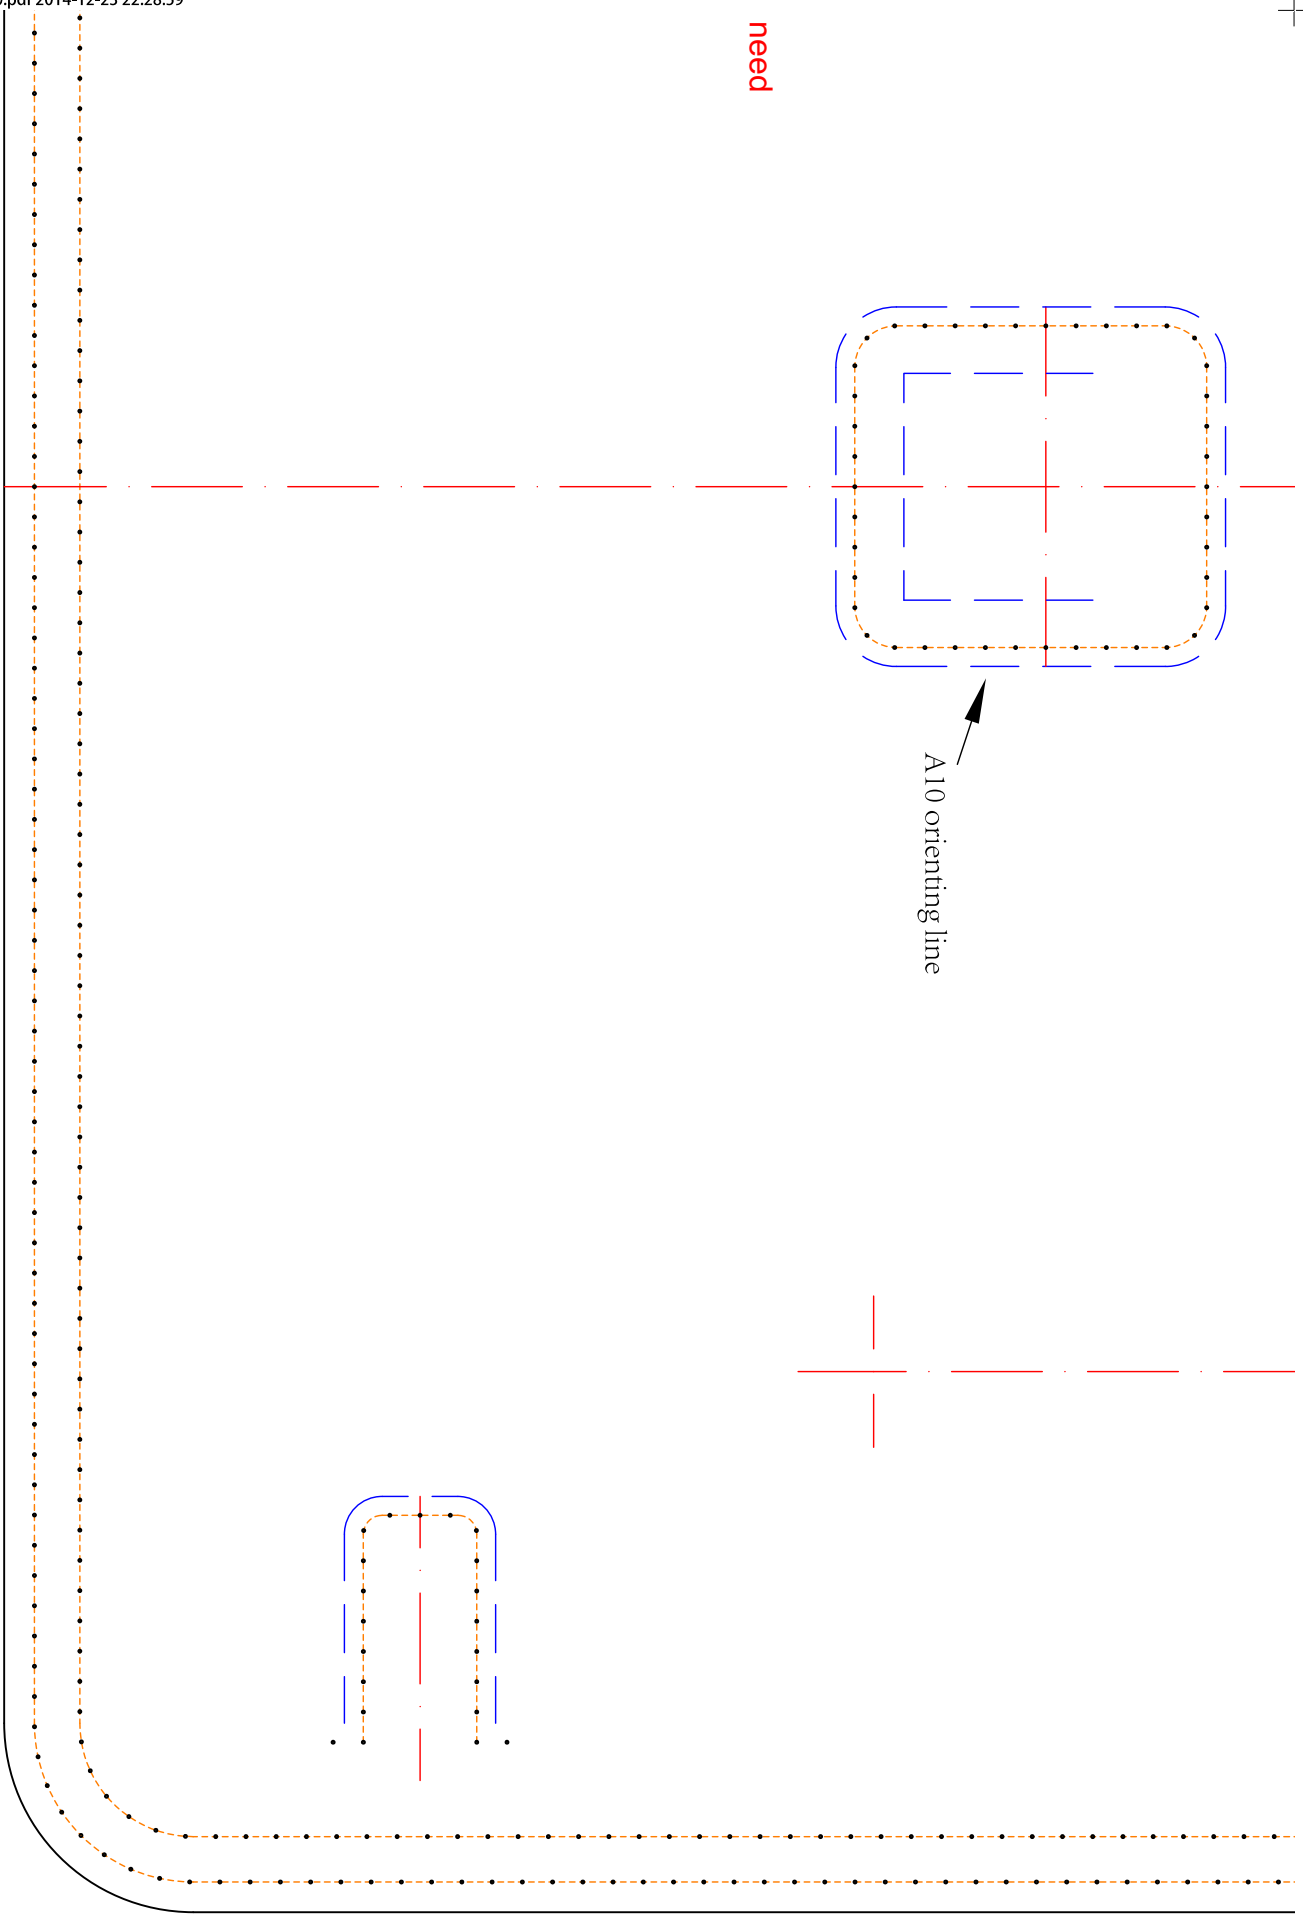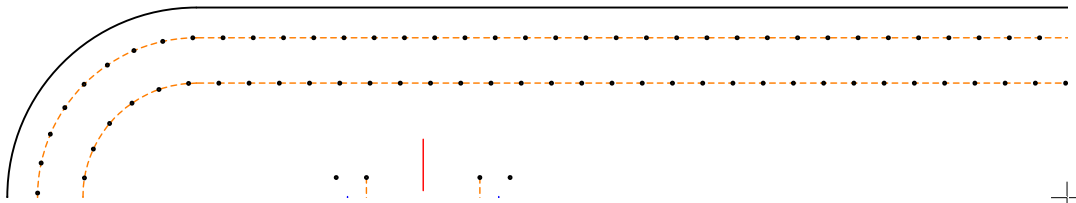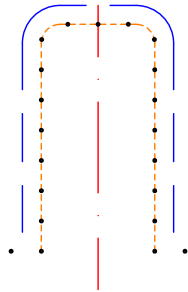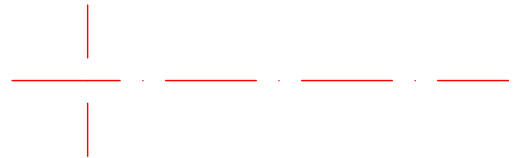

Surface X1

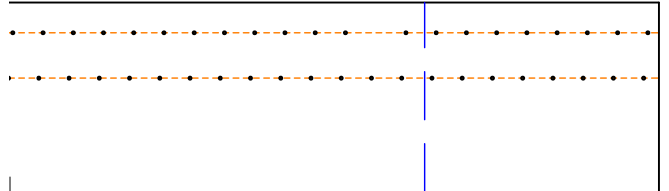




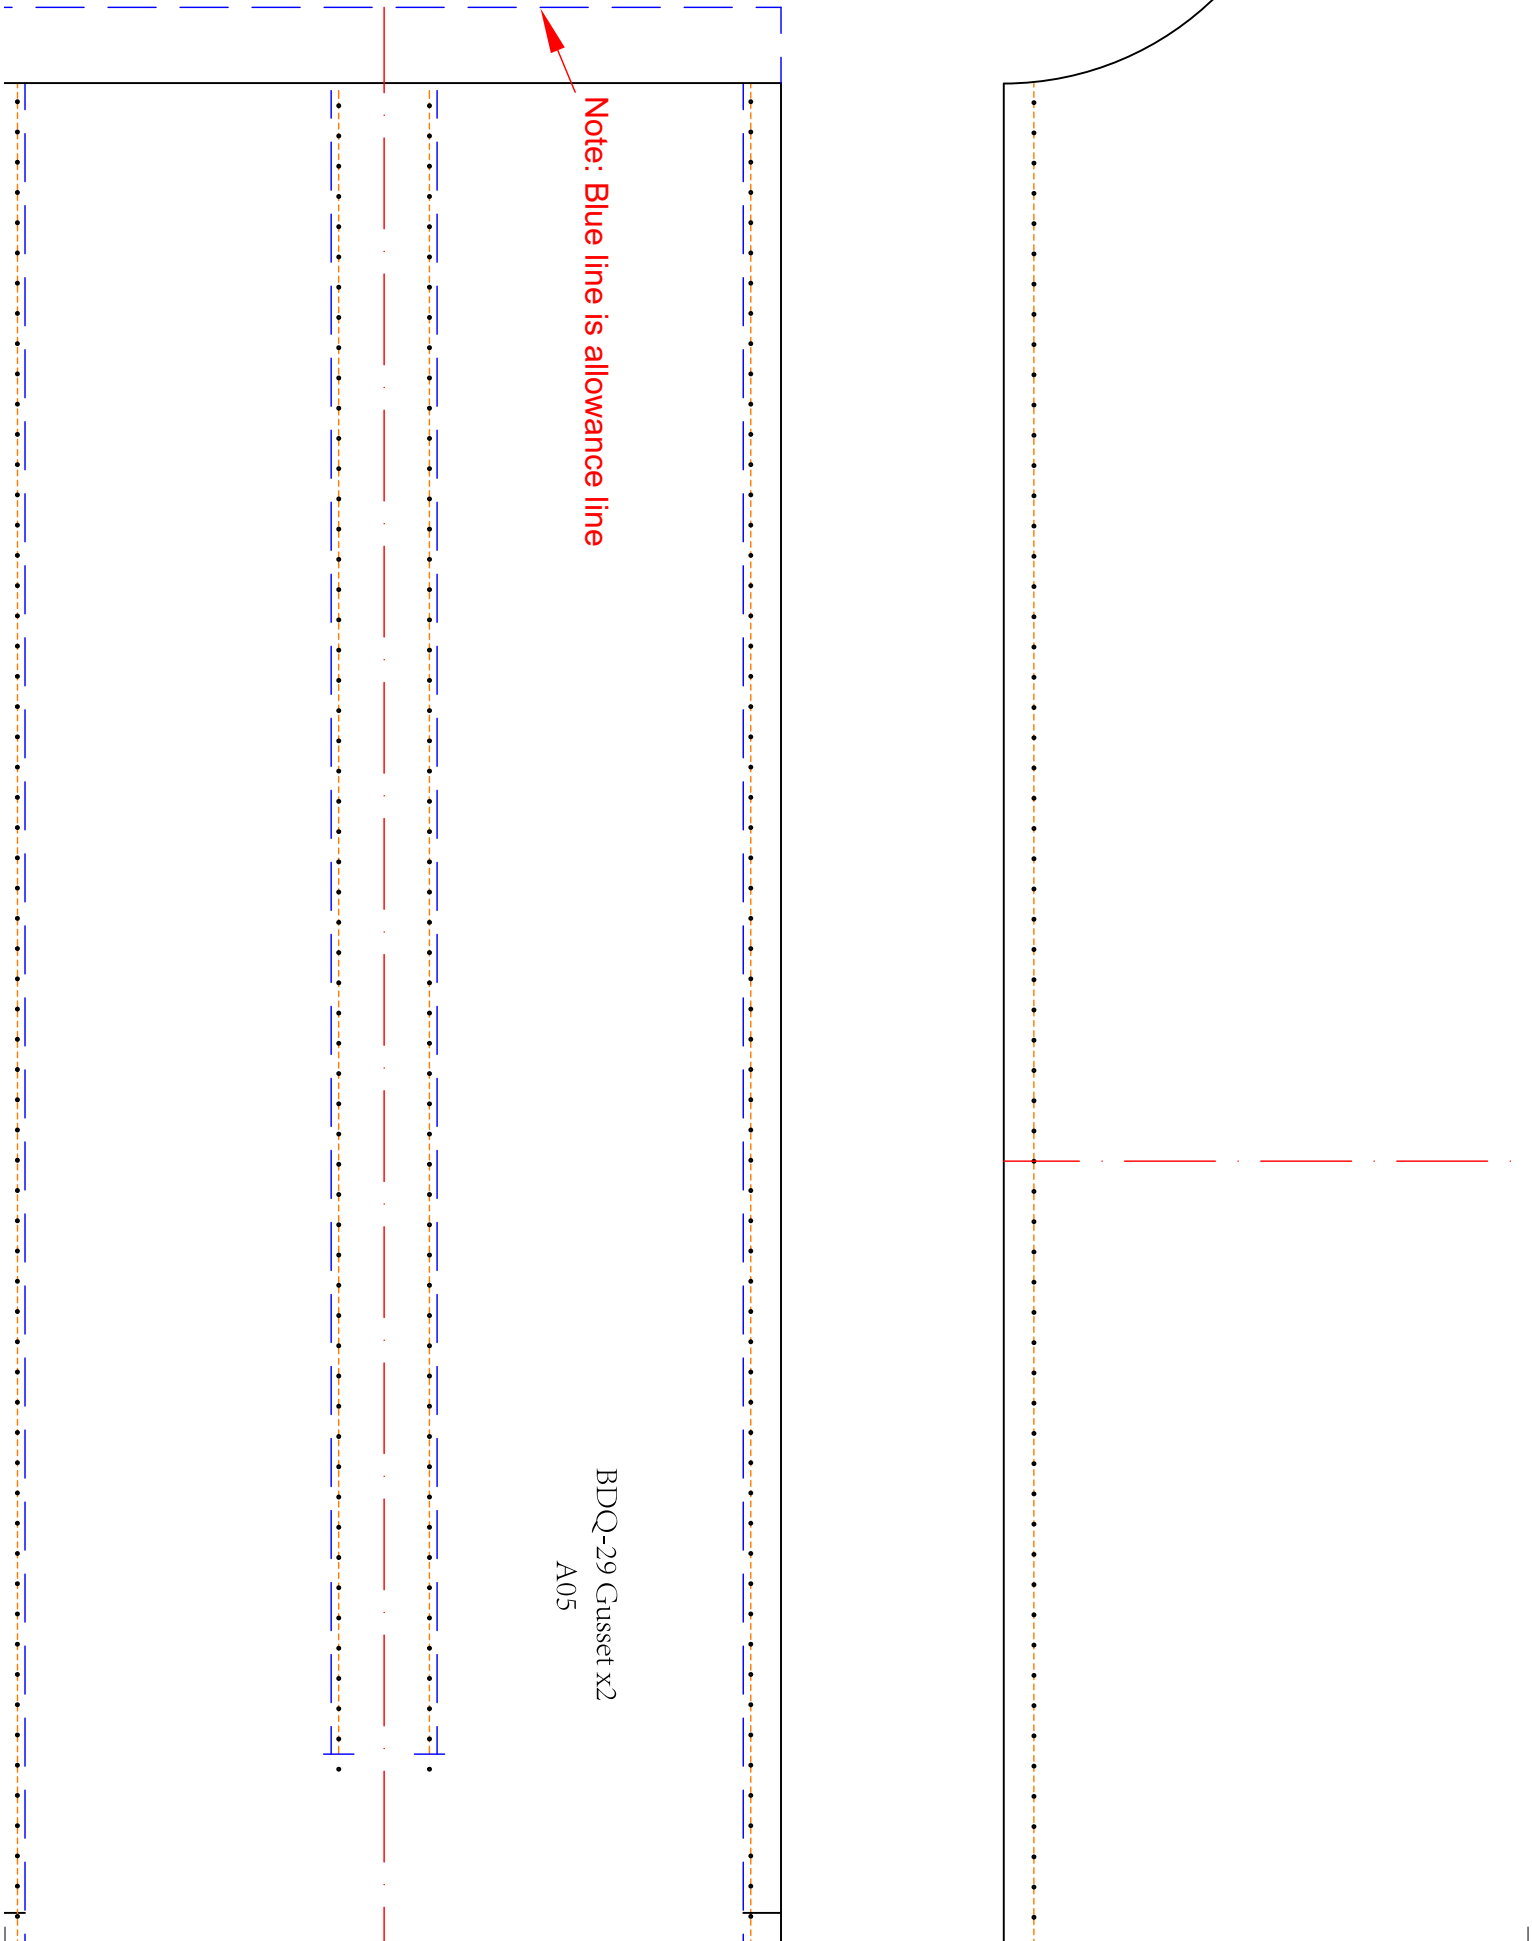


BDQ-29 Gusset x2  
A05

BDQ-29 Interlayer x1  
A07

Welding with 0.6mm leather




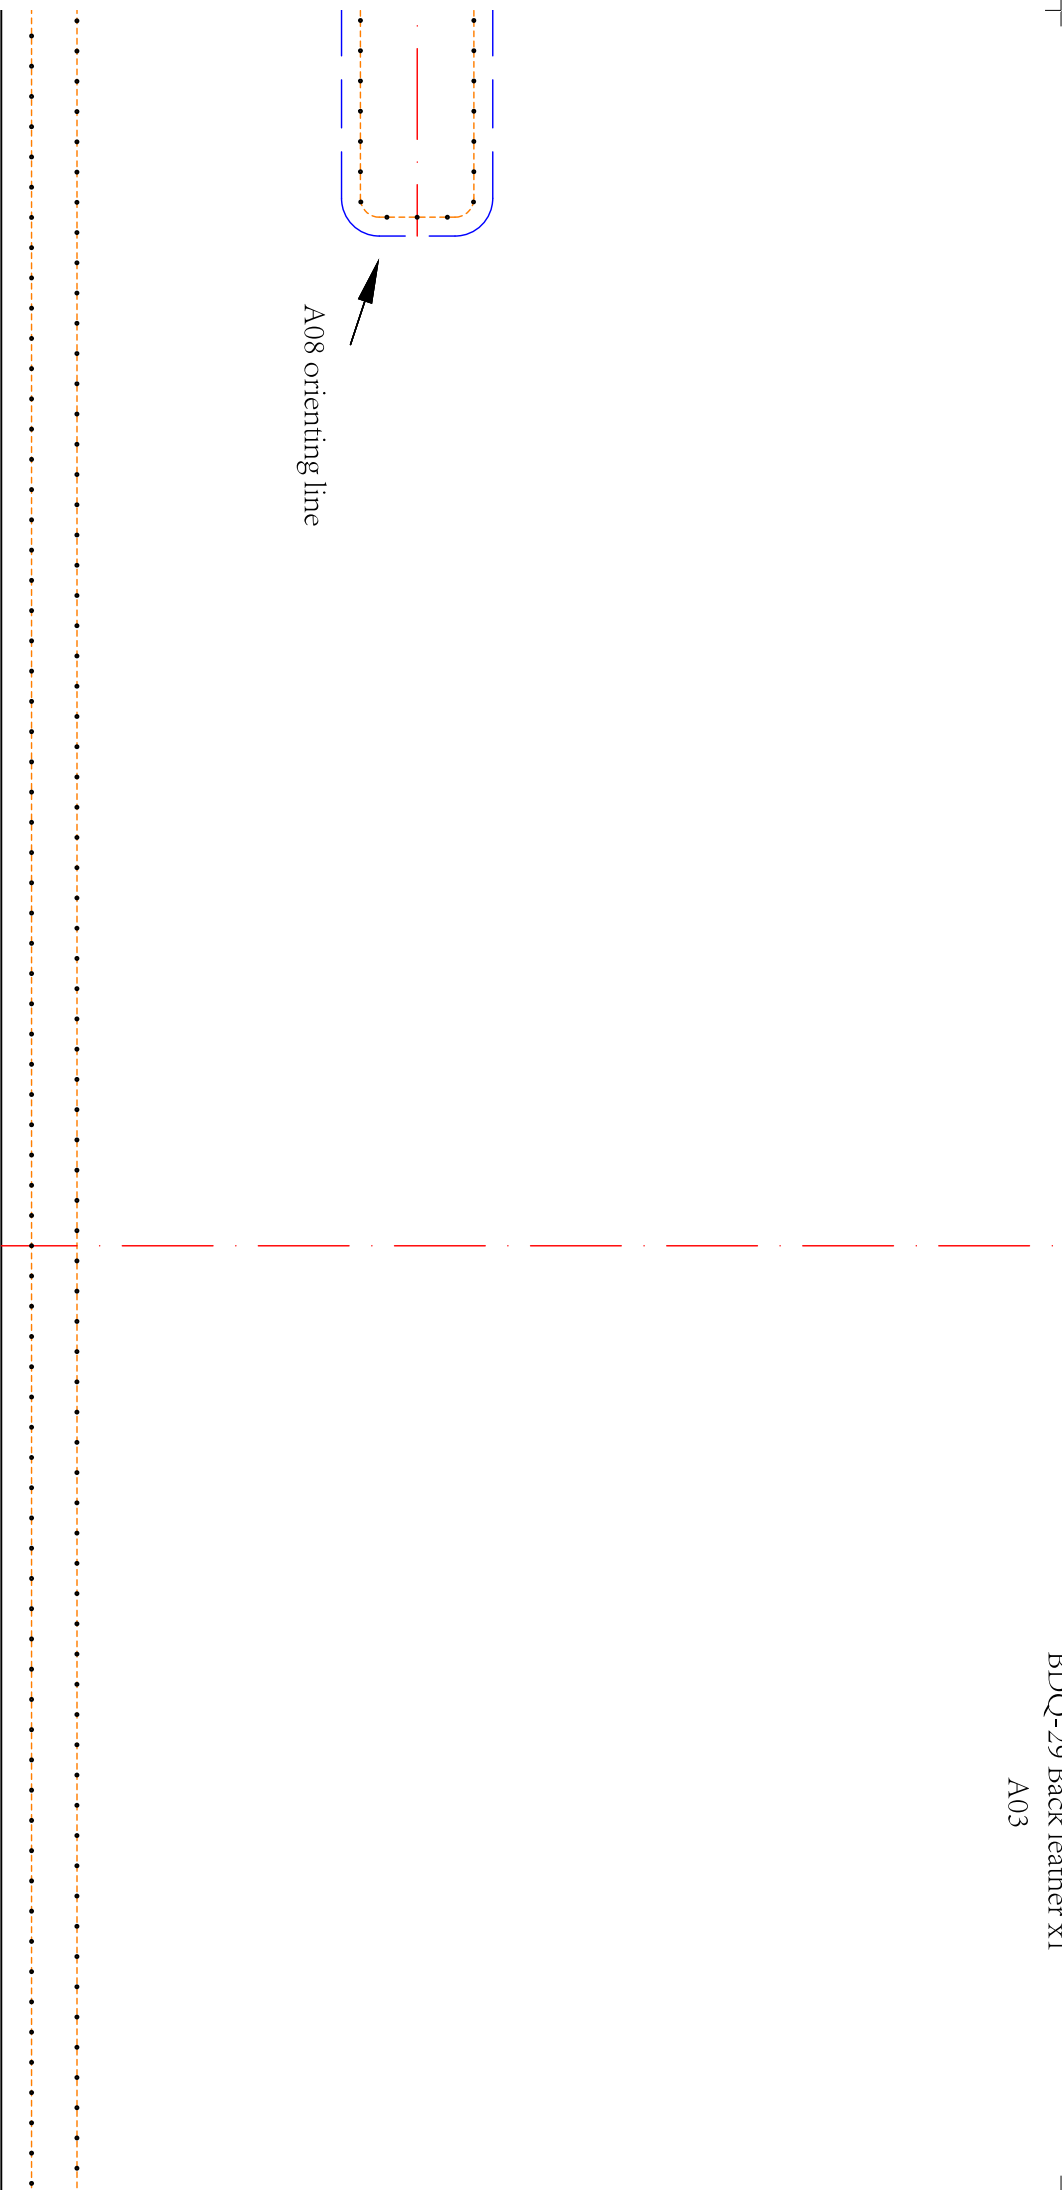













BDC /




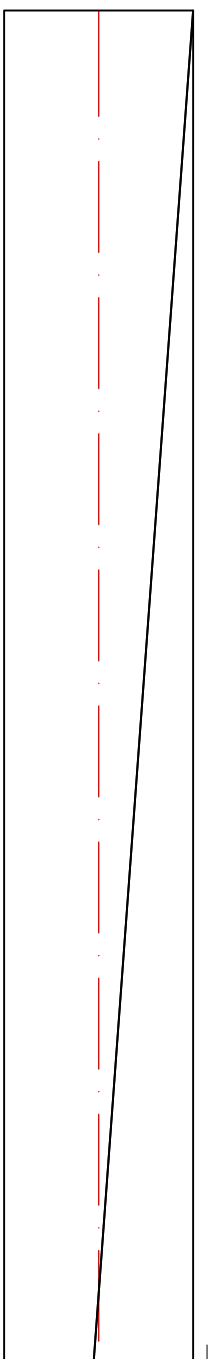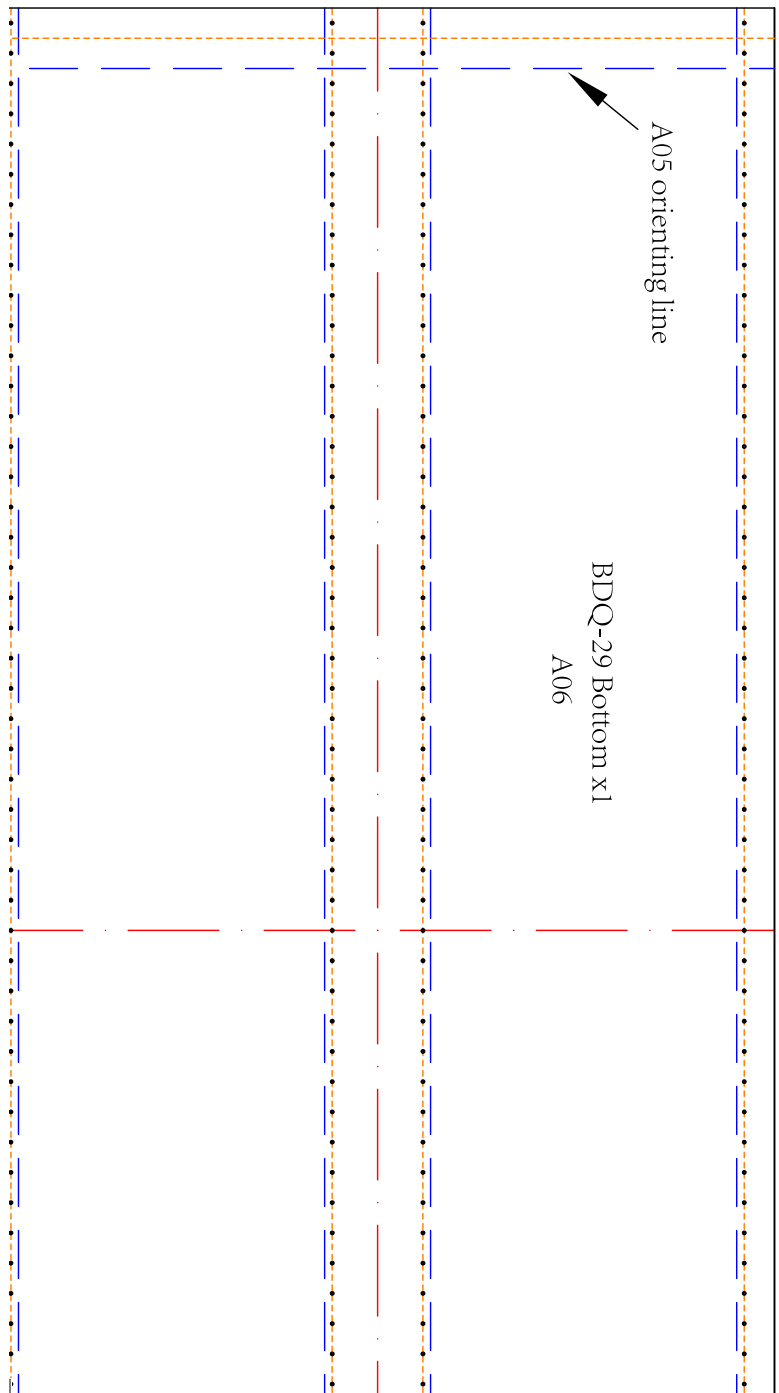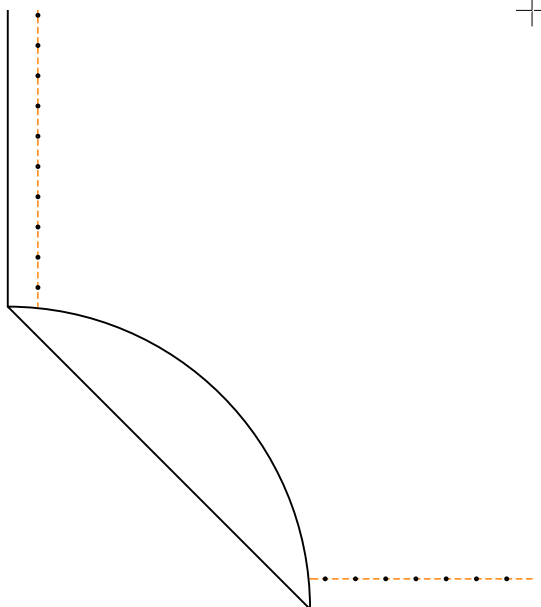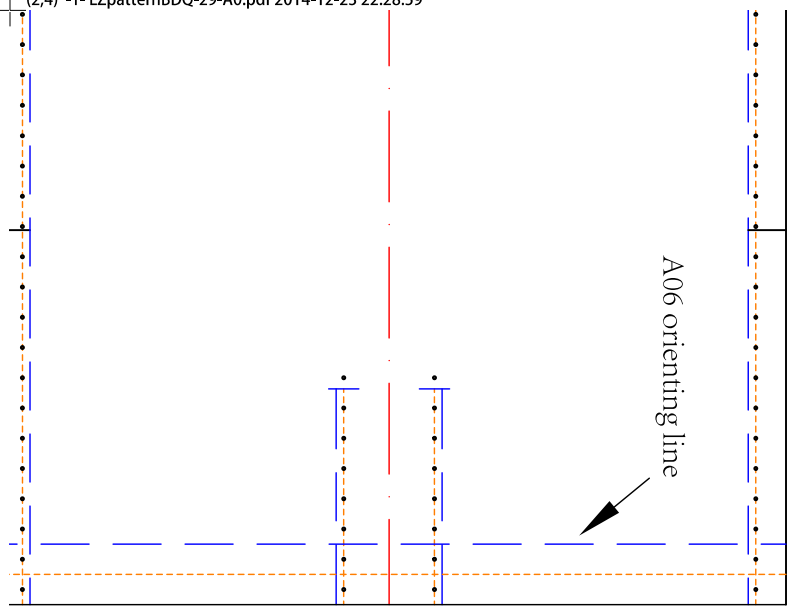

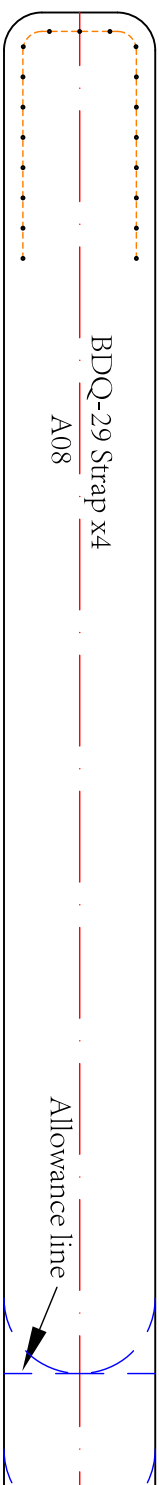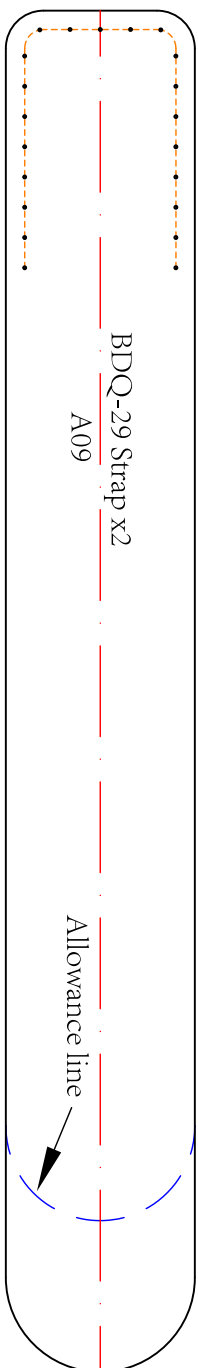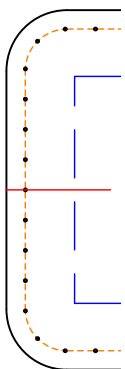

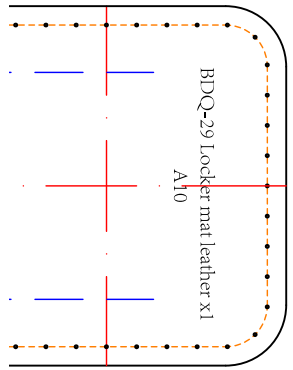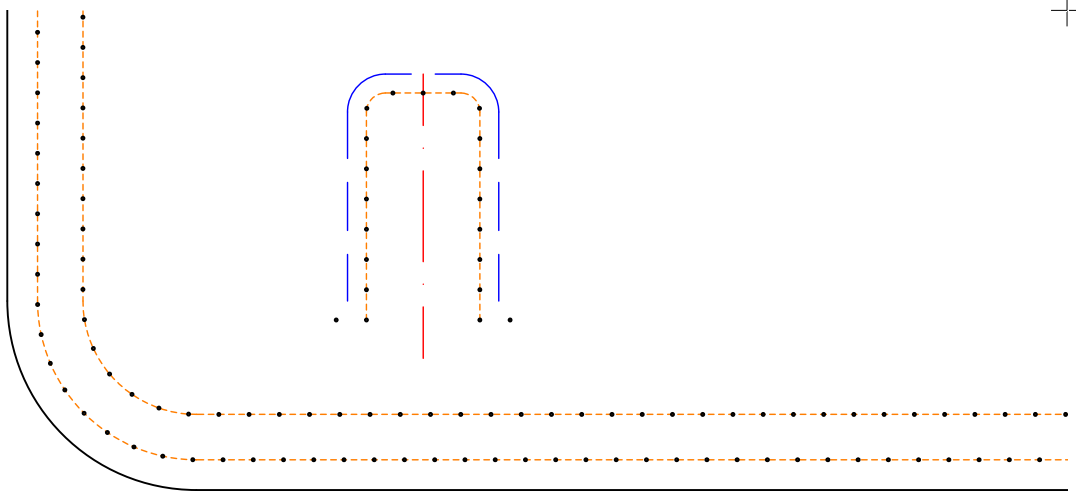

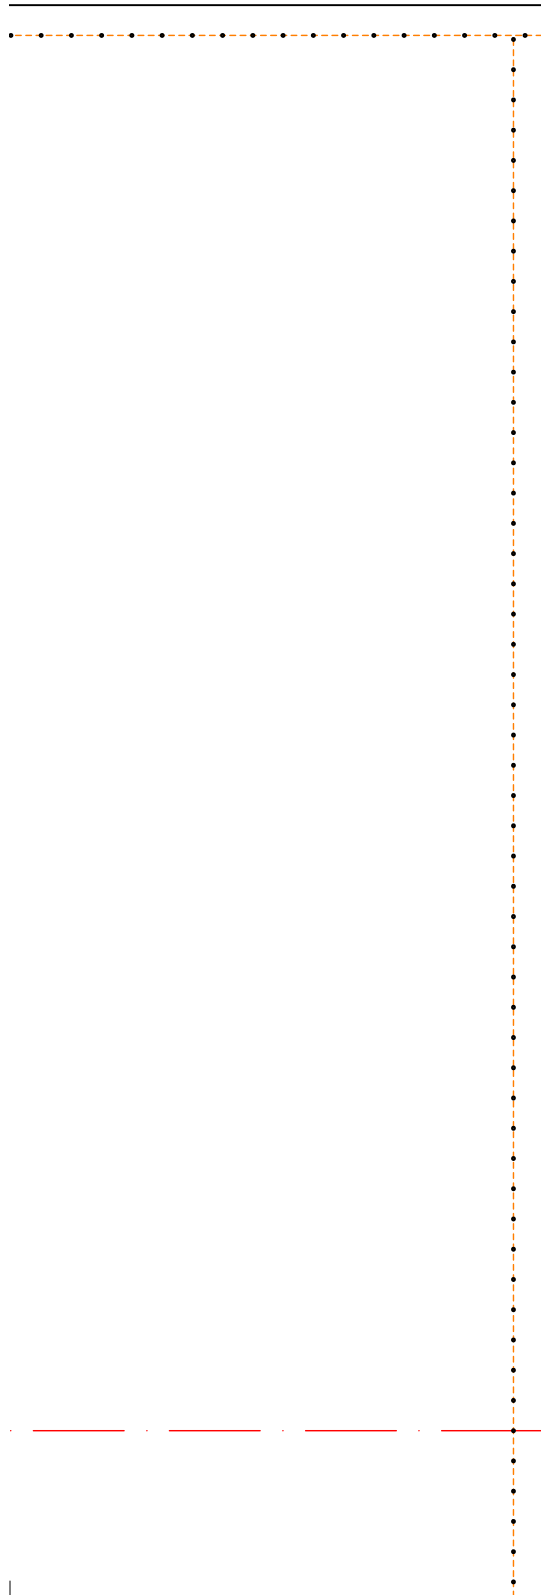
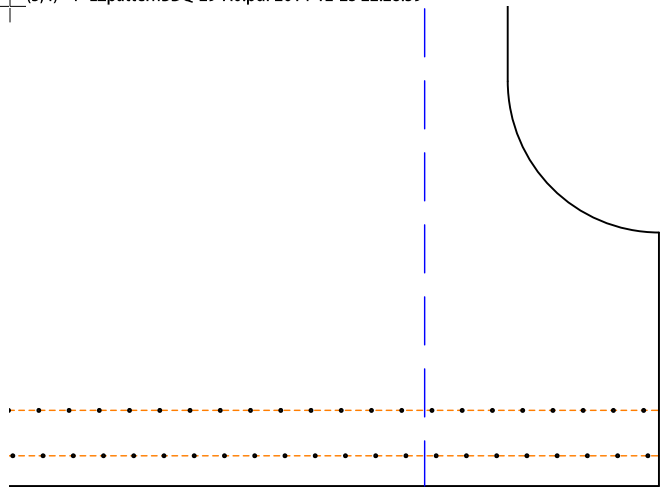







LZpattern

2-29 briefcase

A0 print 1:1

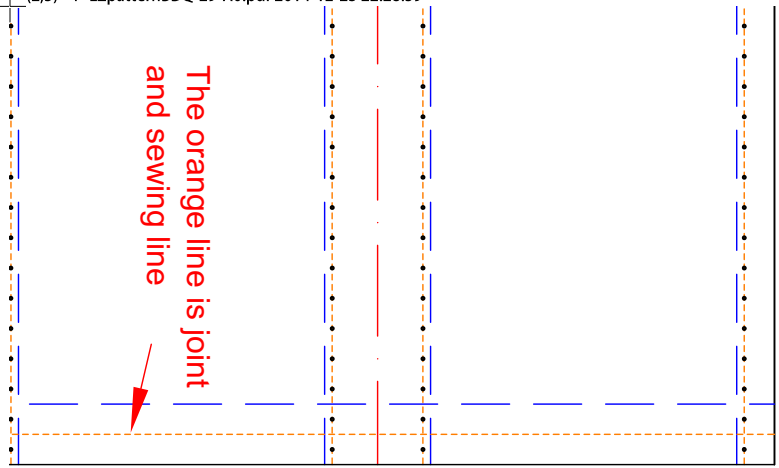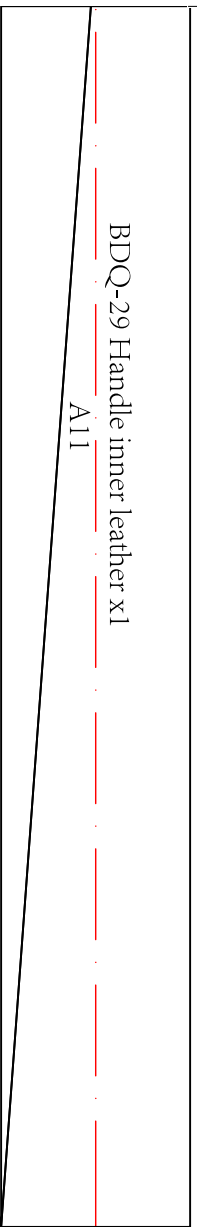


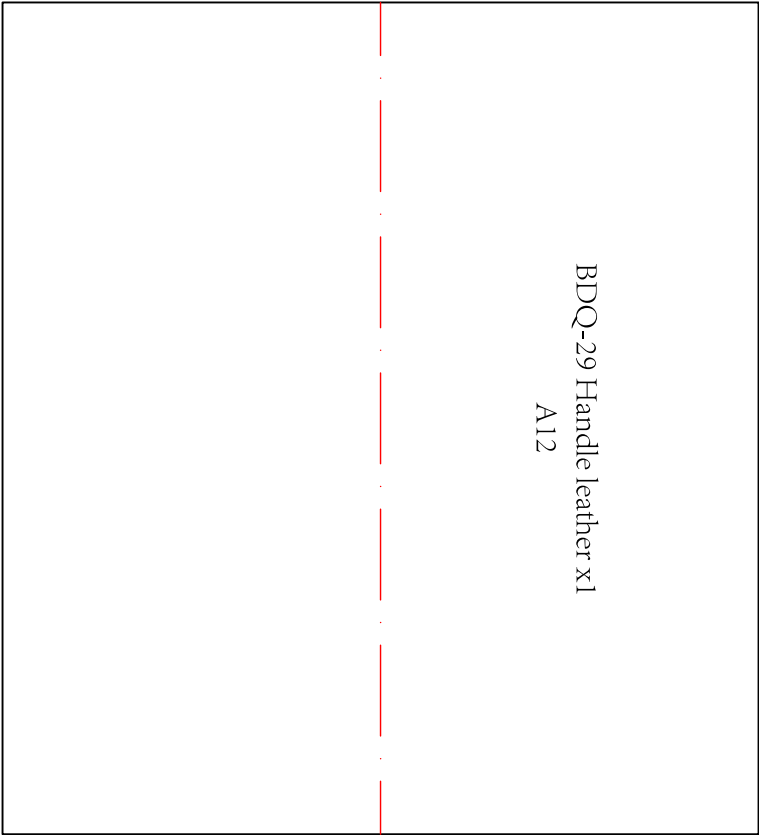

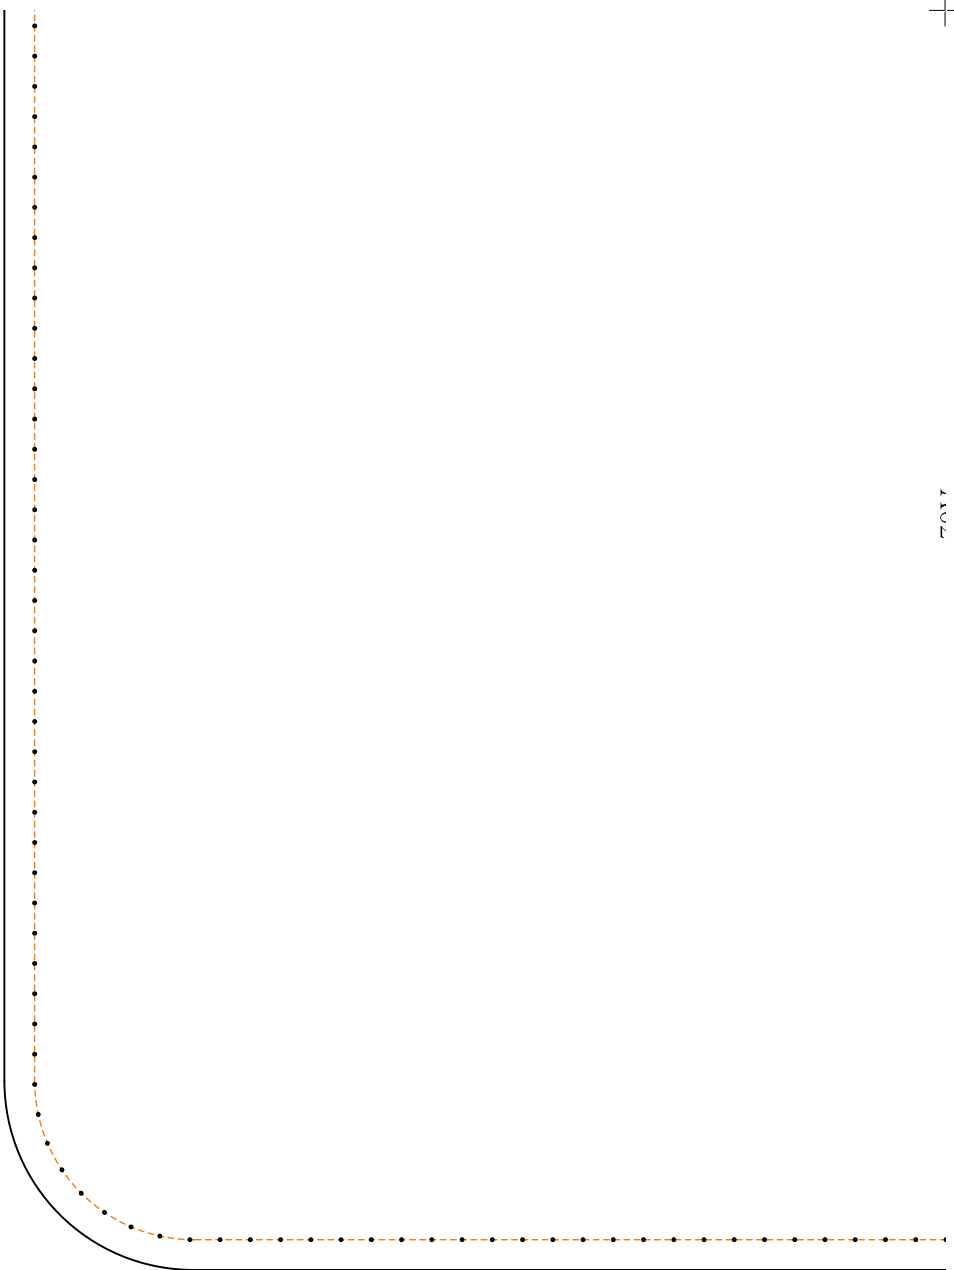

BDQ-29 Locker  
mat leather x1  
A10



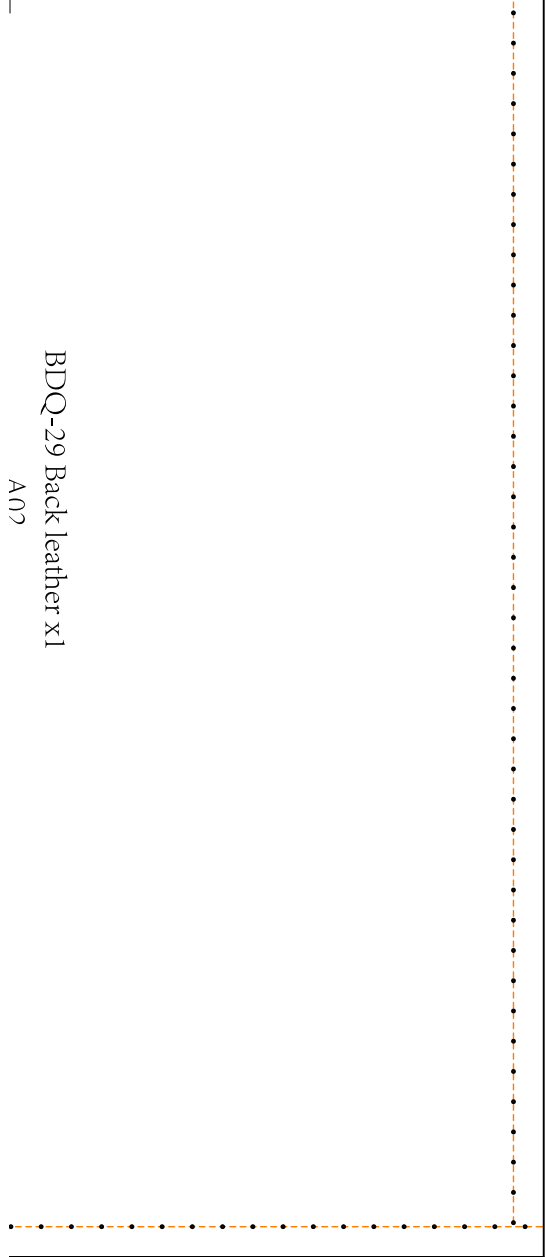

BDQ-29 Back leather x1  
A02