

R.E.D. LEATHER BACKPACK

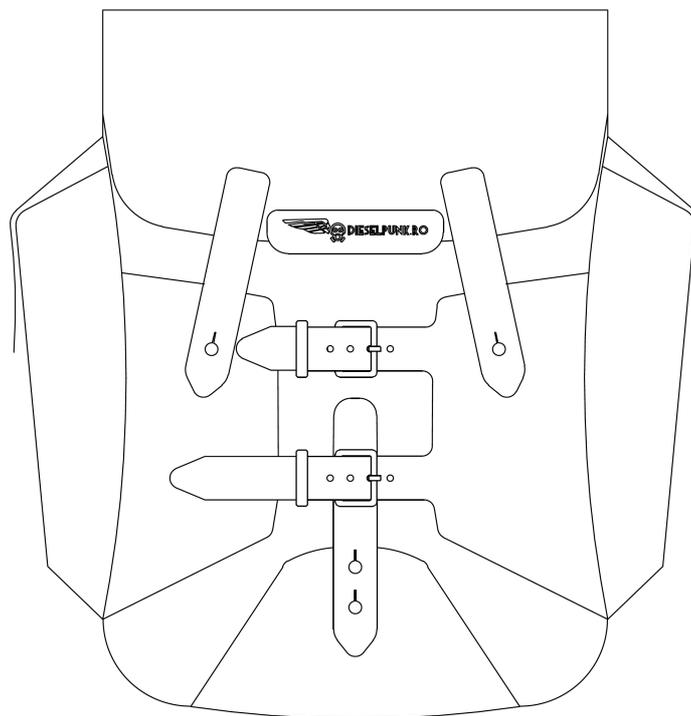

Assembly instructions

Difficulty level: Intermediate
Completion Time 14 - 20 hours

NECESSARY TOOLS

B&W Printer




Scissors or a cutter



Hole Puncher (We recommend 1.8 - 2 mm sized holes for this build)



Approx 13 square feet of leather. (We recommend 6oz leather for this build)

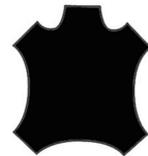


Thread and needles (We recommend 1.2 mm waxed thread for this build)



2 x rectangular metal loops, 4 x 20 mm buckles, 4 x Sam Browne buttons and a few rivets

PRINTING THE PATTERN


Set up your paper size to A4 and choose actual size in the printer settings

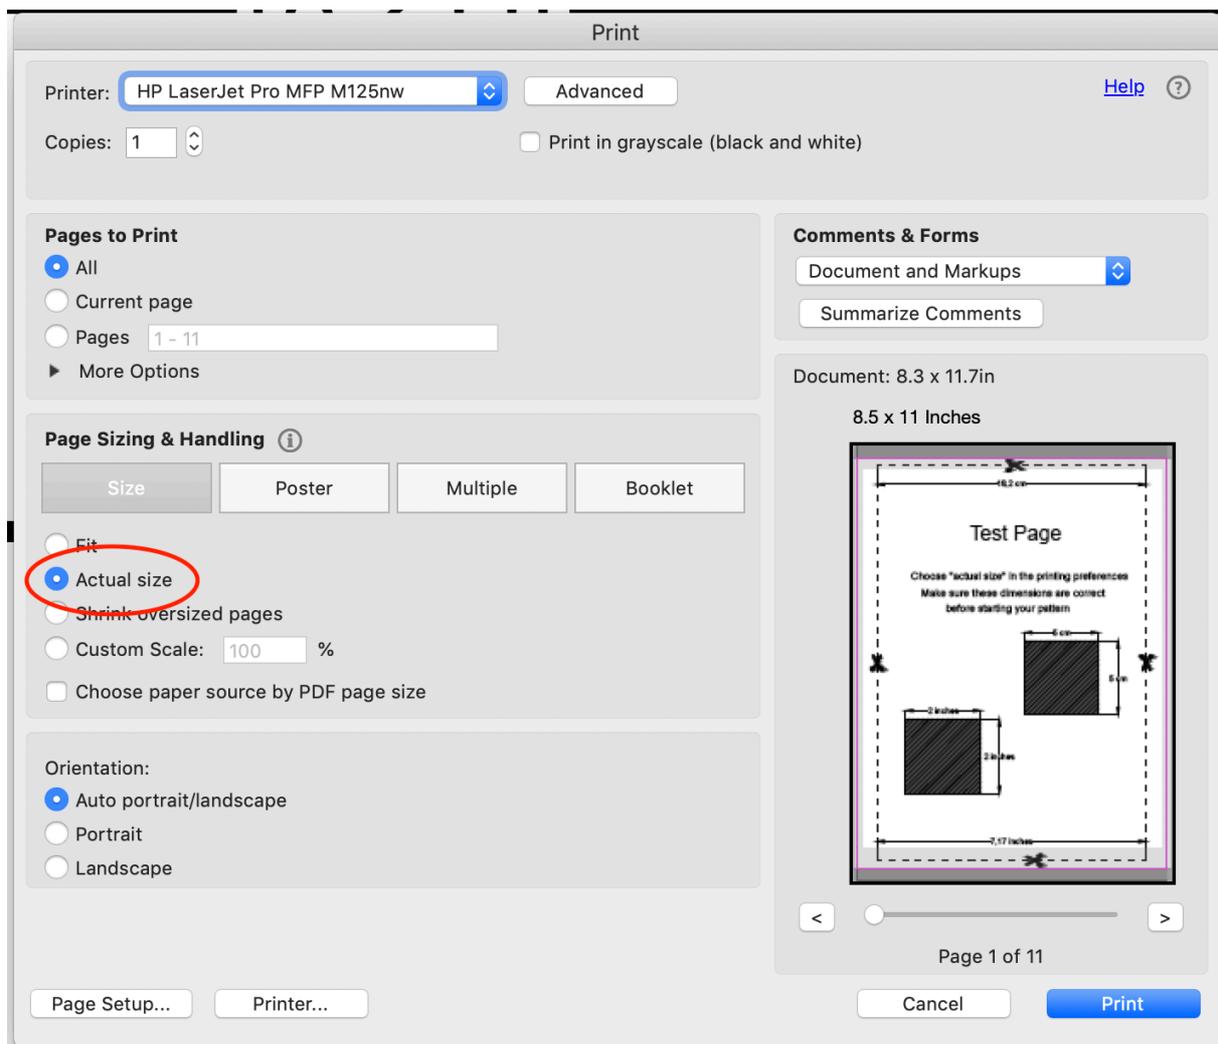

Alternatively you can use "letter" format which is approximately the same size and will not impact the size of the product significantly

Print all the patterns.

The first page is a measuring reference and you can use a ruler to make sure it matches the square. That means the rest of the pattern will print on the right size

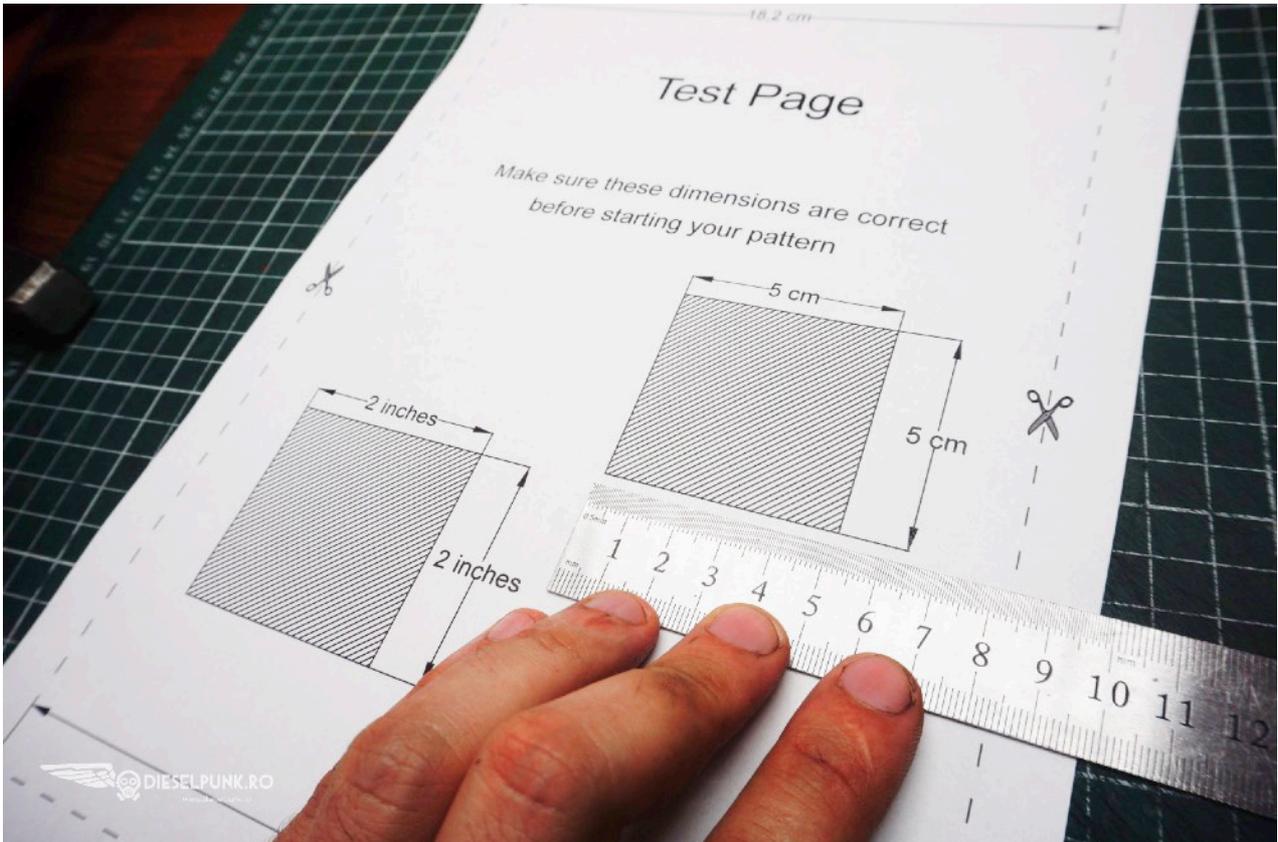

Take note that some of the larger parts are spread over two or even four pages.

Use the second page of the pattern as an assembly guide

Cut out the edges and use only the inside of the page

